


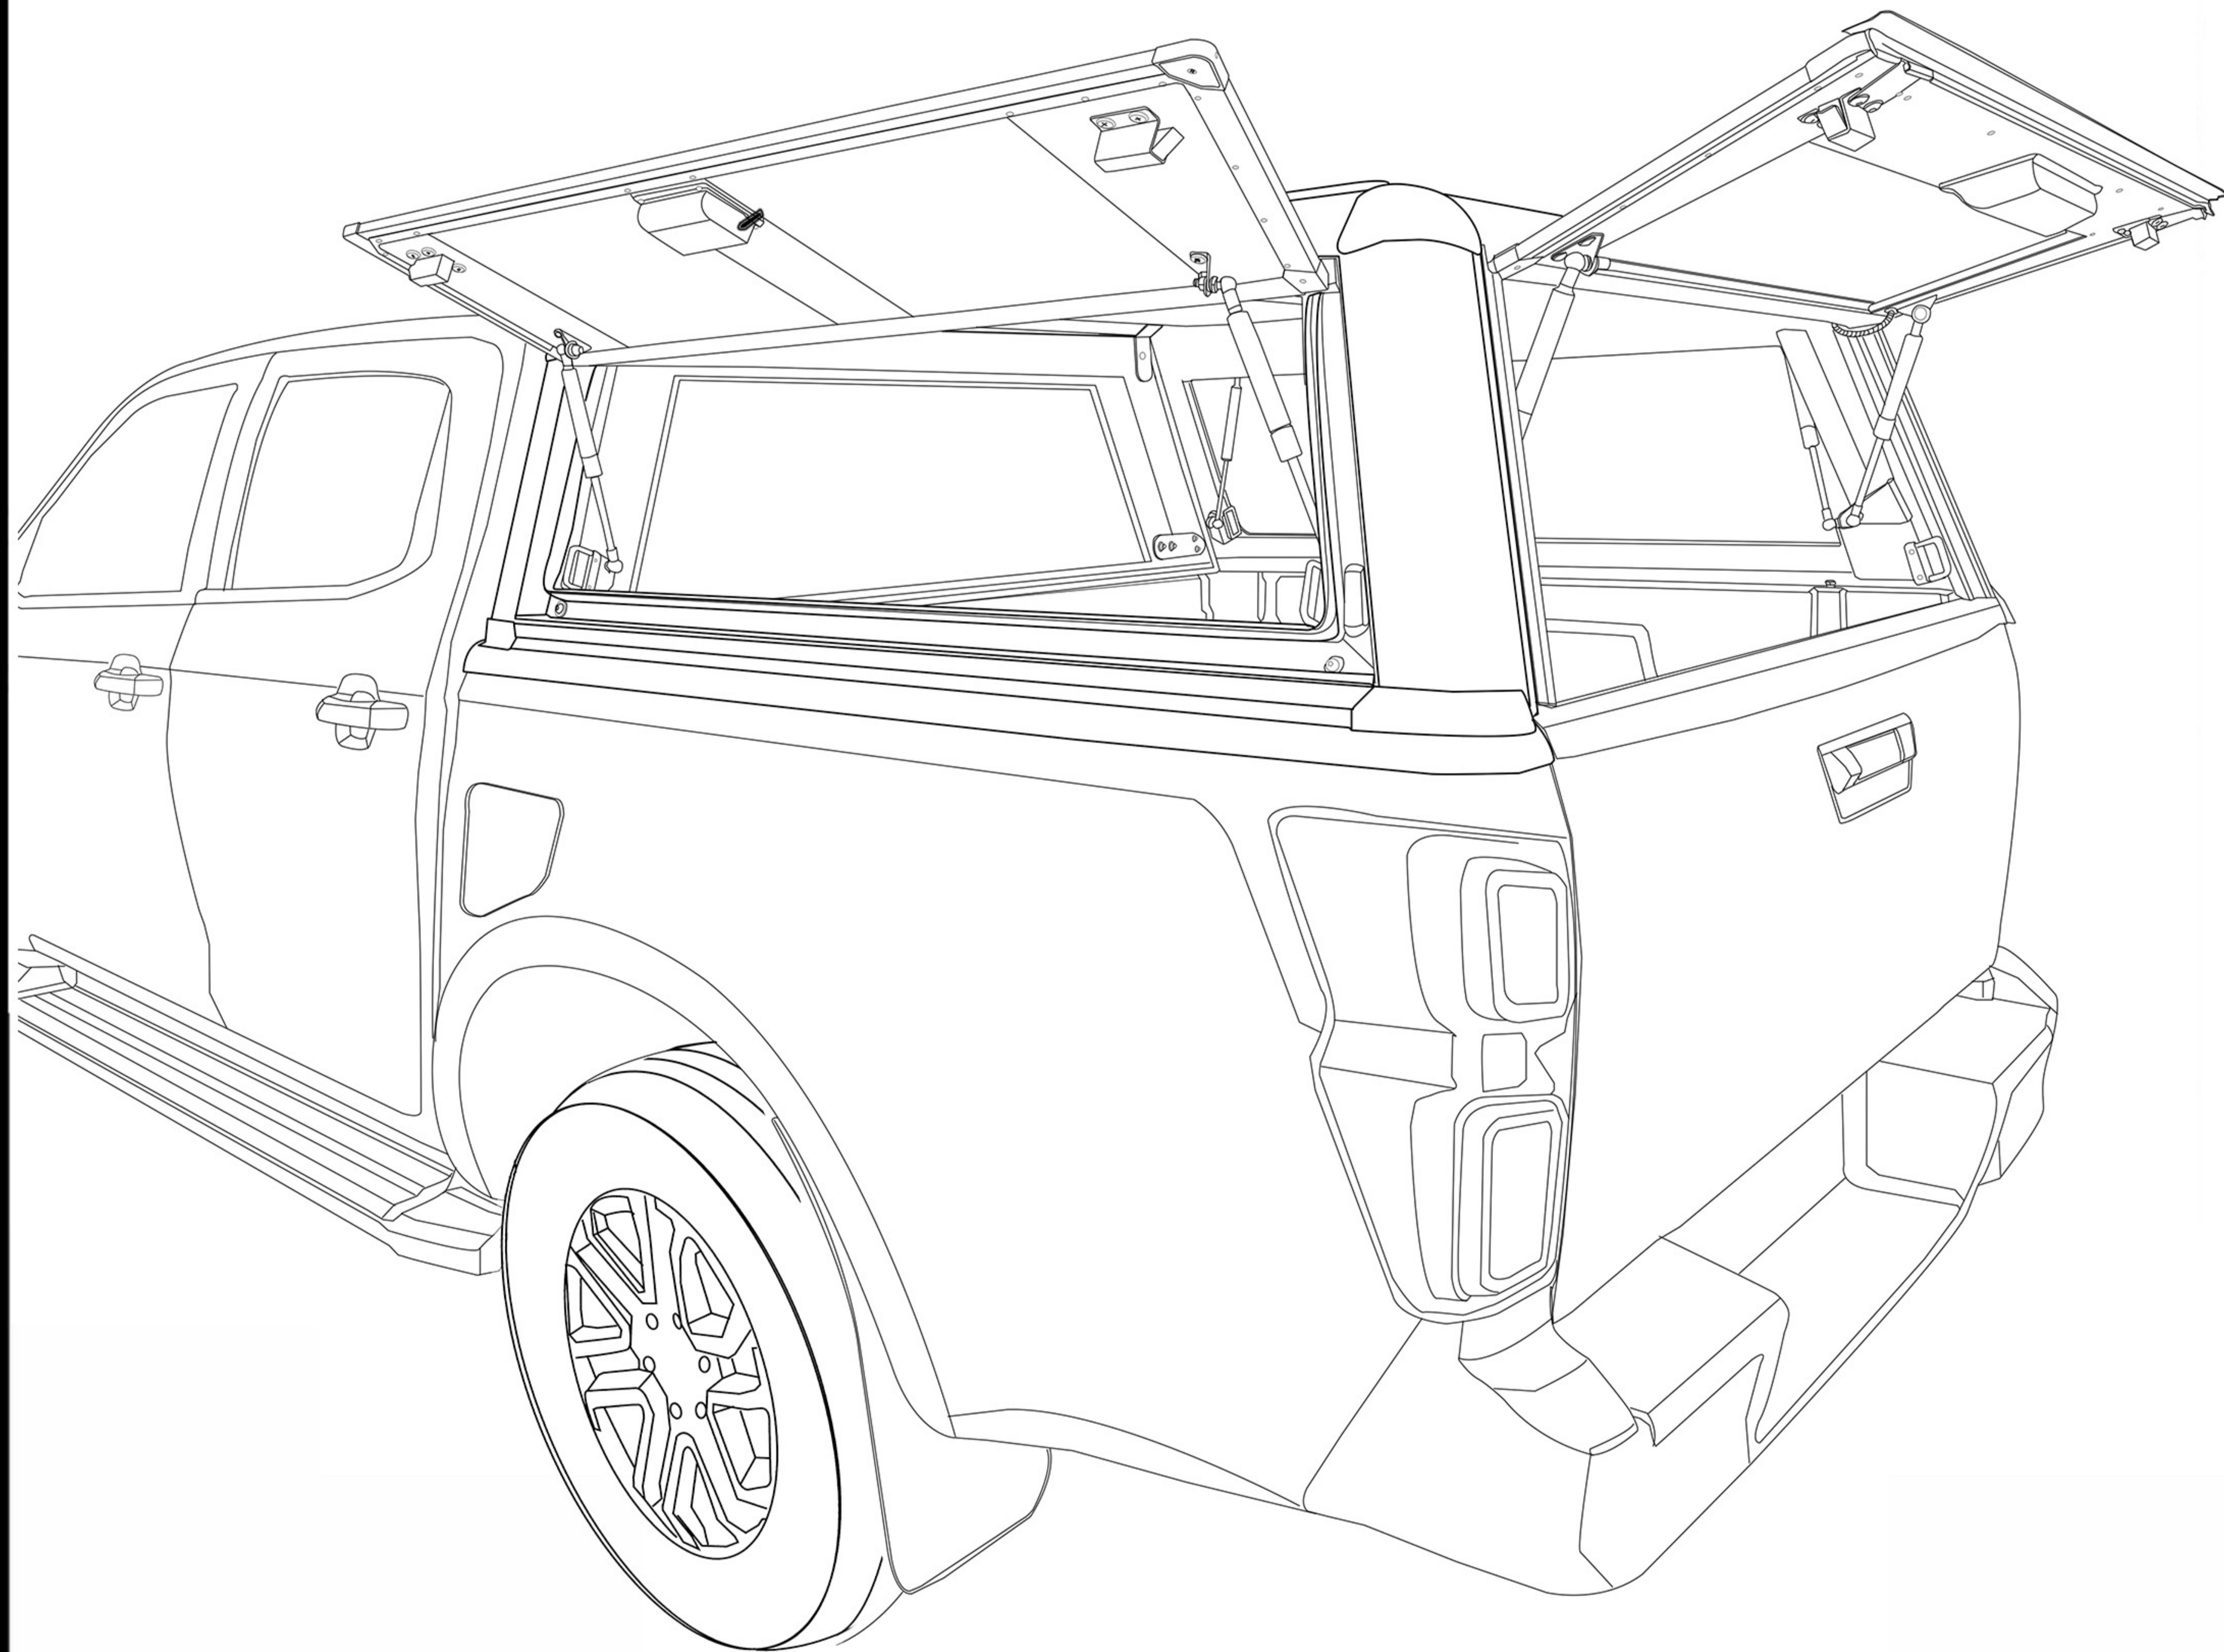

INSTALLATION


FORD RANGER 2022+ (NEXT-GEN)




Part list

1st carton

roof panel

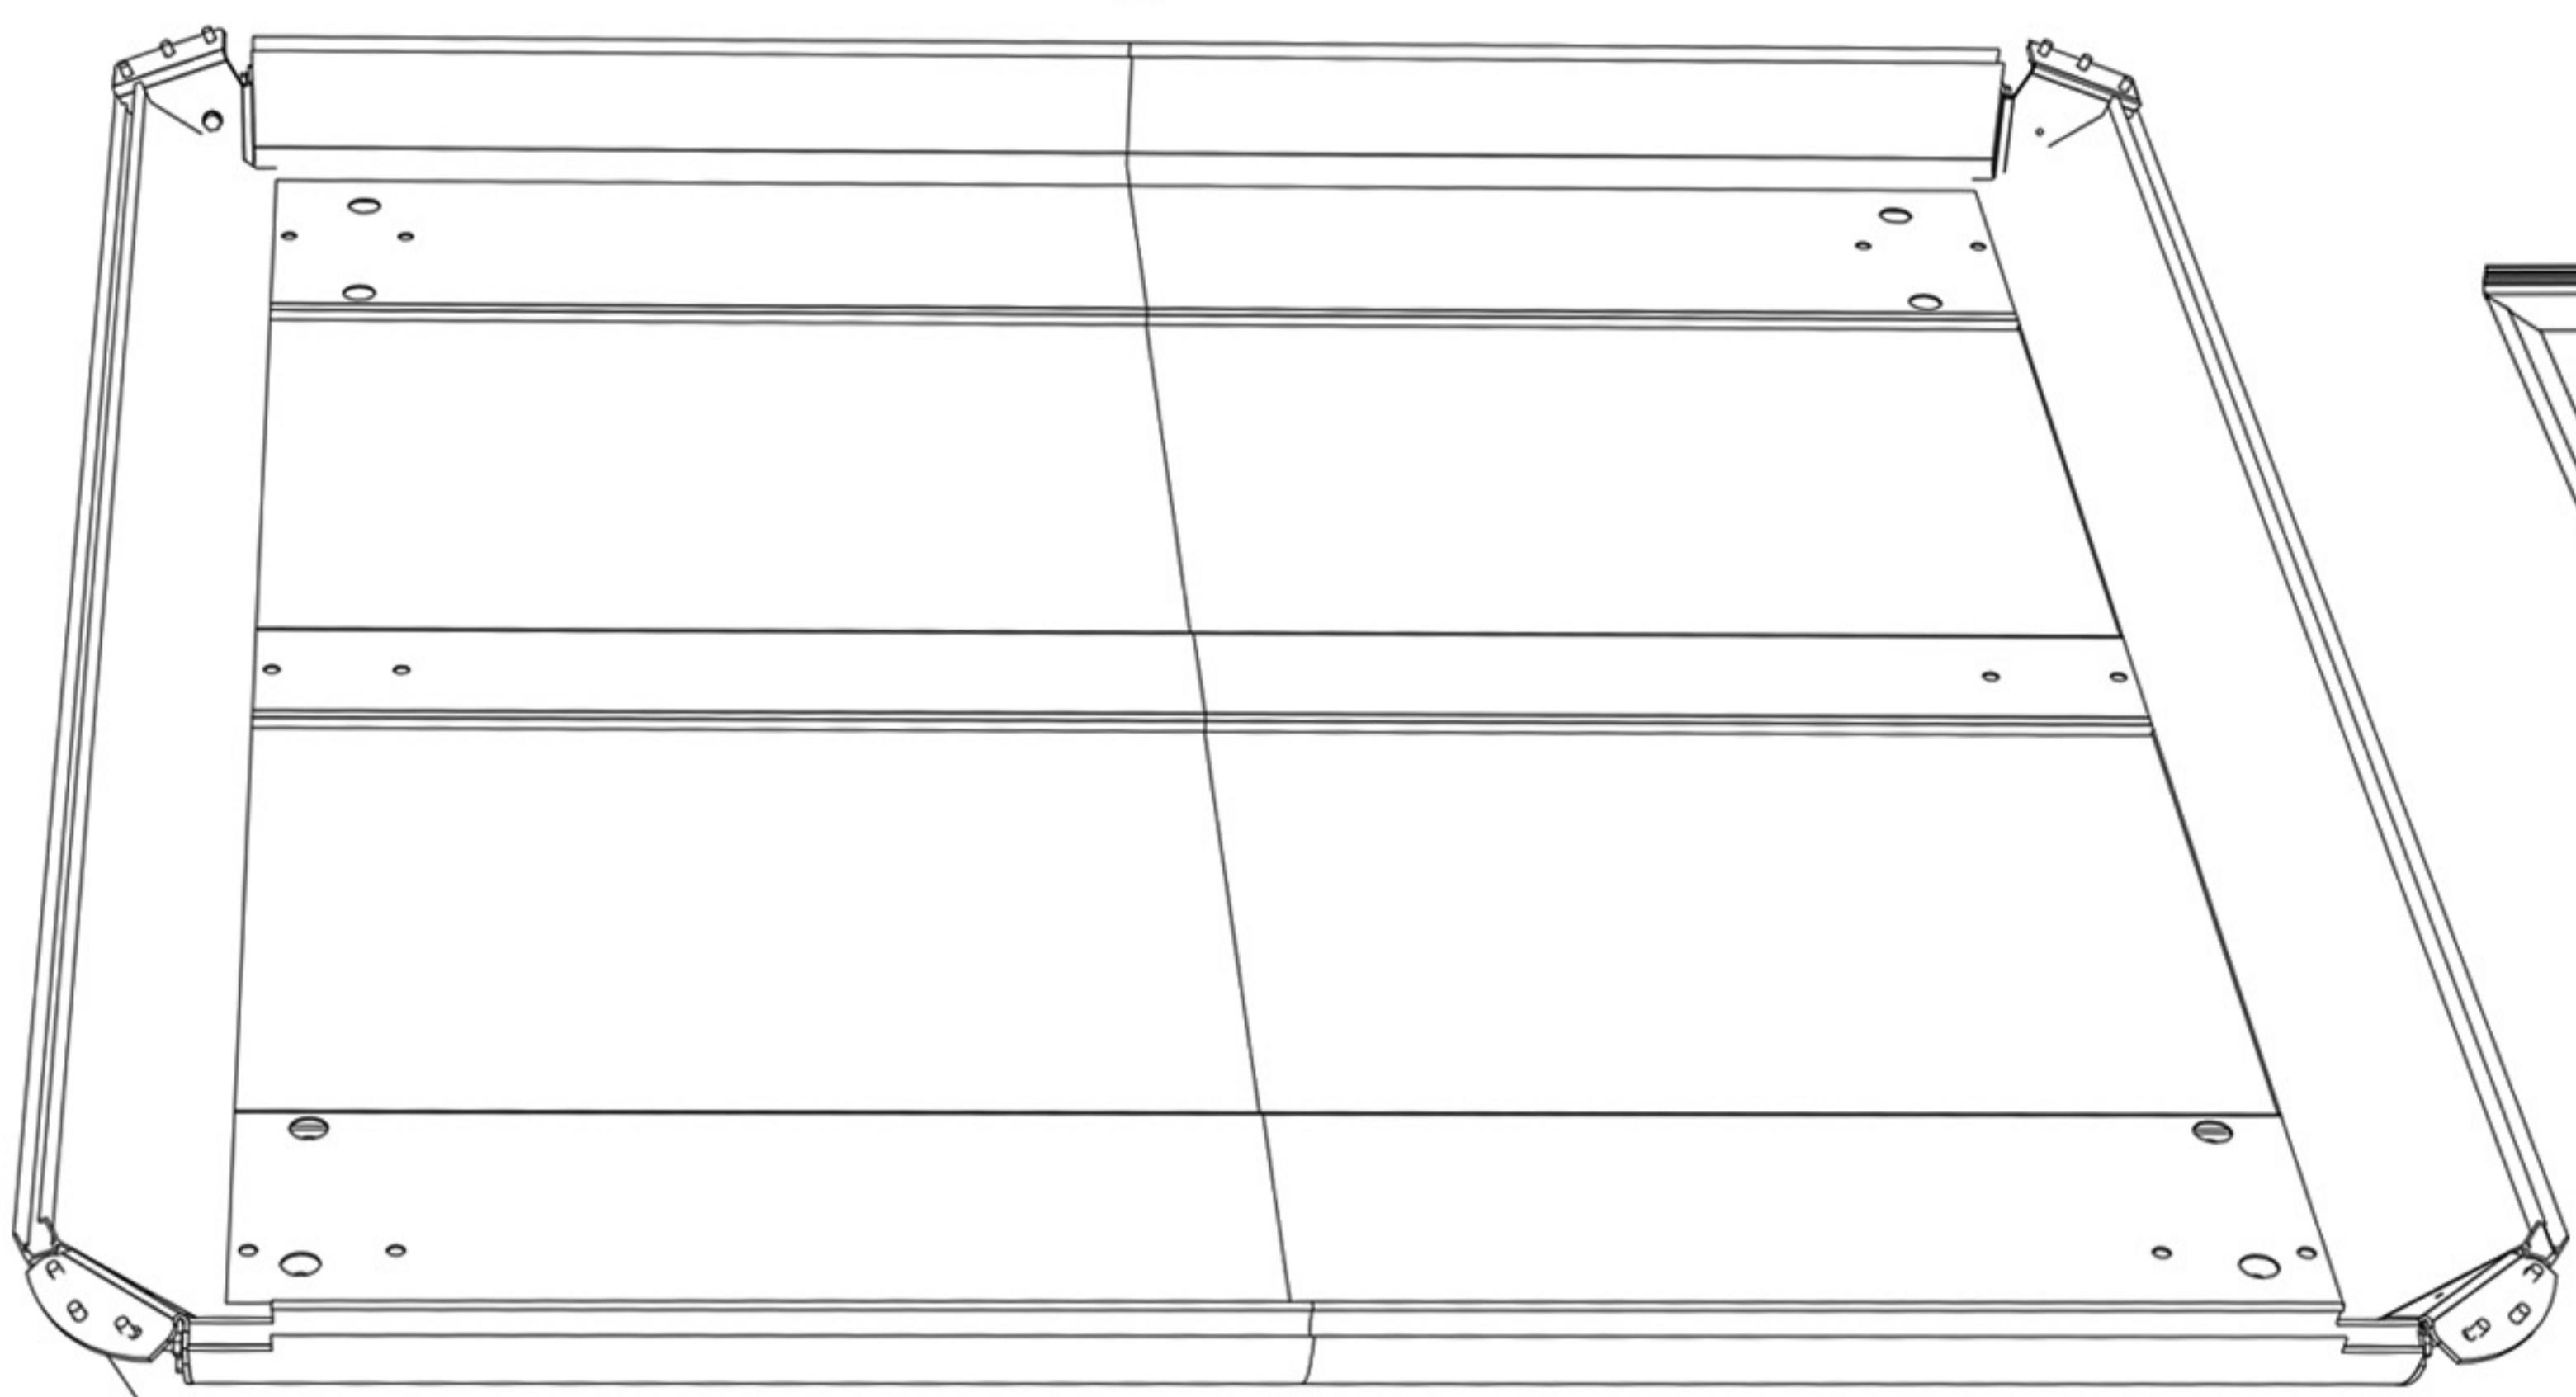


front panel

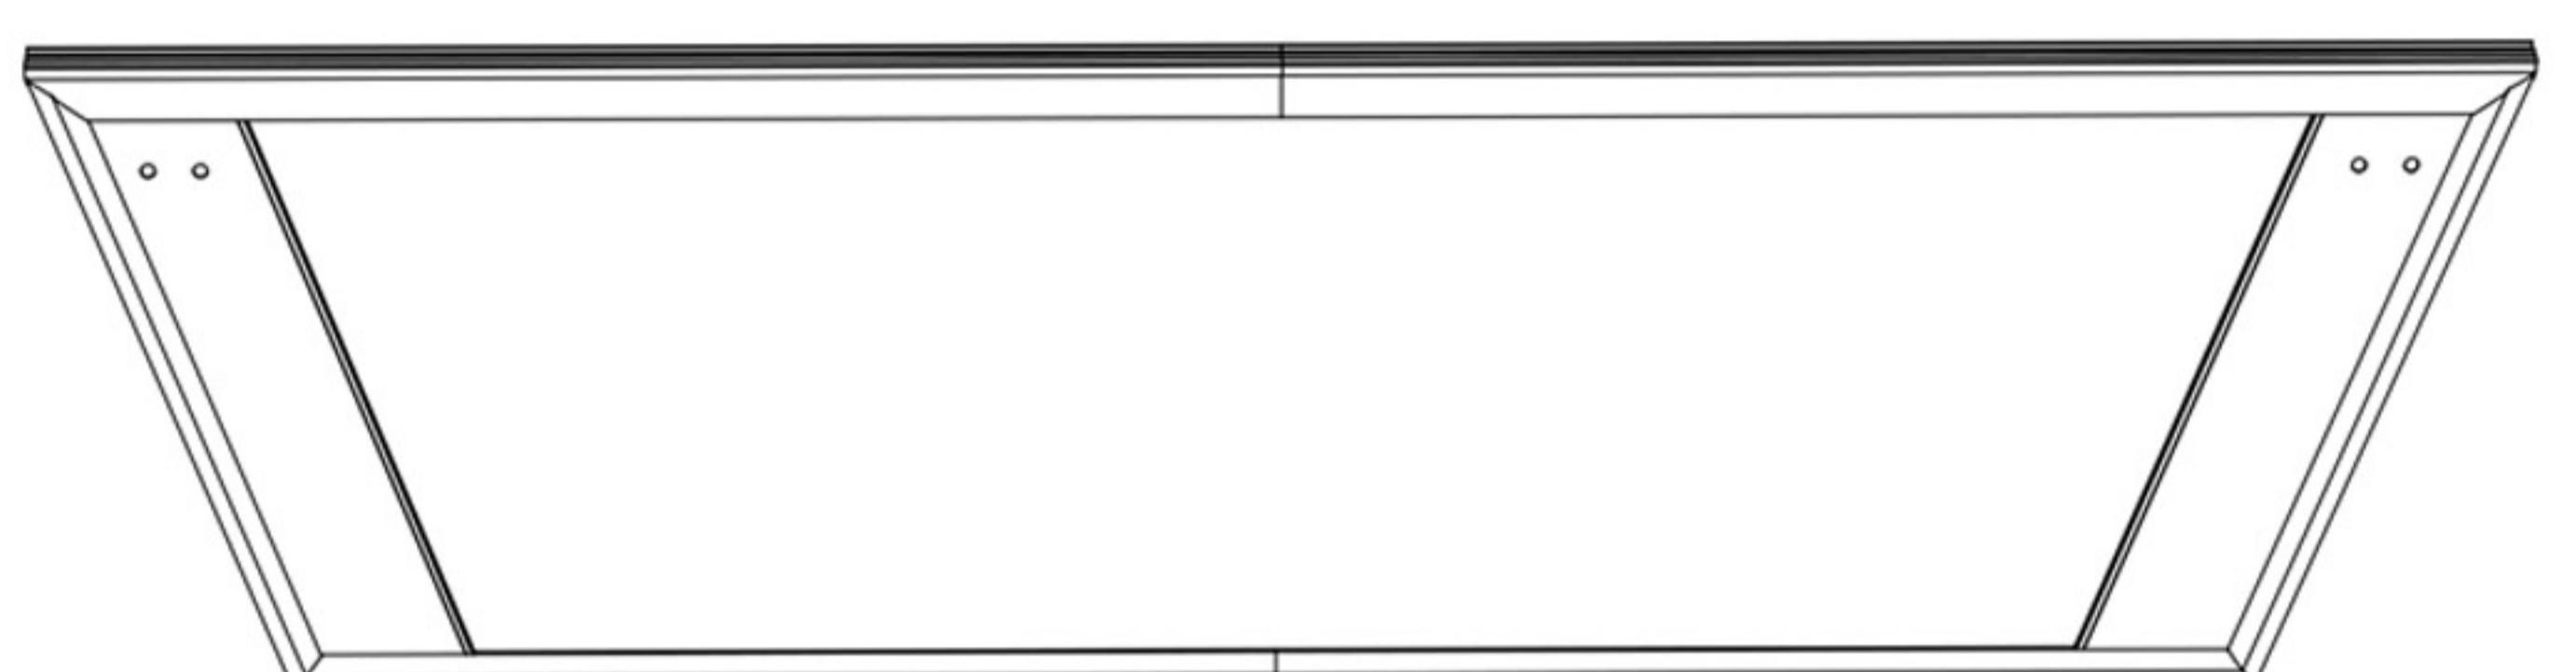


2nd carton


side panel L,R

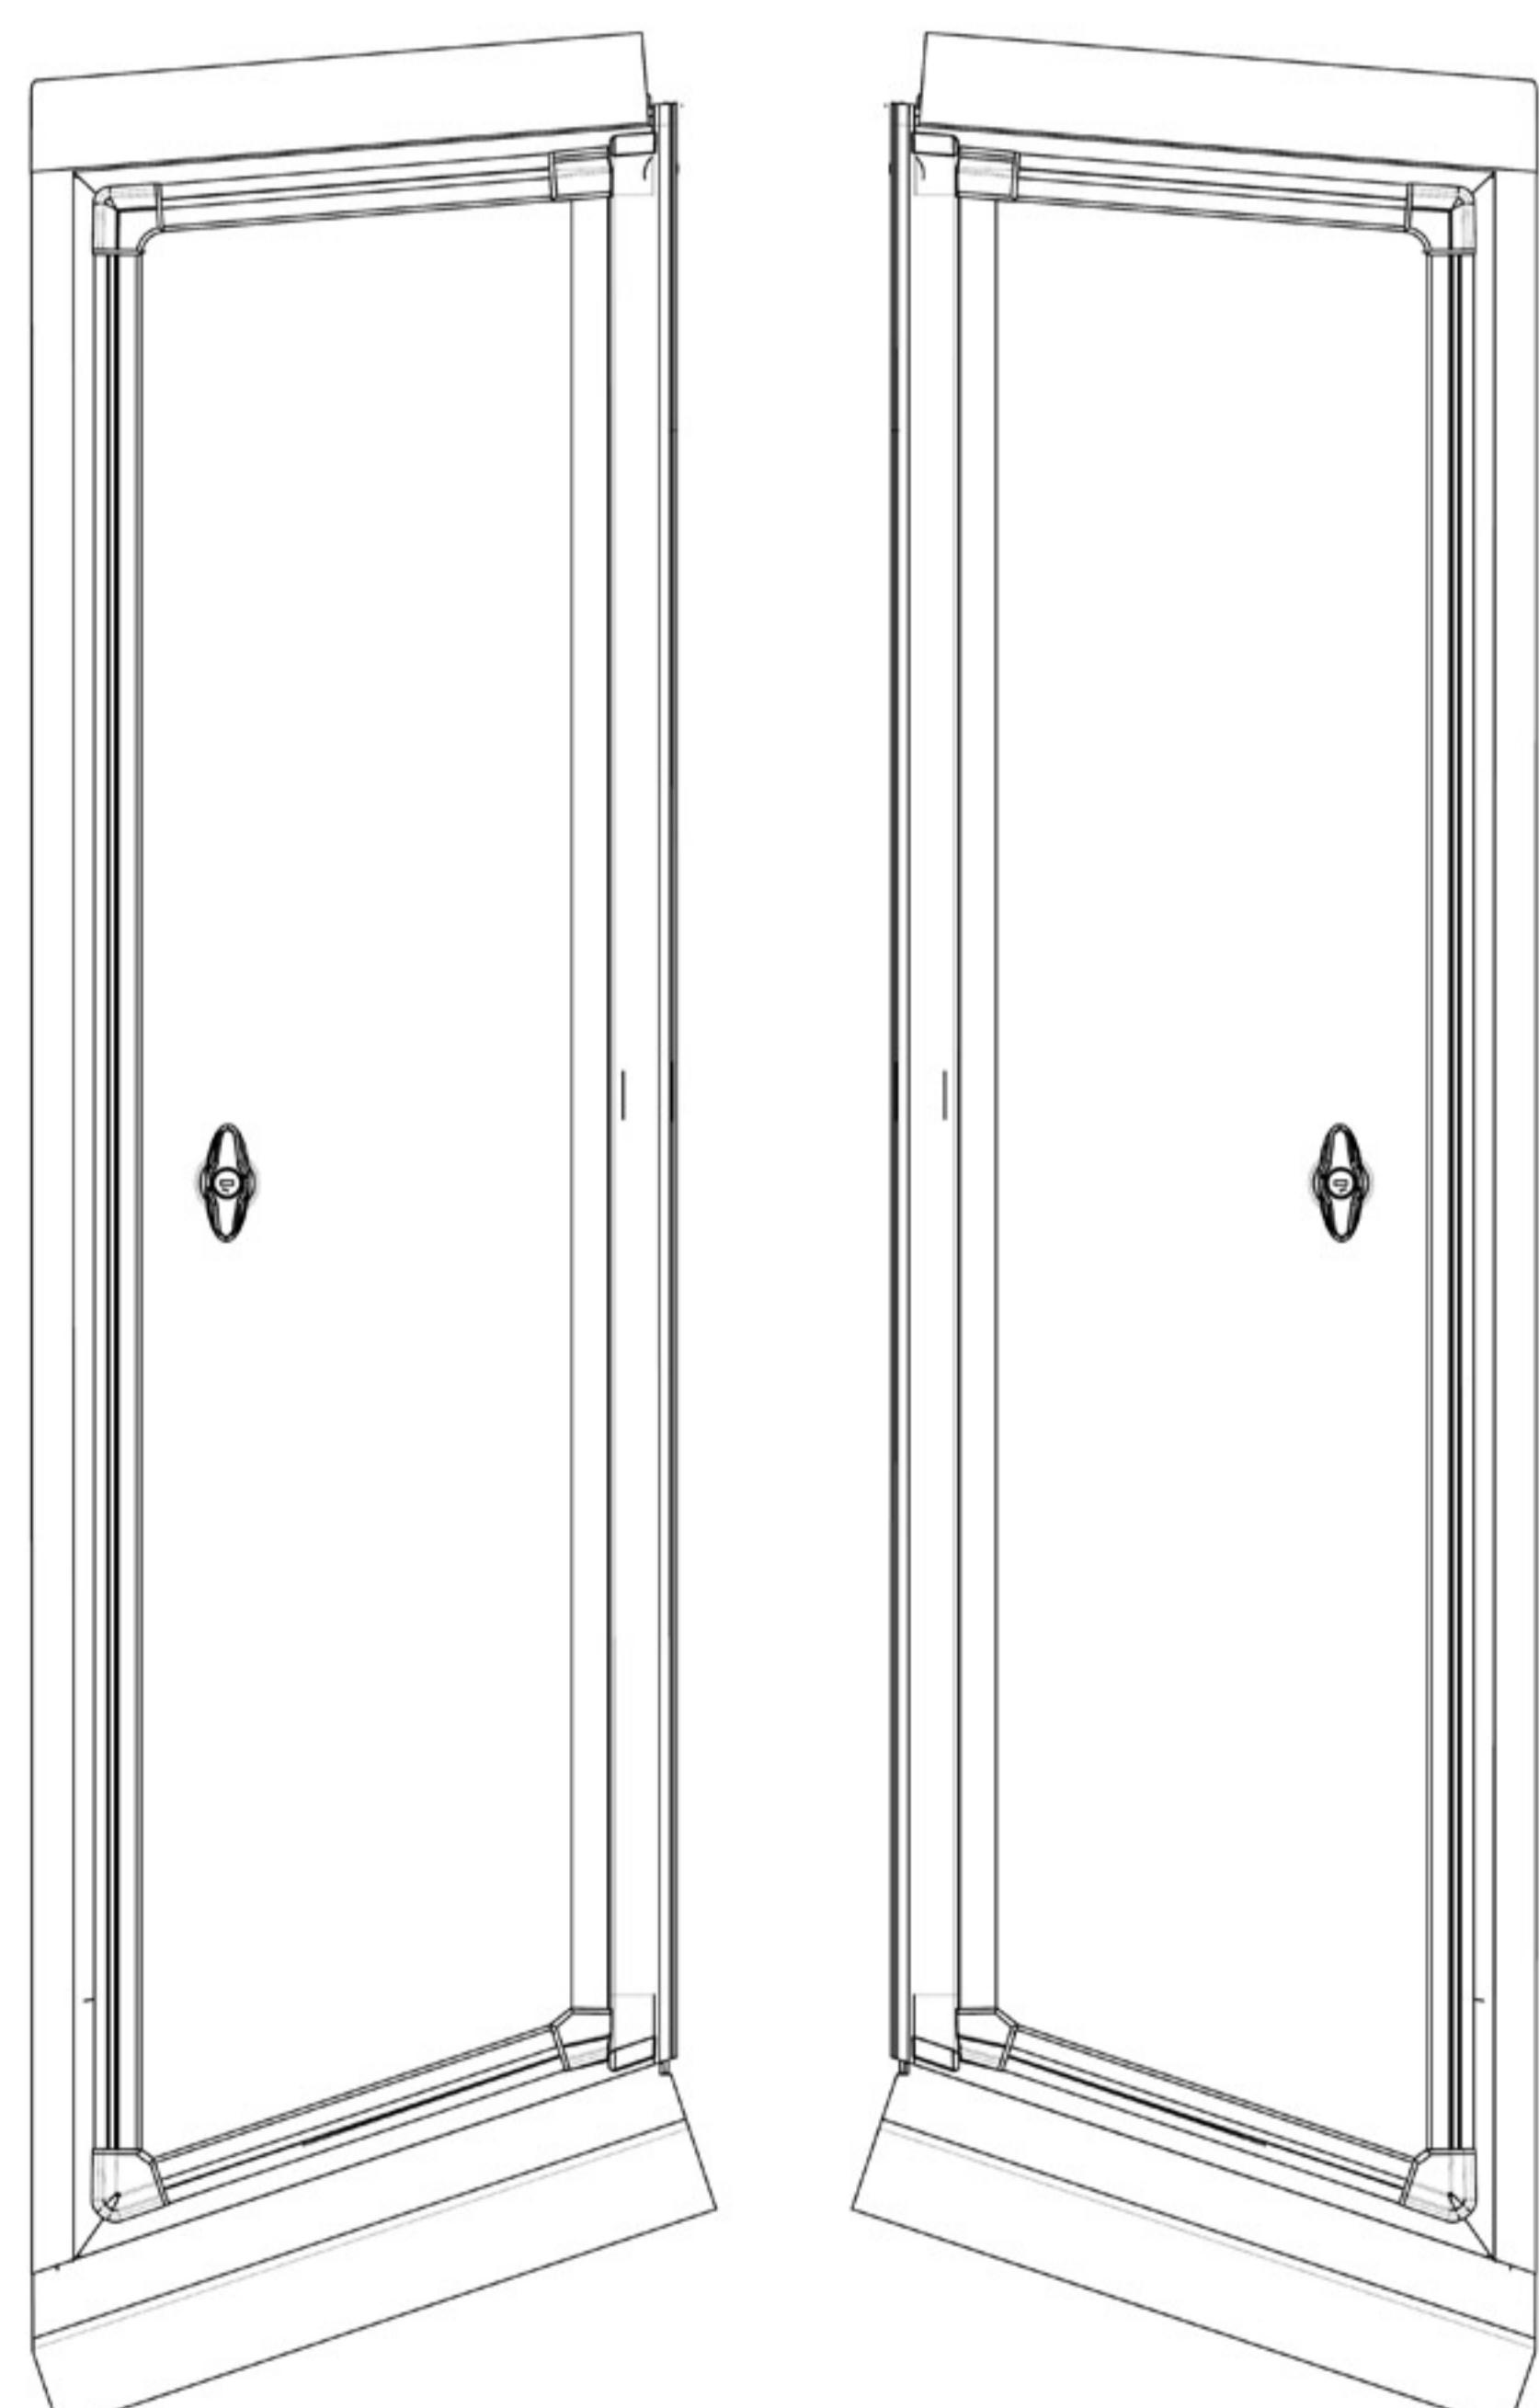



kit box

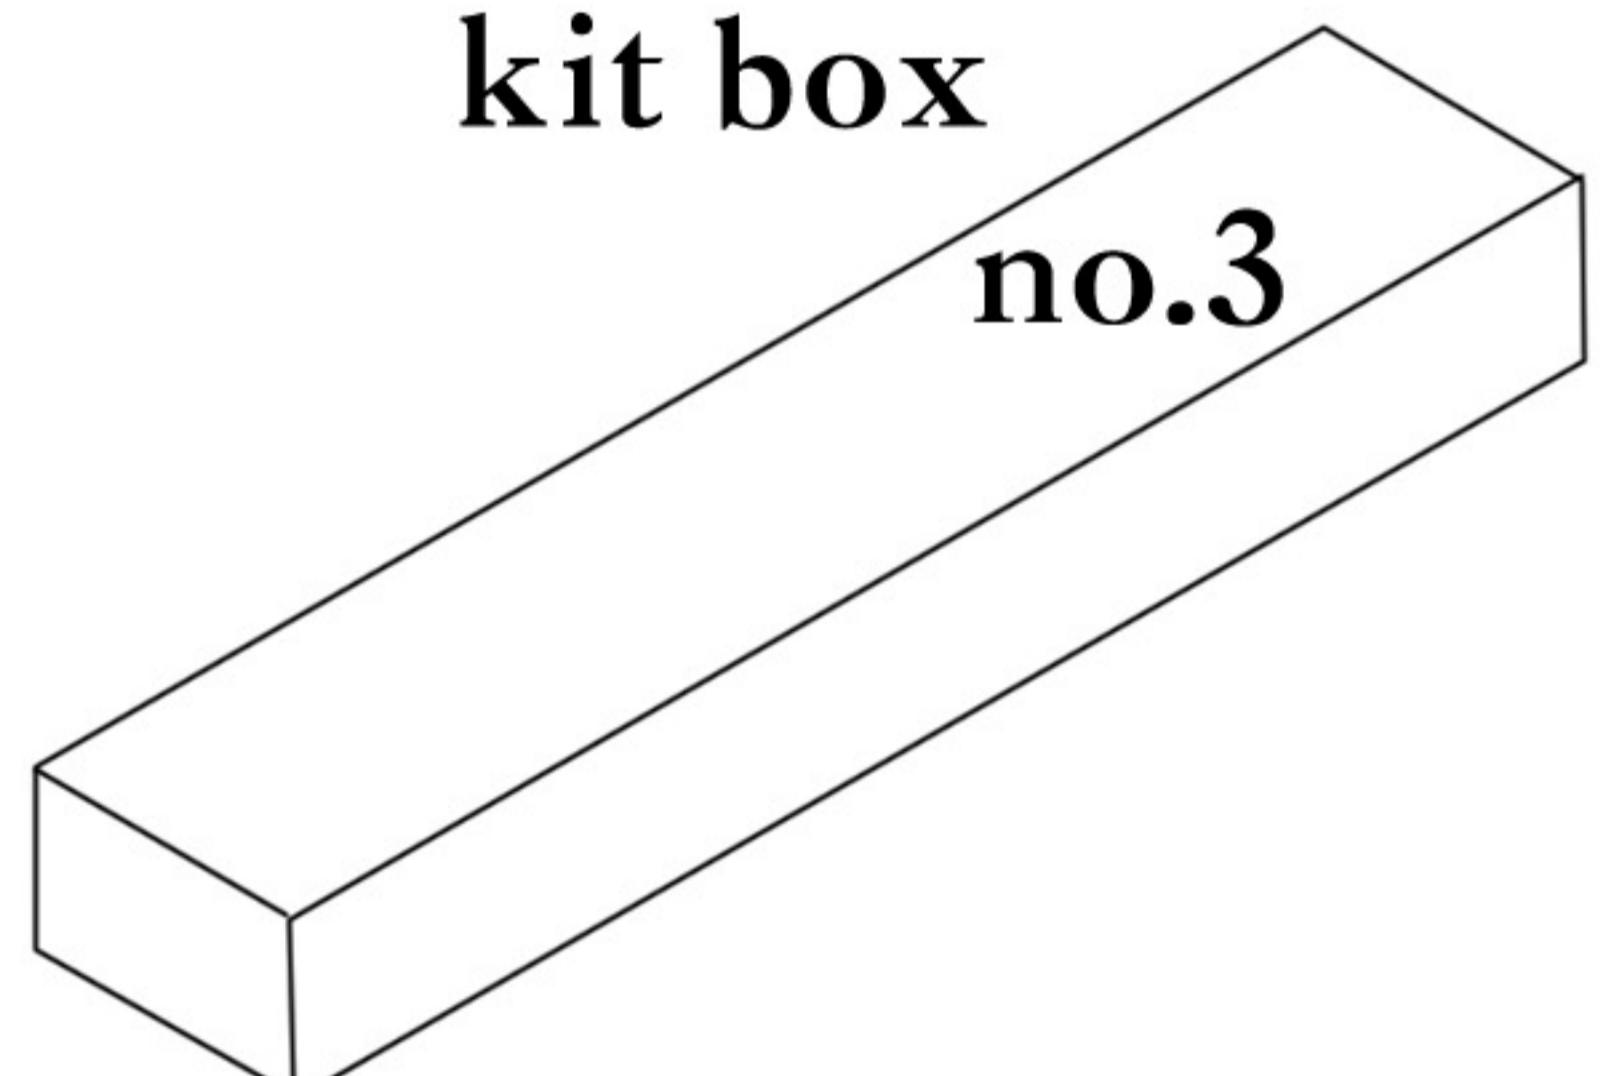


rear door

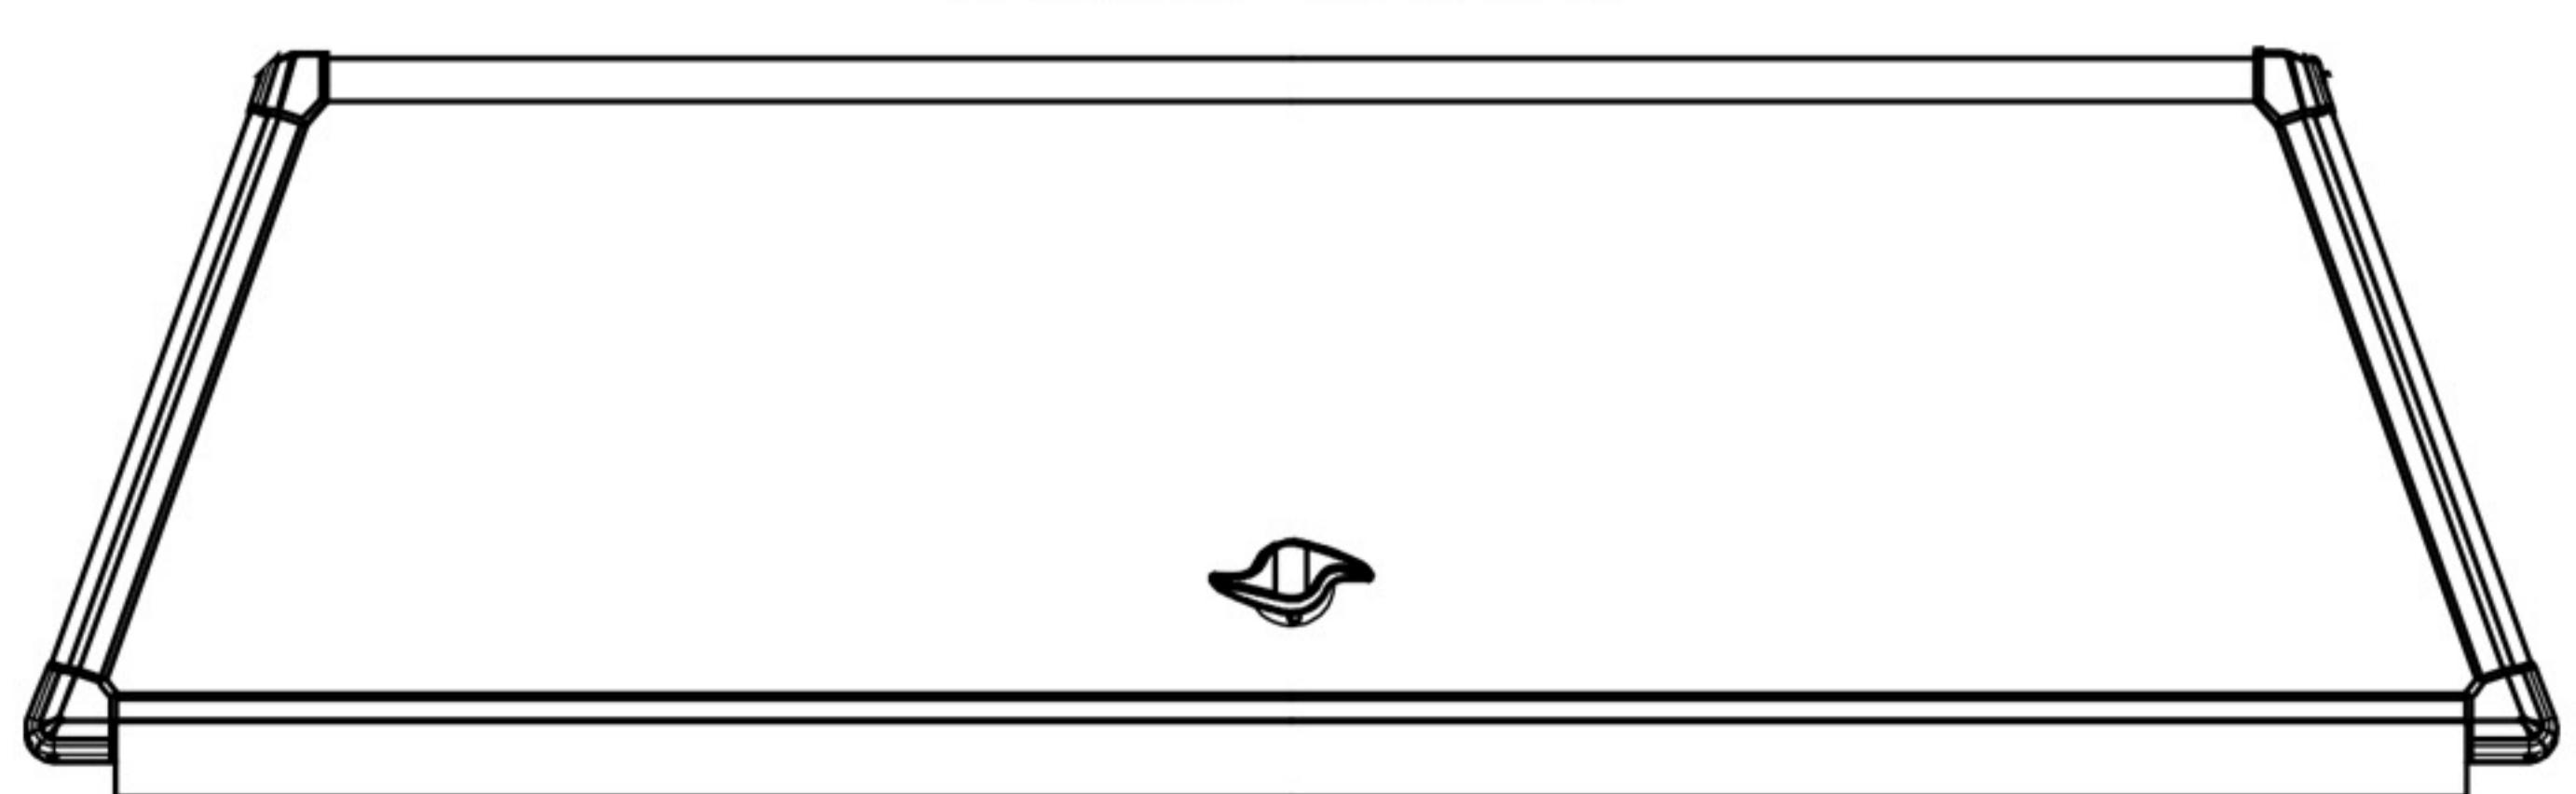


kit box

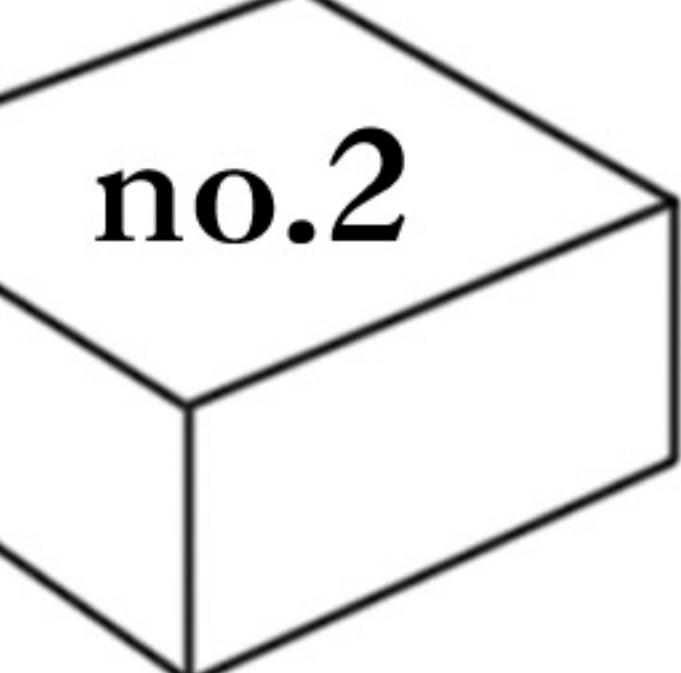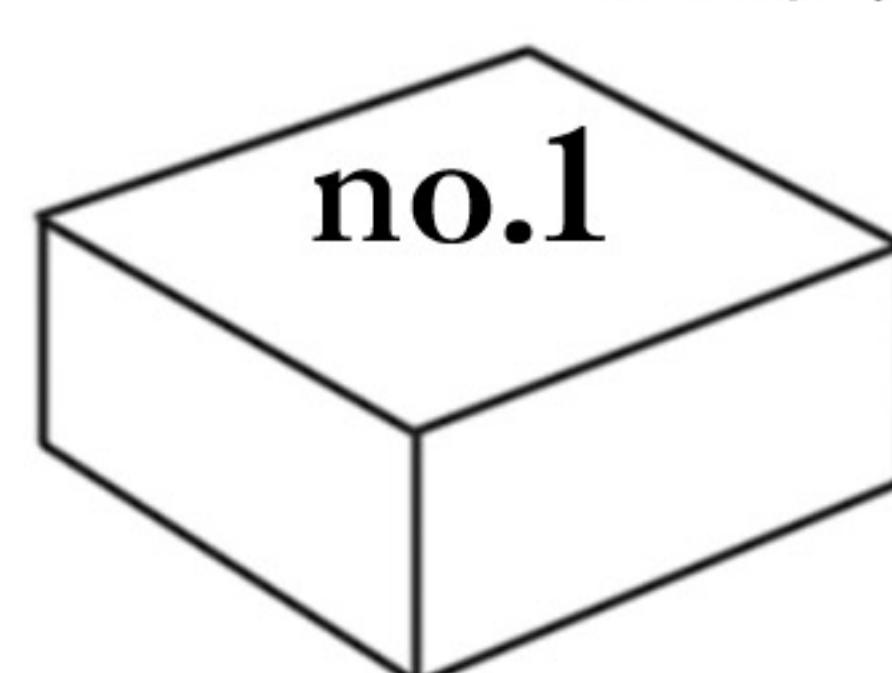


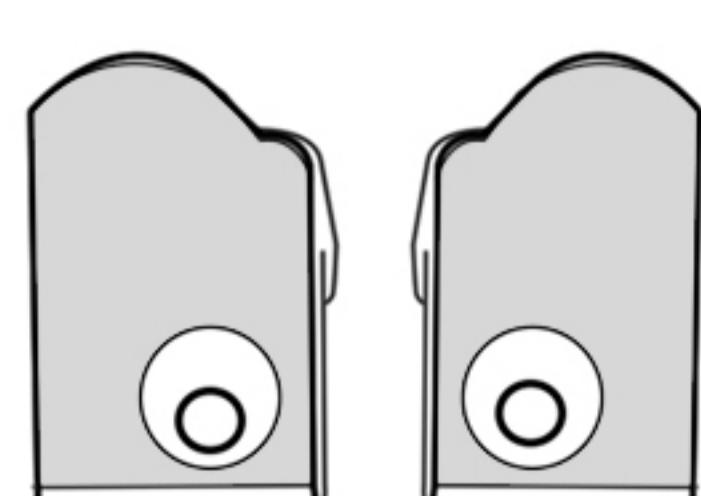KIT BOX NO.1**1. Rear door kit**
page 3


- Flat Head Tapping Screw 6x1/2 = 2 pcs.
- Pan Head Tapping Screw 6x3/8 = 3 pcs.

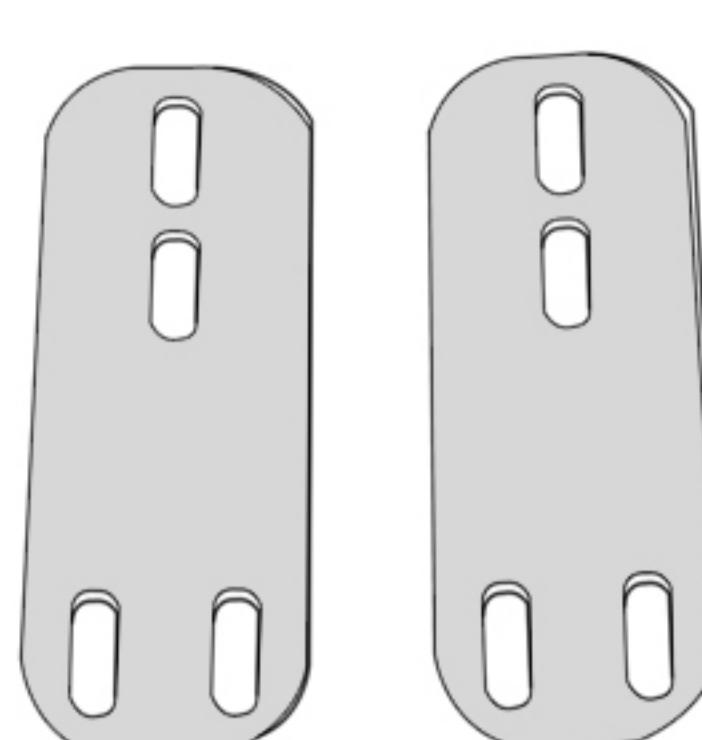2. Front panel bracket
page 5

- Socket pan head bolt M8x12 = 4 set
- Hex bolt M6x15 = 4 set

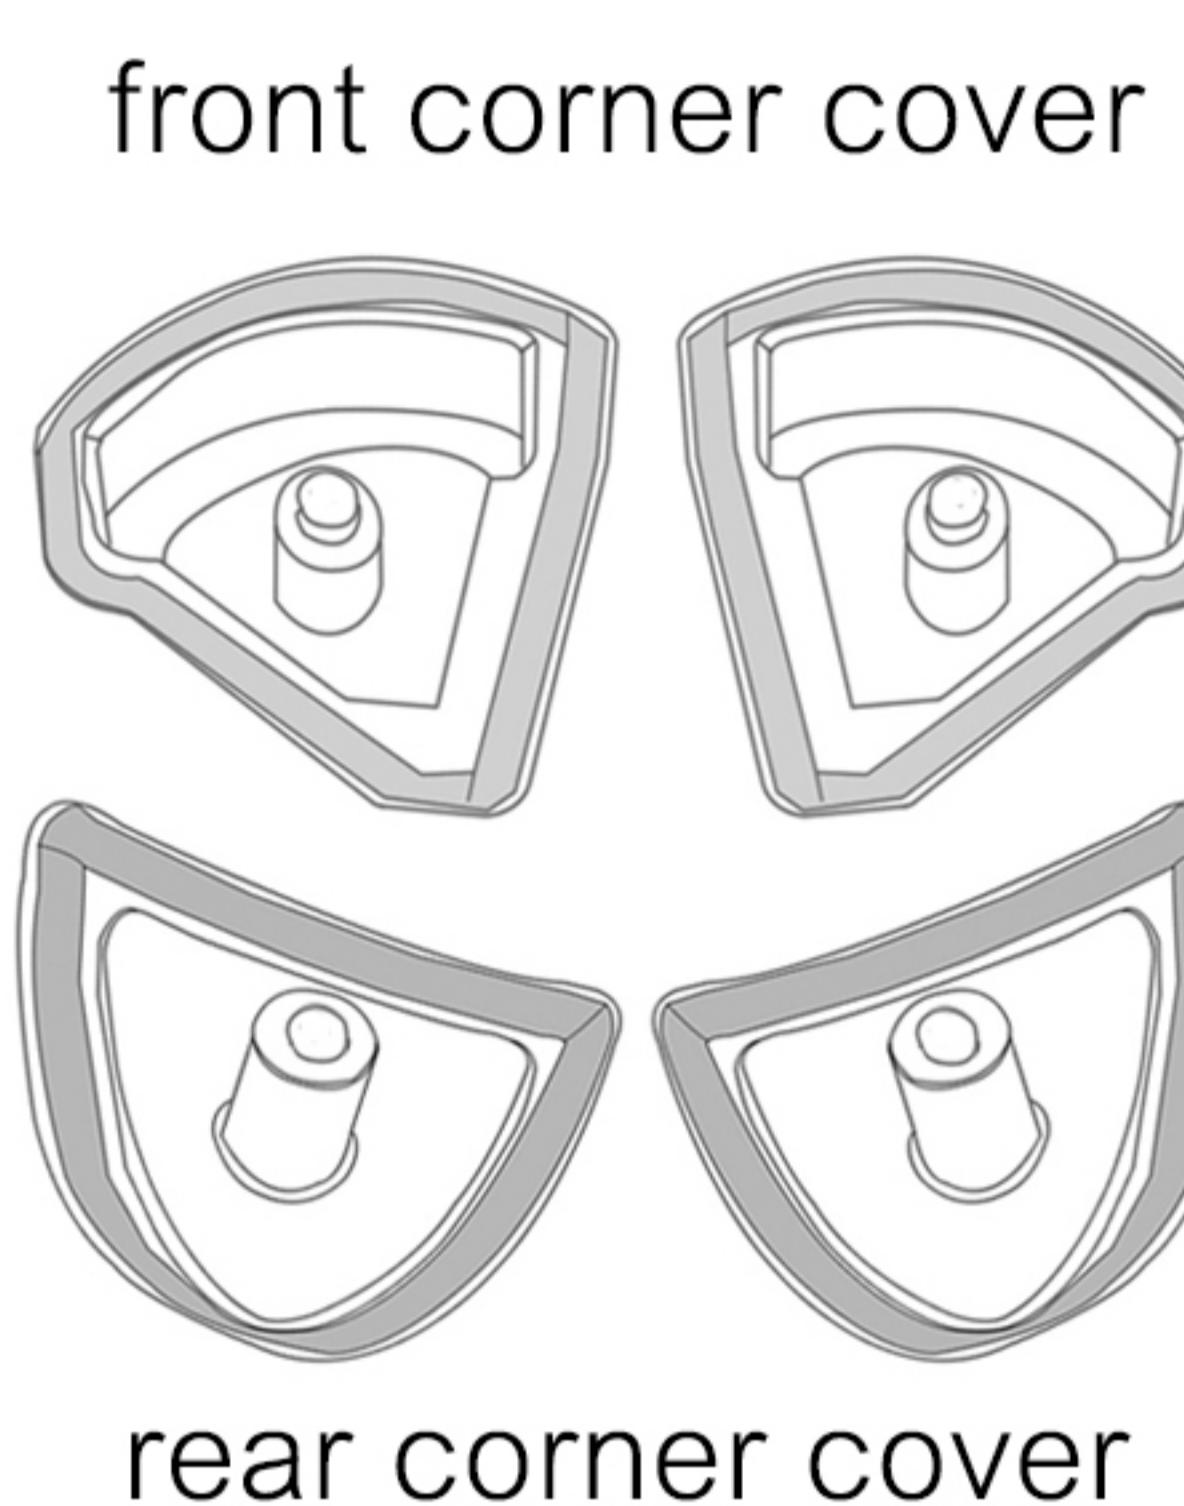3. Silicone corner cover
page 6,8


- front corner cover
- Hex bolt M8x20 = 8 set
- Pan Head Bolt M6x10 = 4 set

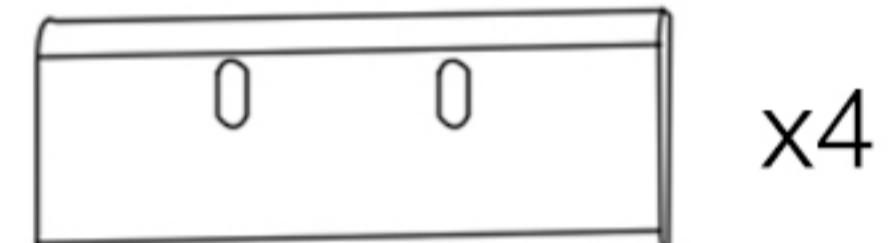4. Lamp & Key**KIT BOX NO.2****1. Clamp**
page 9



- Flange Hex Nut + washer M10 = 8 set

- Flange Hex Nut + washer M8x22 = 8 set

- Nut head cover x8 pcs.

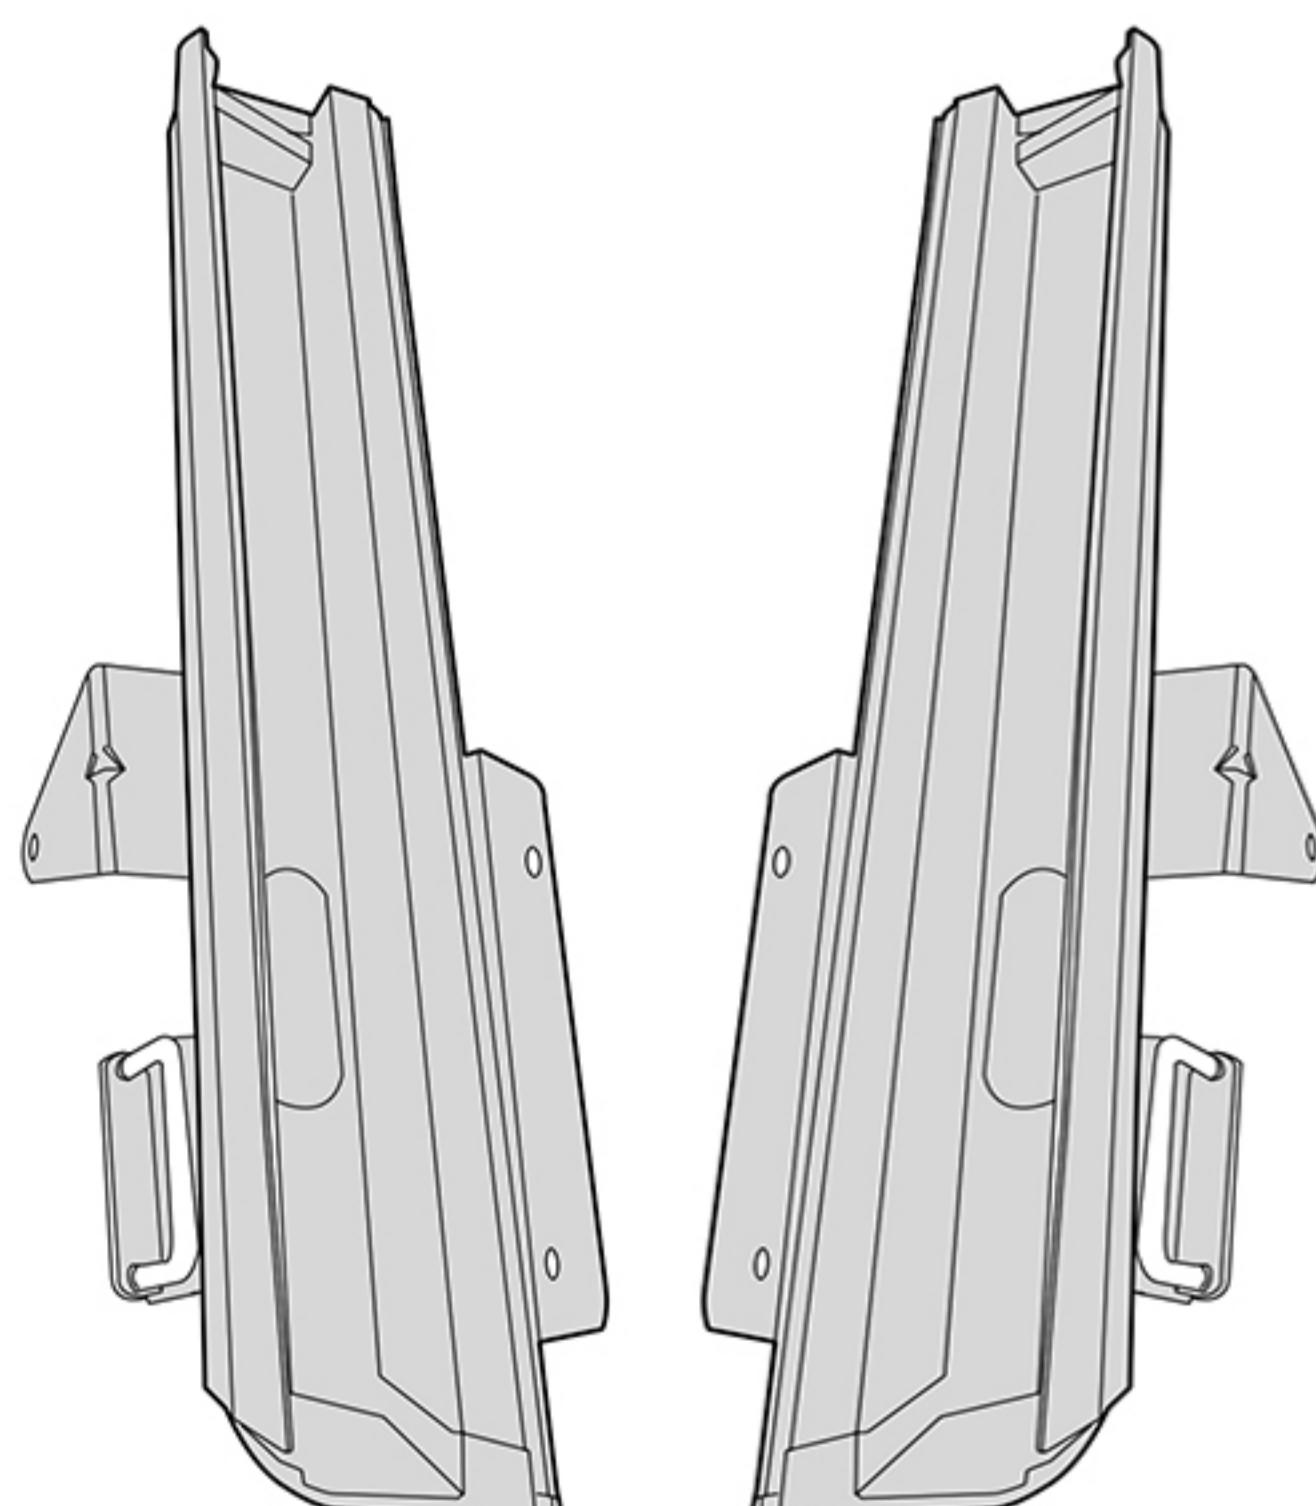
KIT BOX NO.3**1. Water channel**
page 7

- Hex bolt M8x20 = 4 set
- Pan Head Tapping Screw 6x3/8 = 4 pcs.

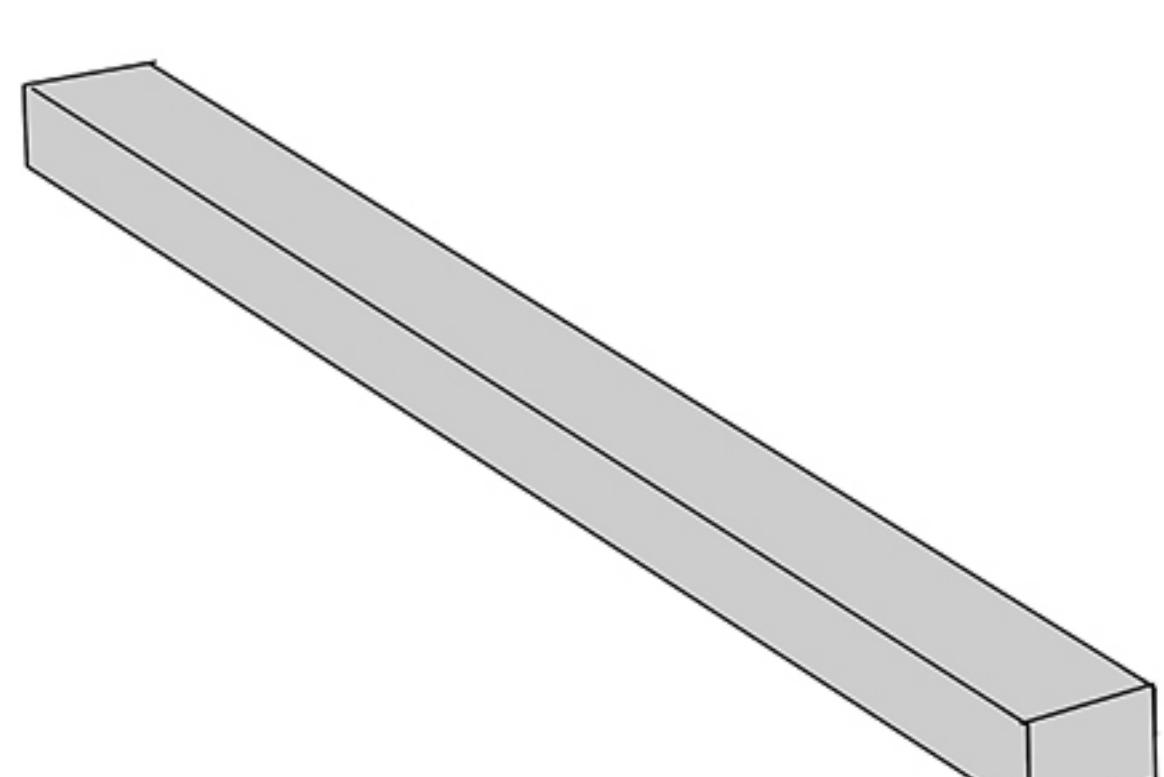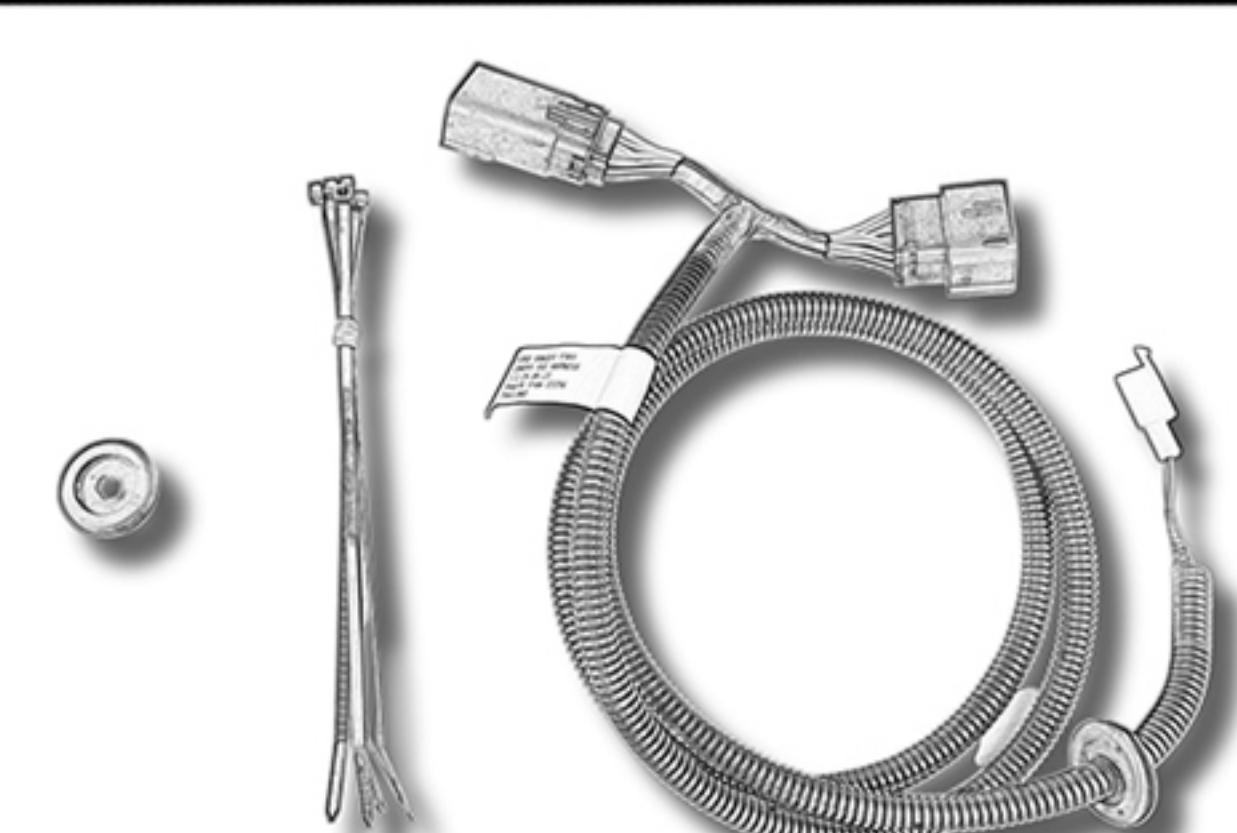
Front rubber
page 9 (in topic 9)**Plug&Play**
page 11

TOOL FOR INSTALLATION


(excluded from the supplied product)

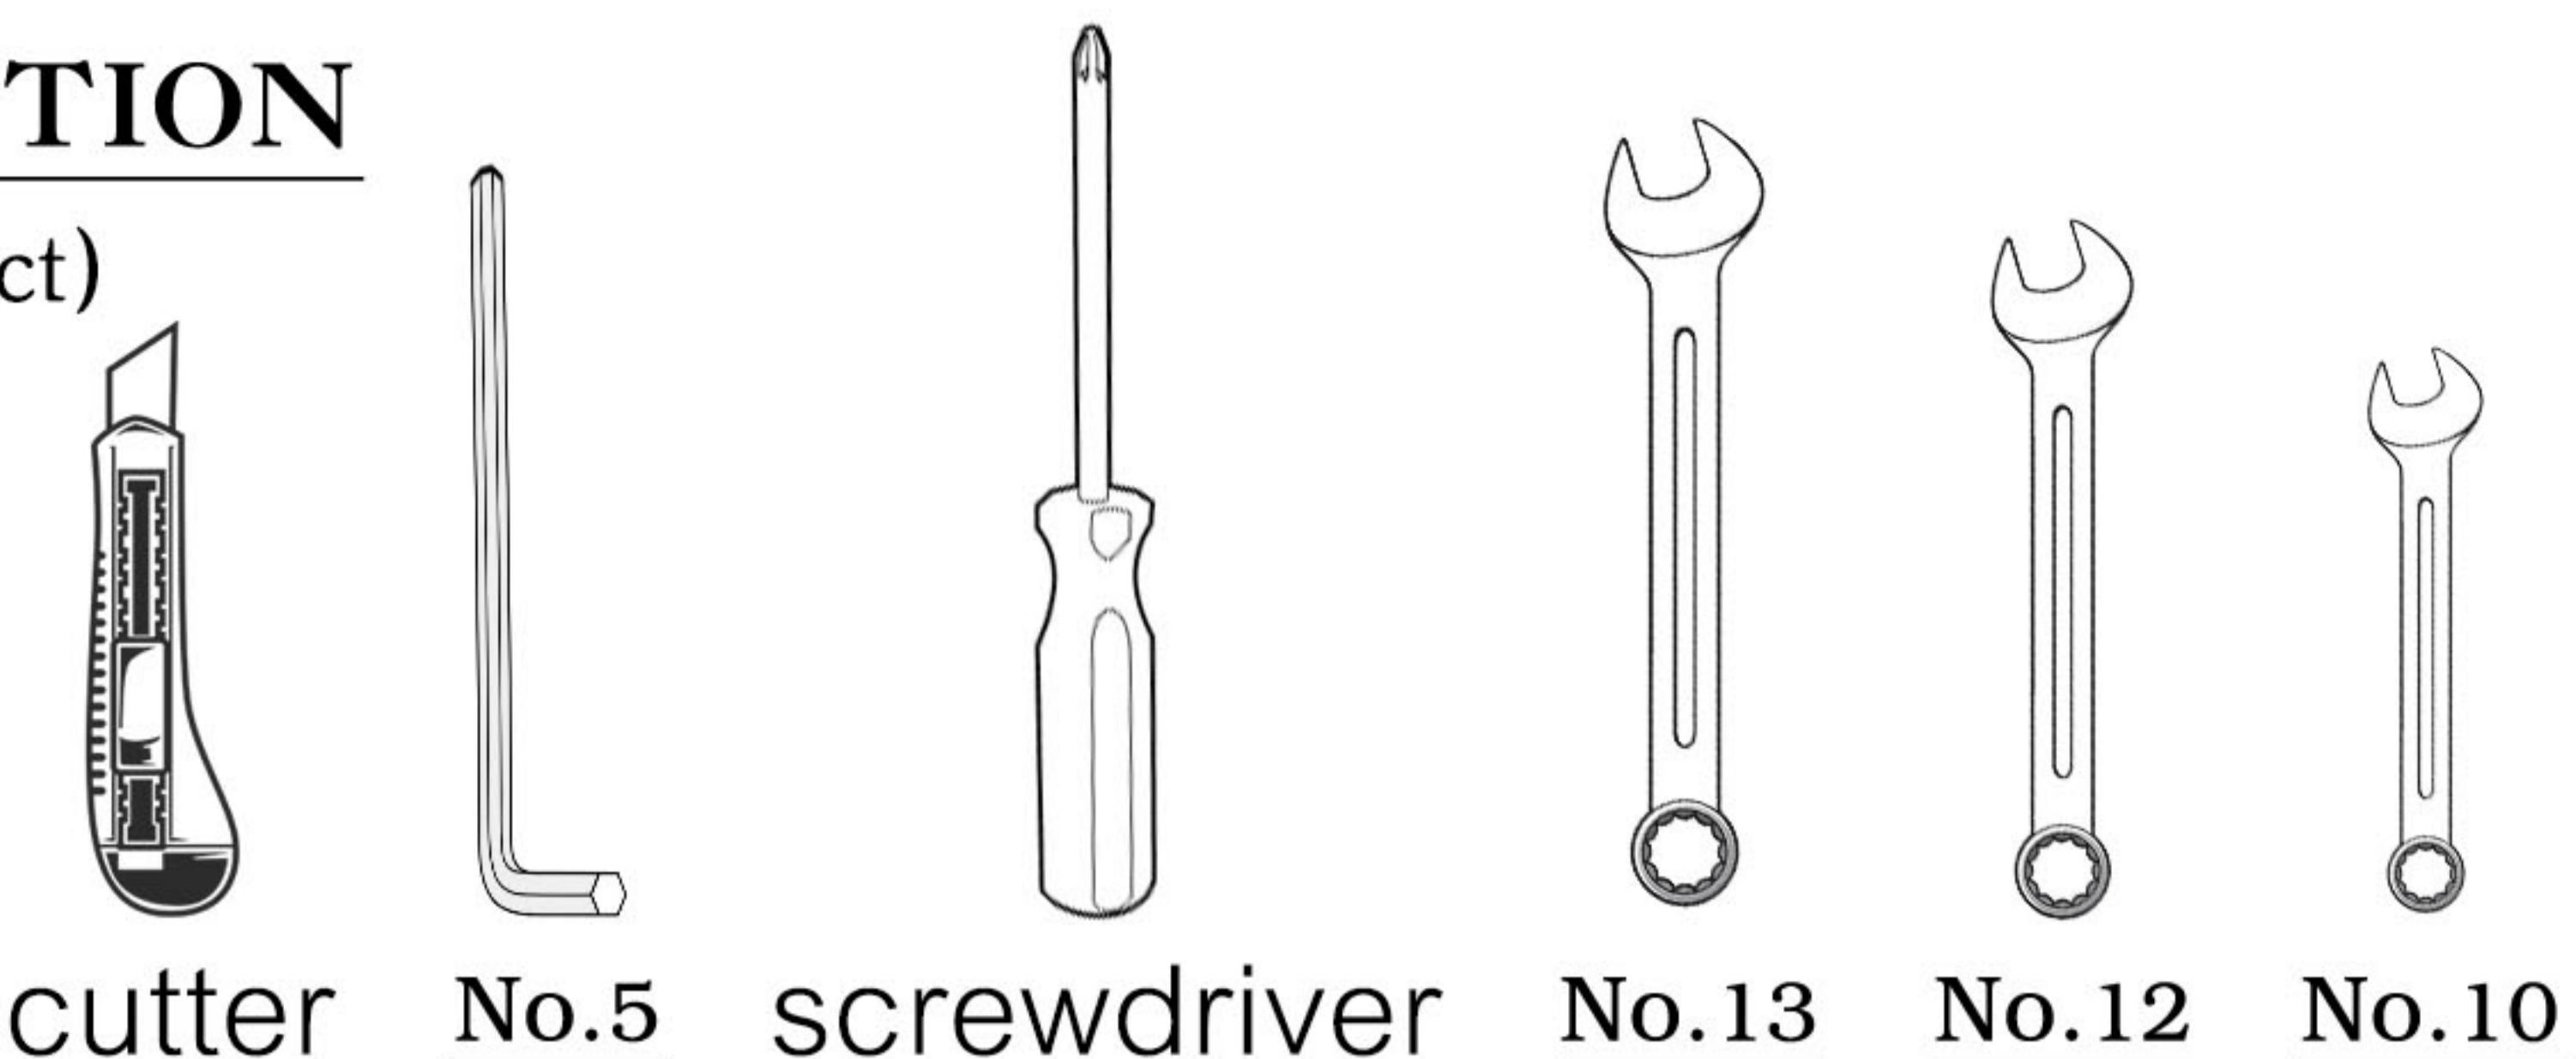**Assembly the canopy****1. Assembly rear door to roof panel****WARNING**



- USE ONLY THE TOOLS RECOMMENDED IN THIS GUIDE
- USE ONLY THE HARDWARE THAT HAS BEEN PROVIDED
- HANDLE ALL COMPONENTS WITH CARE
- IT IS RECOMMENDED THAT FOUR PEOPLE LIFT/LOWER THE CANOPY
- NEVER USE ACETONE ON THE PAINTWORK
- AVOID PINCHING/SQUASHING HANDS

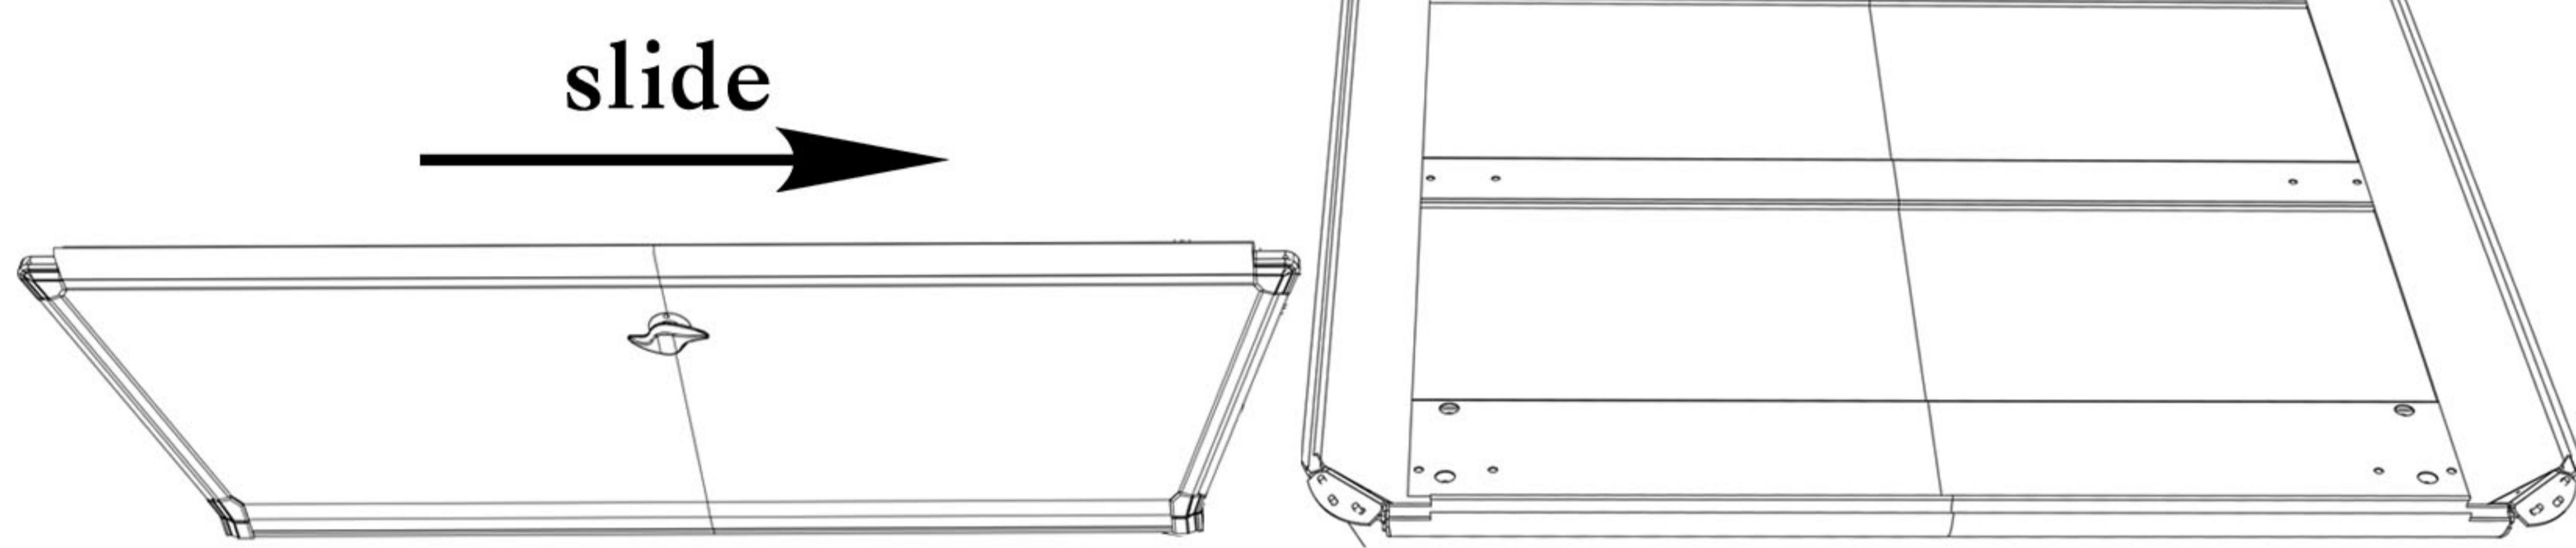

Apply silicone before closing the side cover

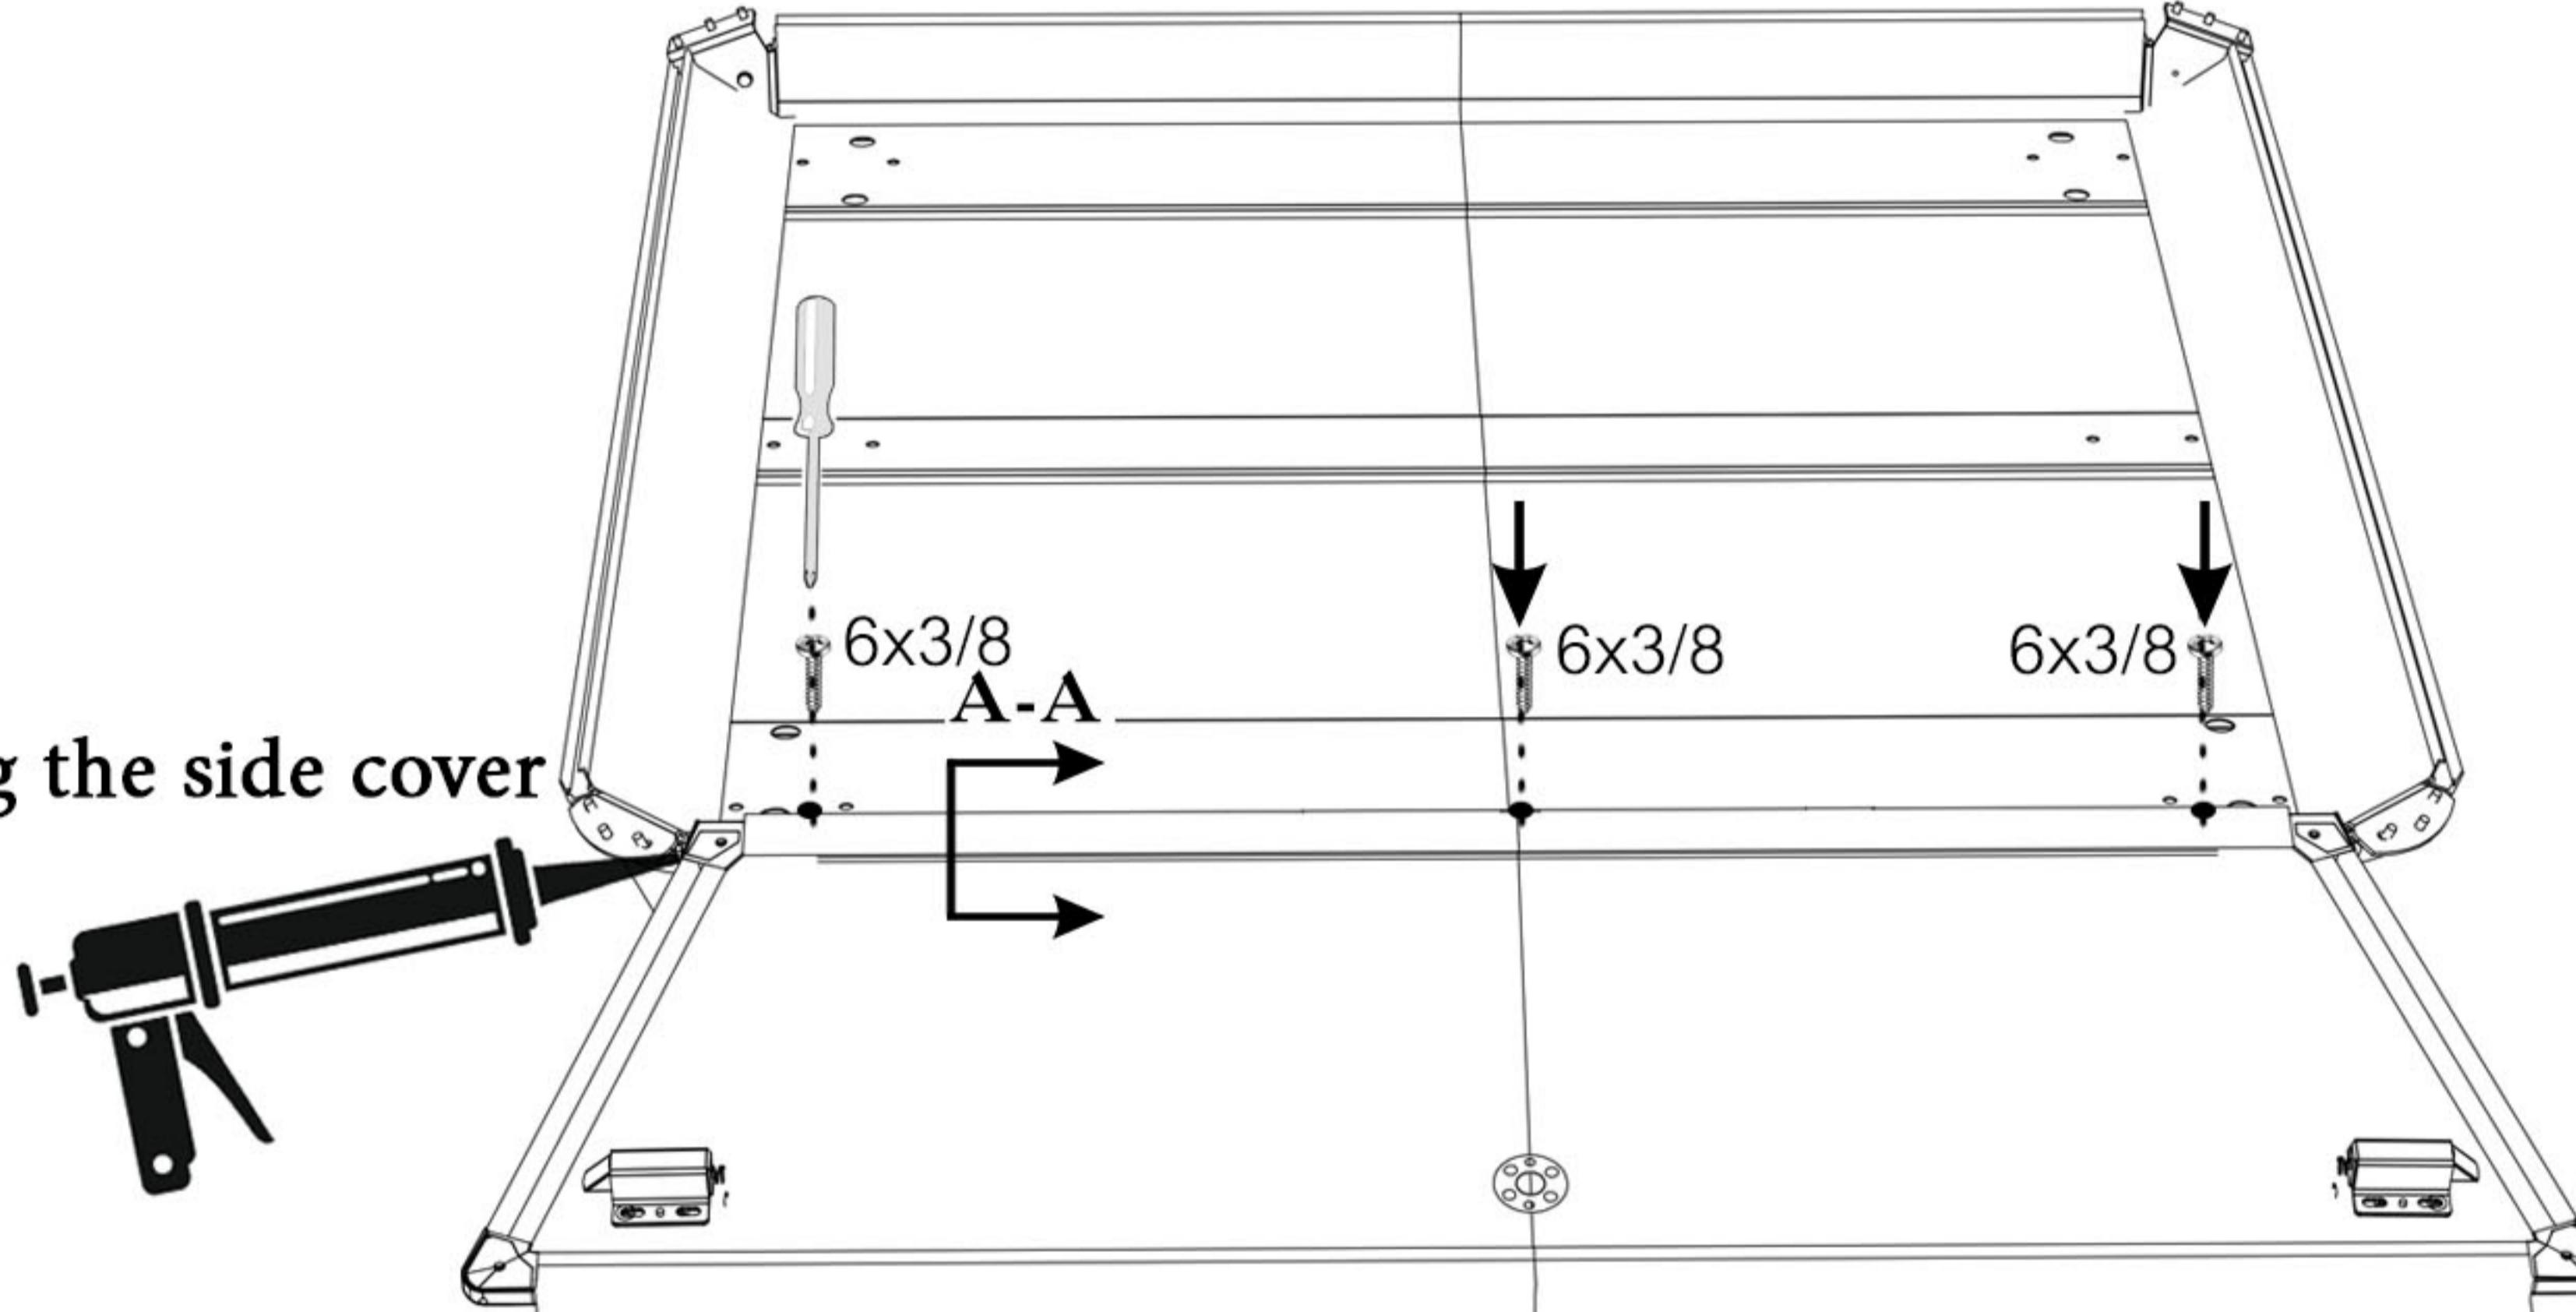


A-A


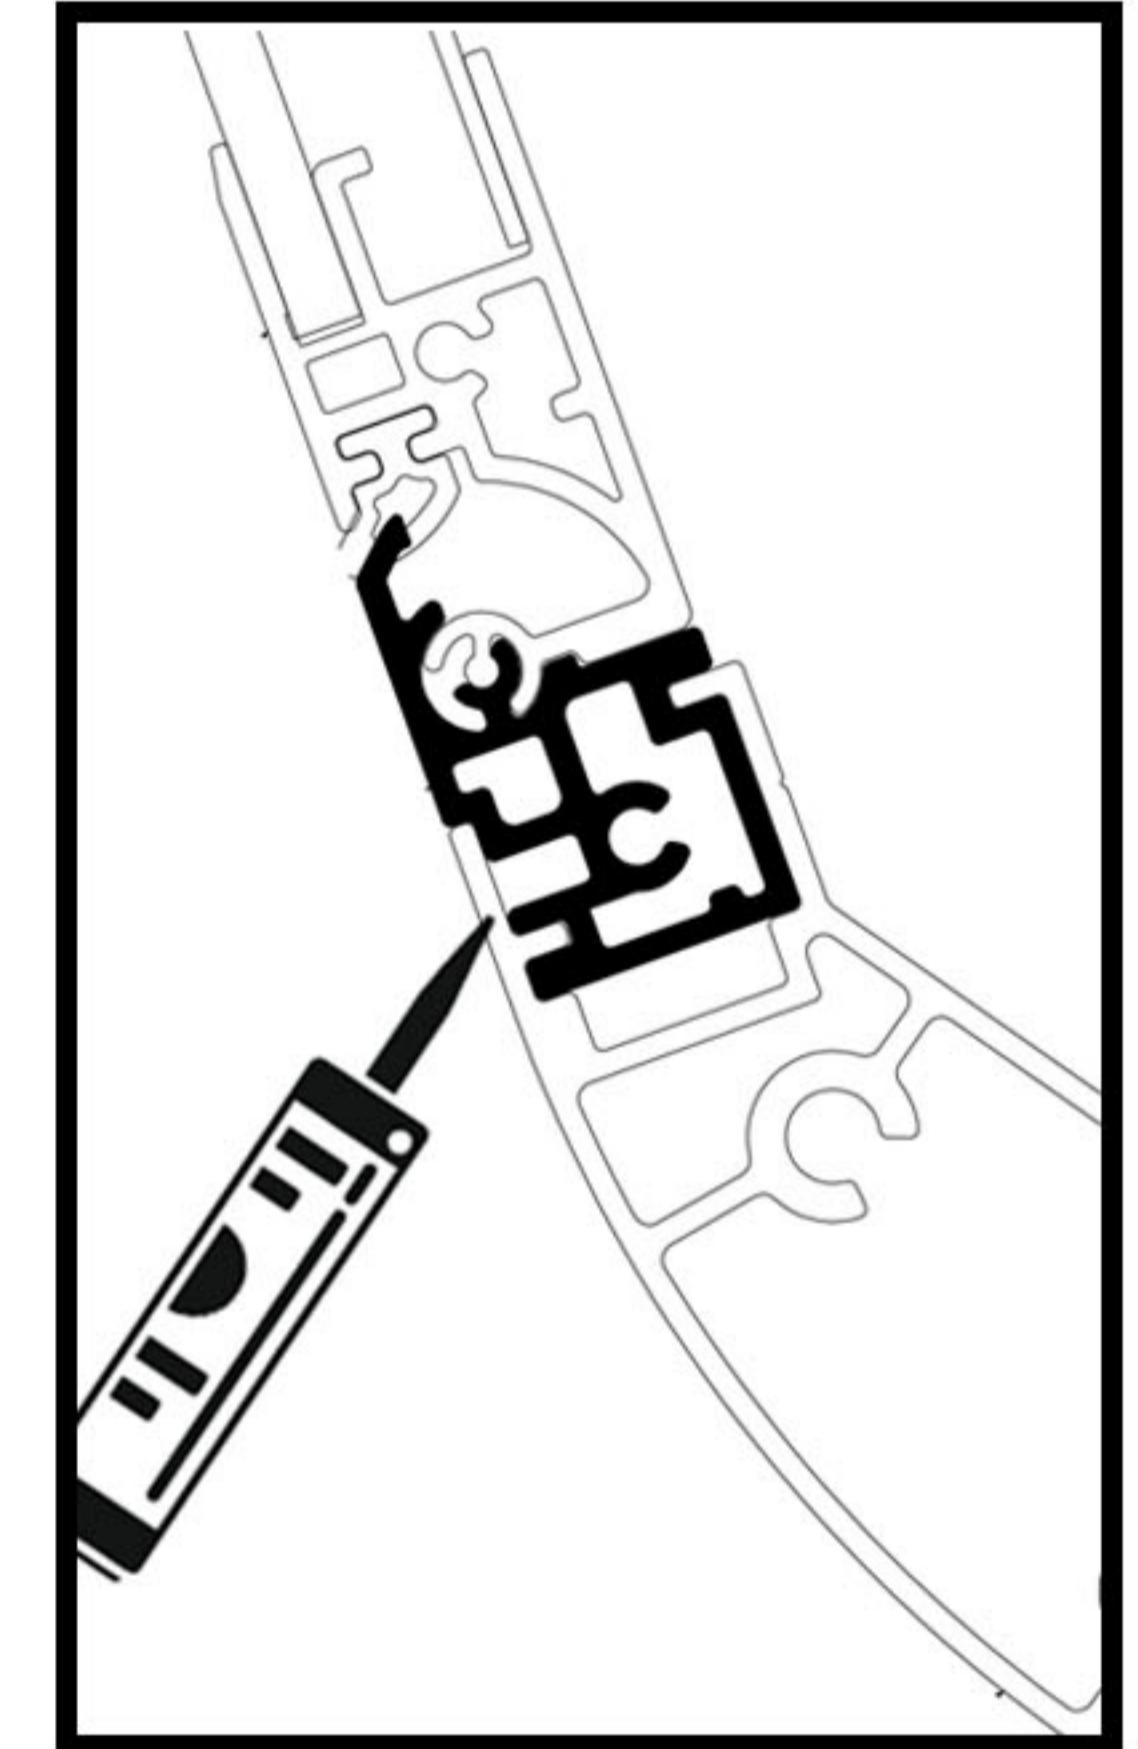
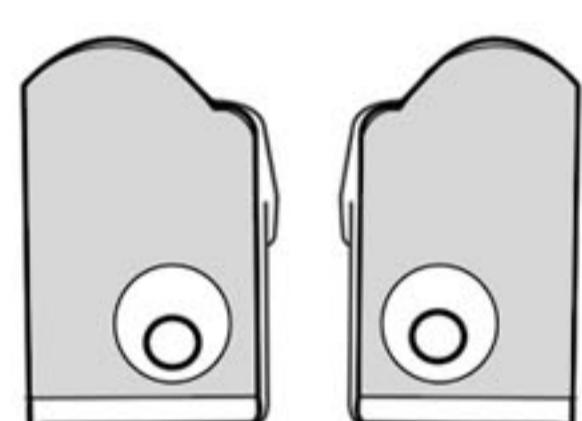
**Rear door kit**

Flat Head Tapping Screw 6x1/2 = 2 pcs.

Pan Head Tapping Screw 6x3/8 = 3 pcs.

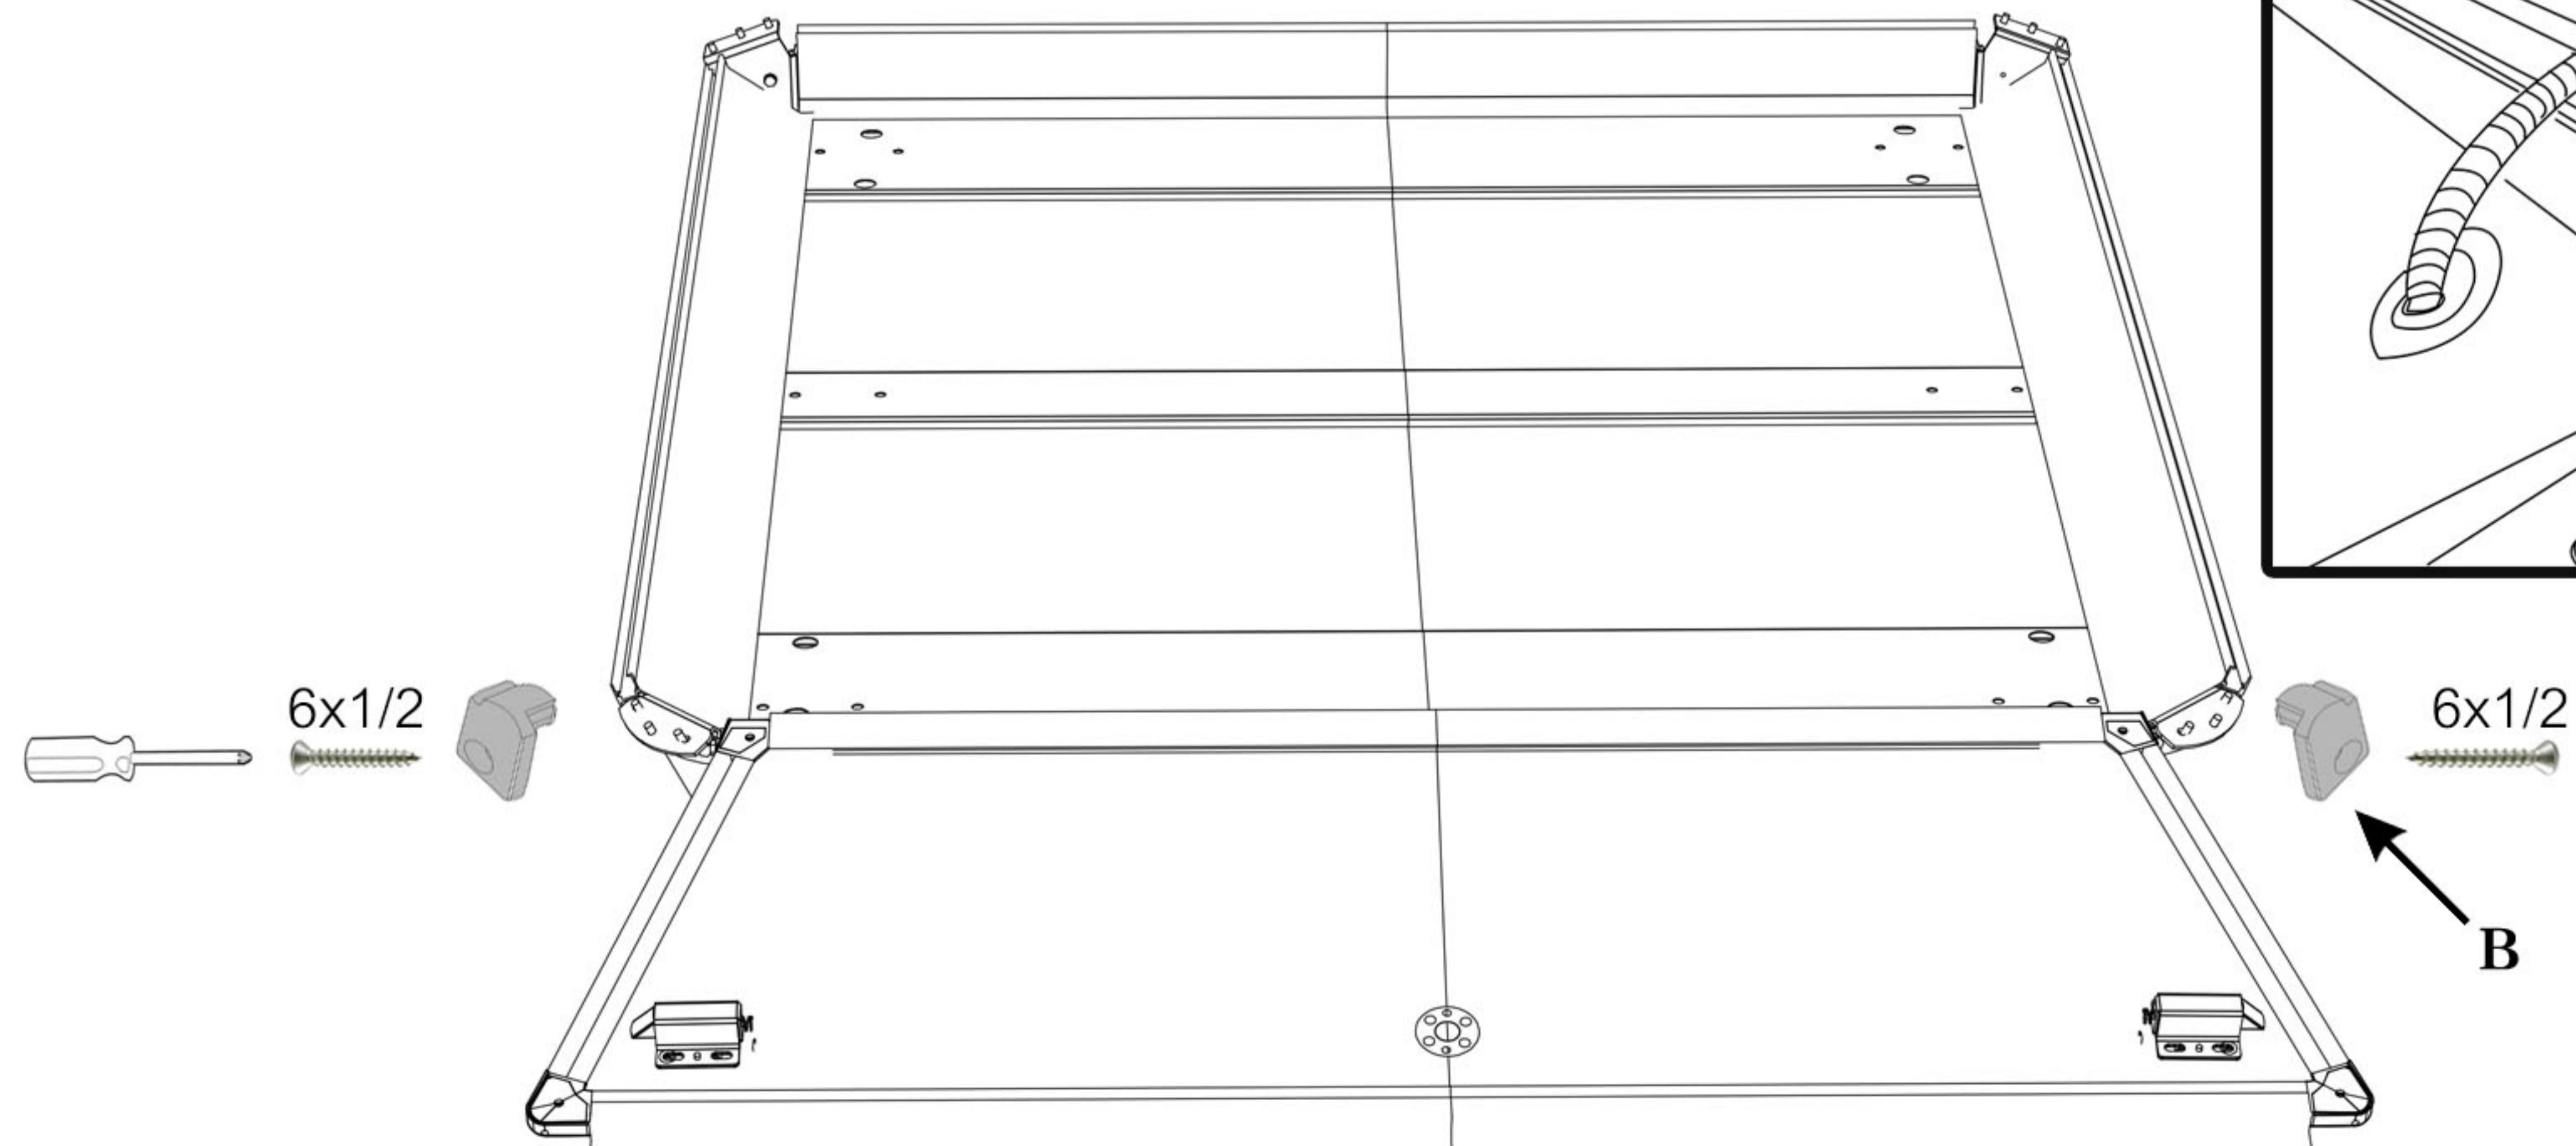



2. Assembly side panel

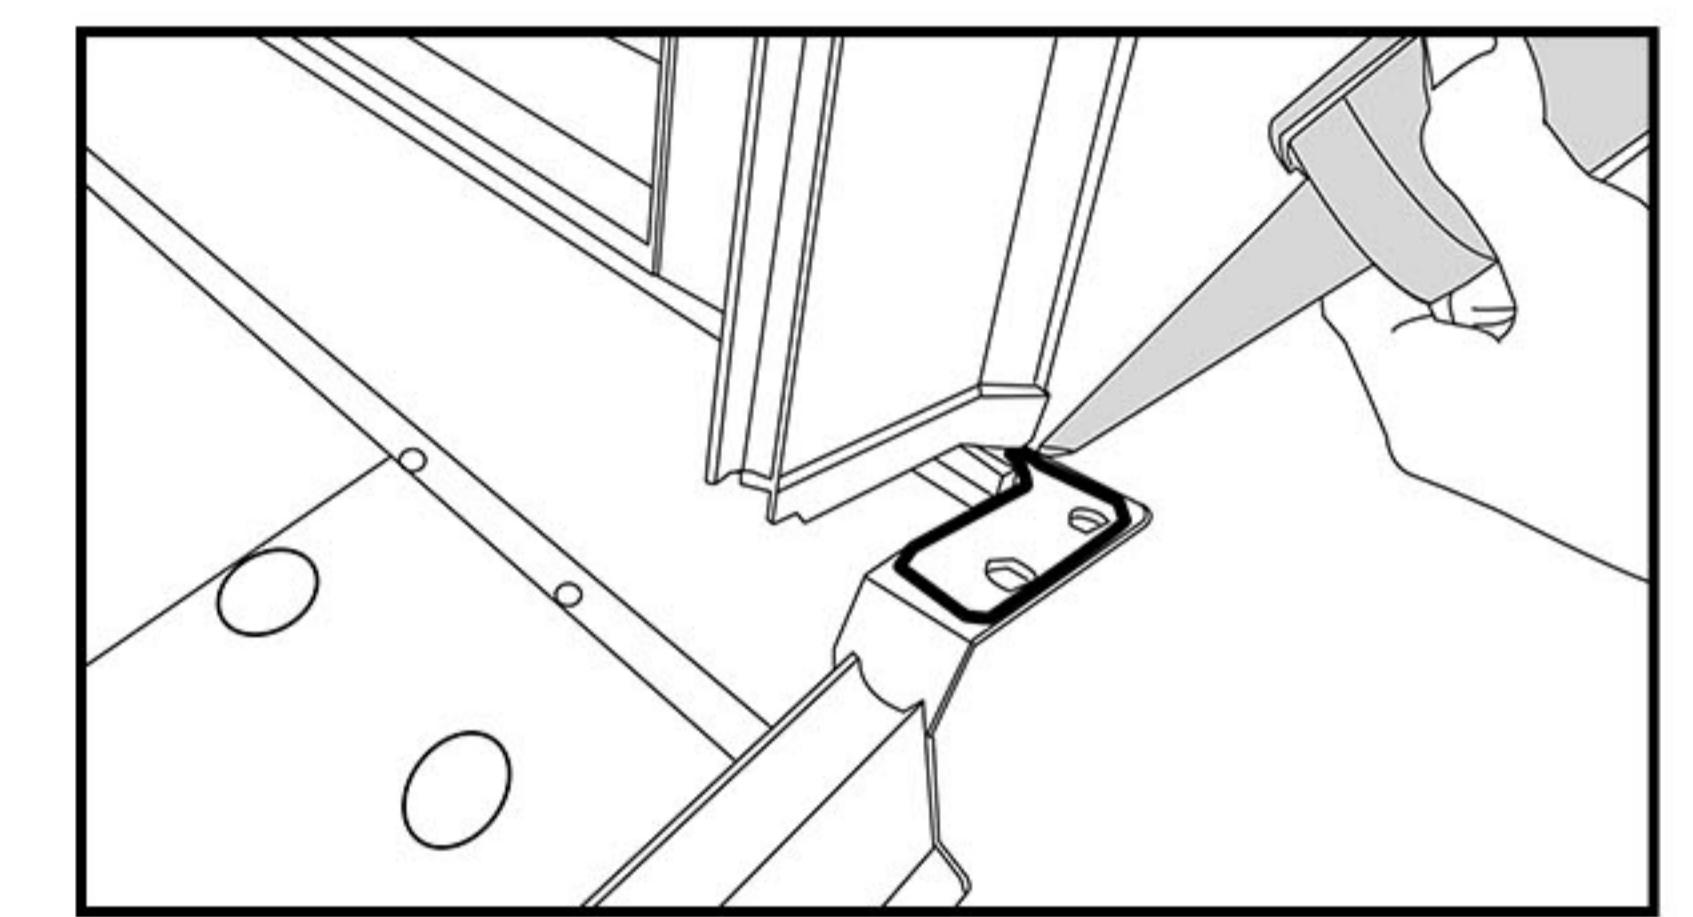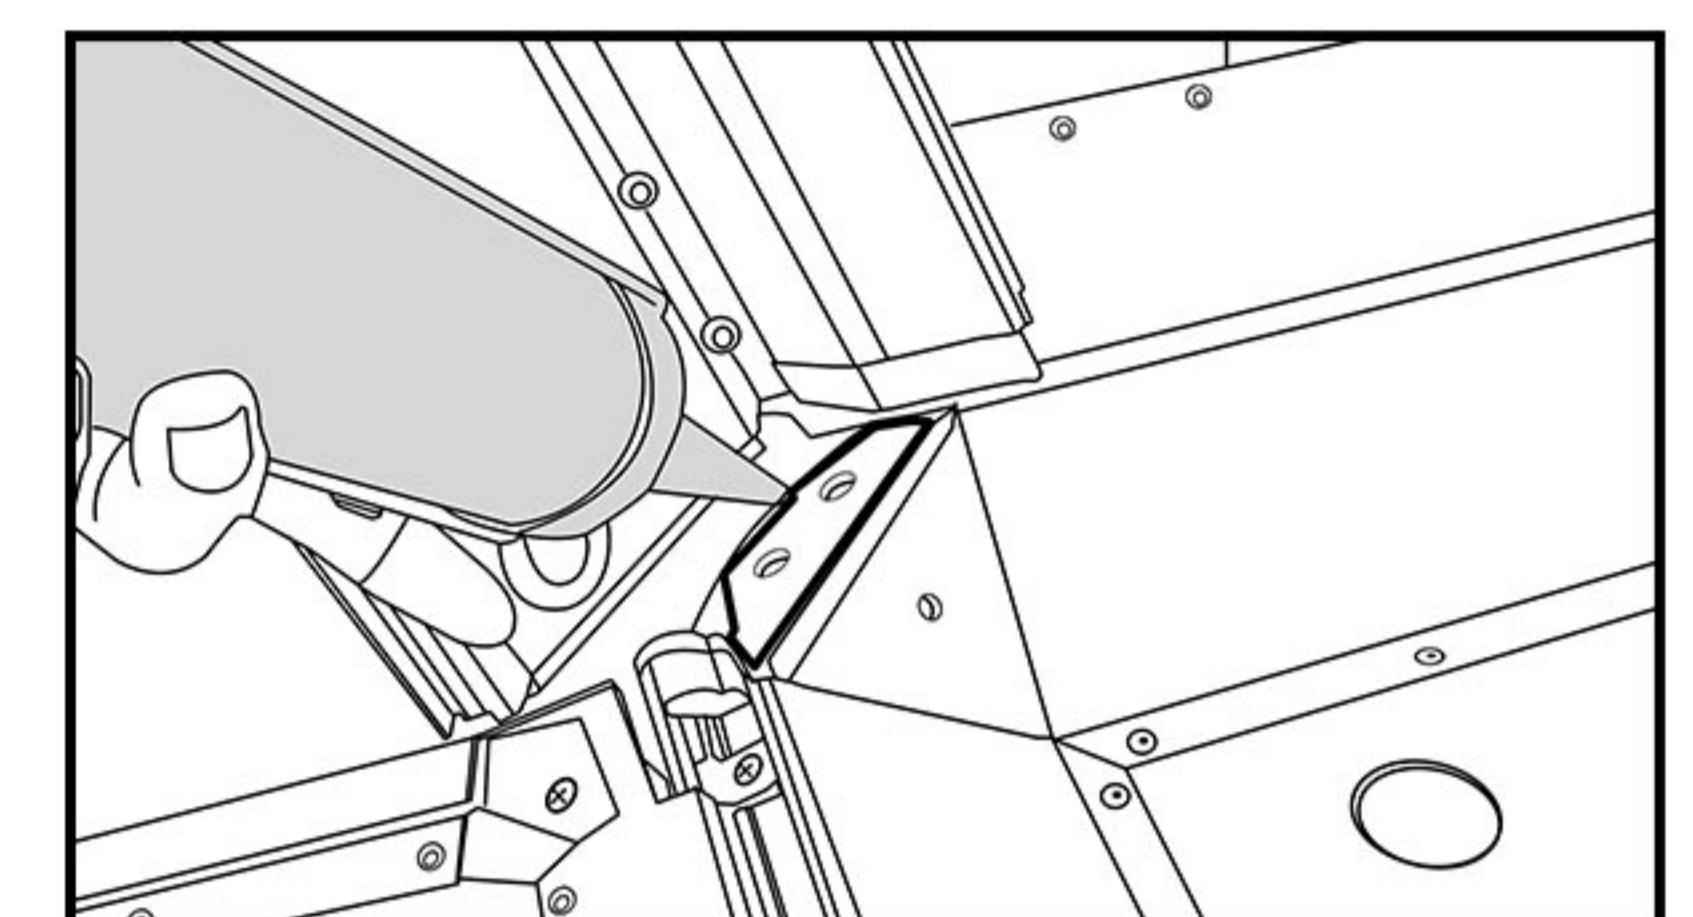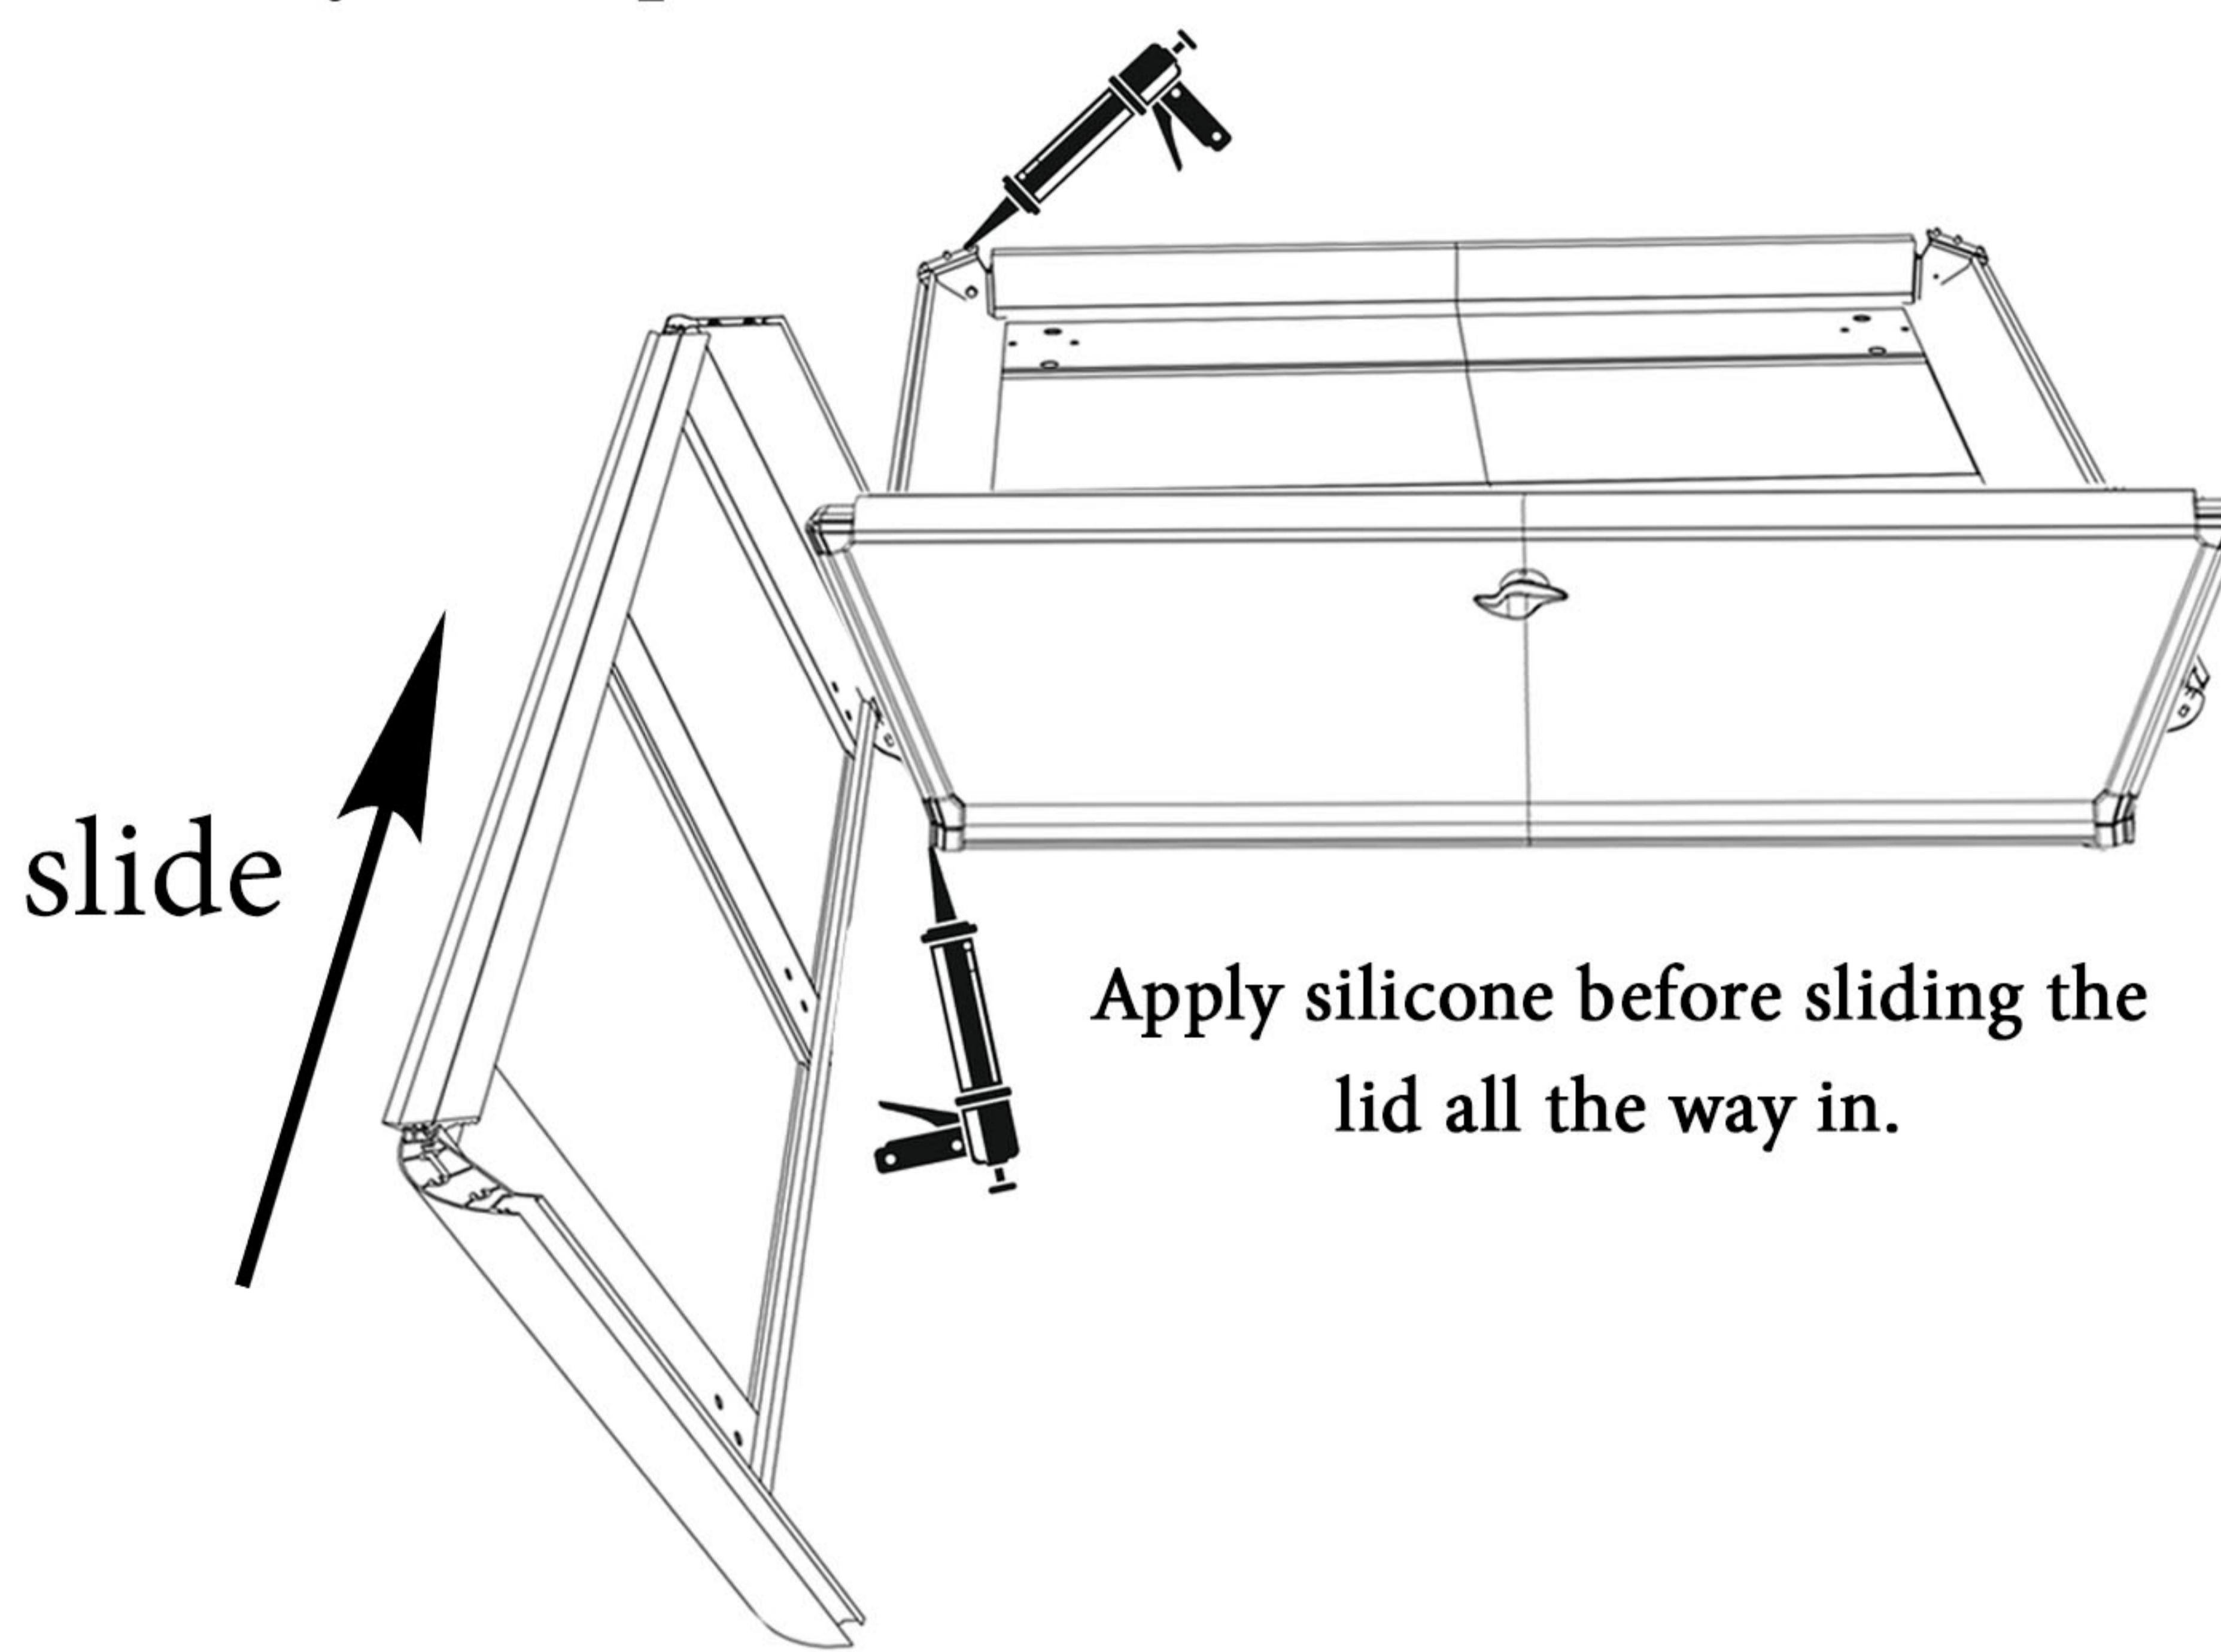

Note : Lift up the rear door before

sliding the side panels into the side roof frame

A-A

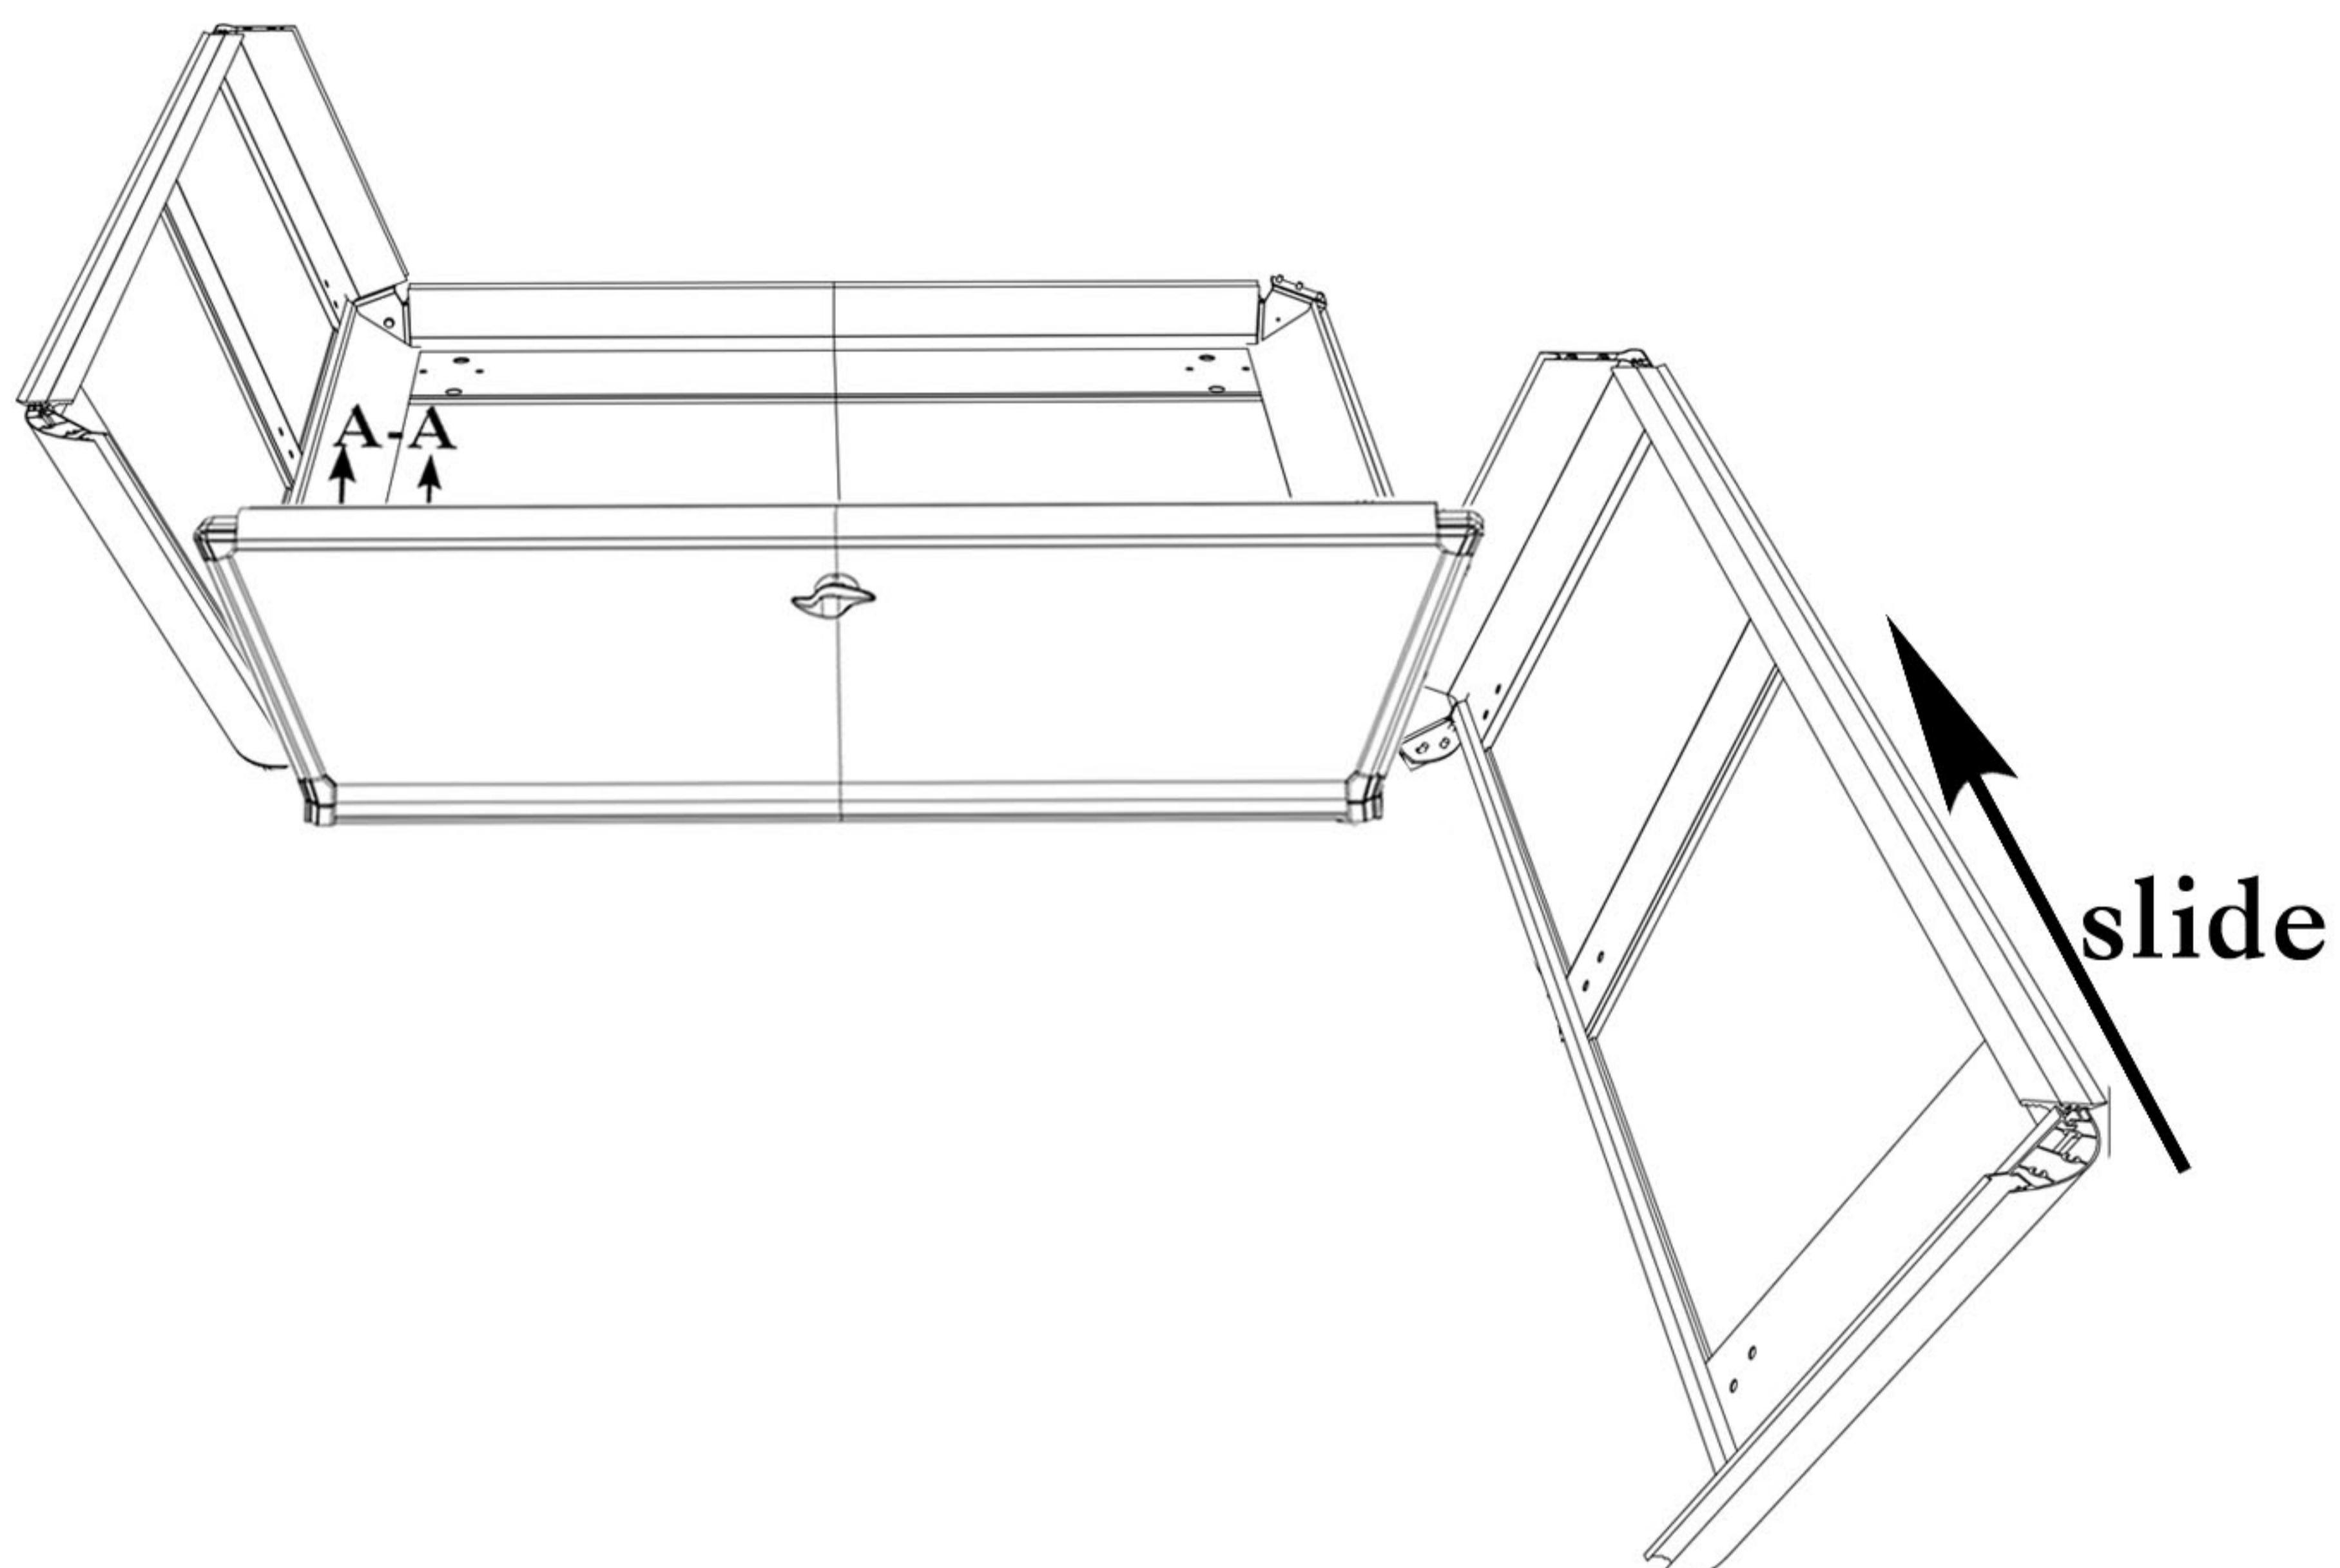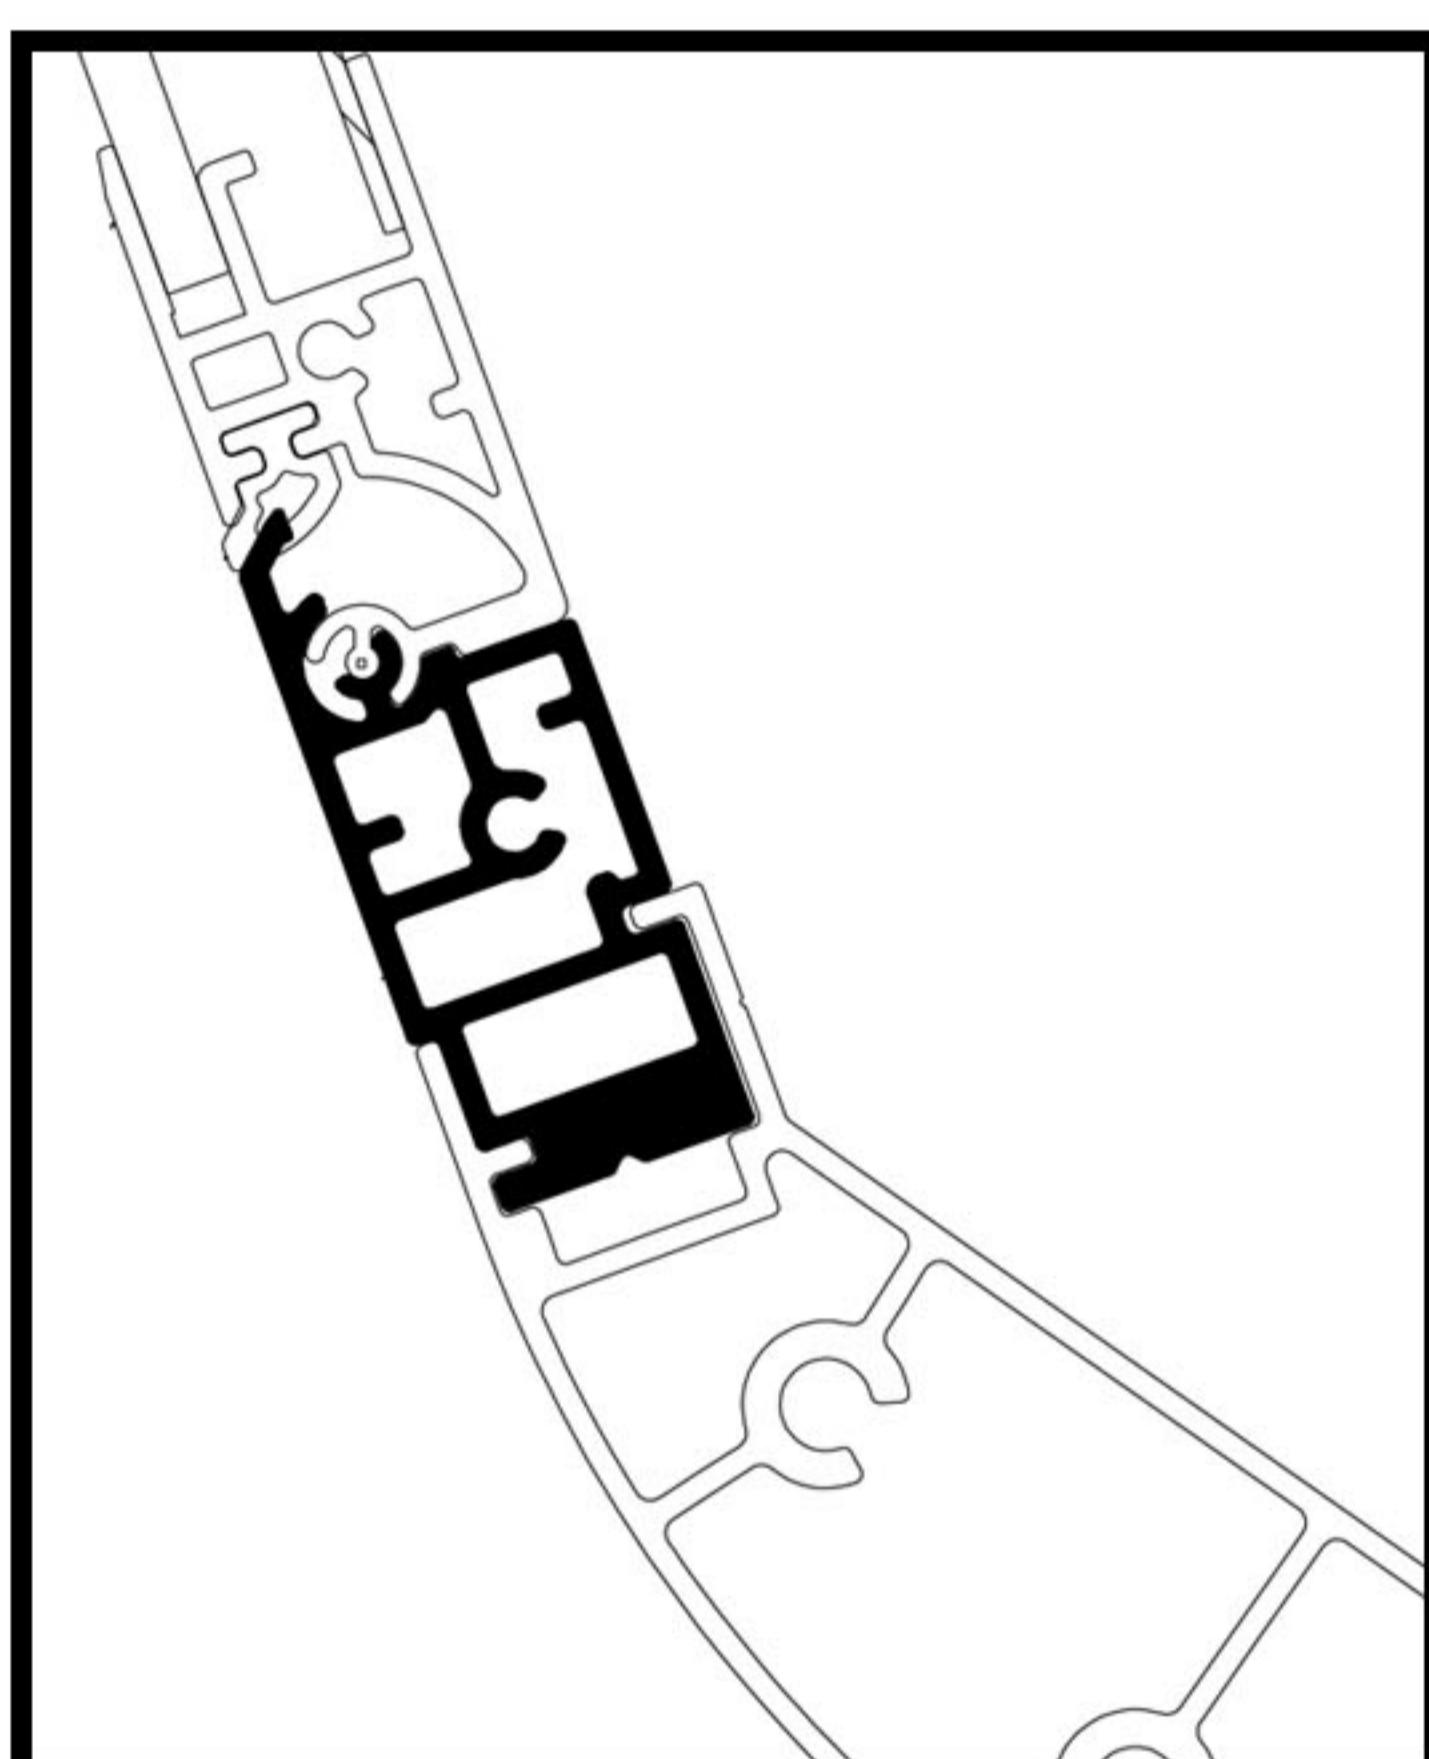


WARNING

- USE ONLY THE TOOLS RECOMMENDED IN THIS GUIDE
- USE ONLY THE HARDWARE THAT HAS BEEN PROVIDED
- HANDLE ALL COMPONENTS WITH CARE
- IT IS RECOMMENDED THAT FOUR PEOPLE LIFT/LOWER THE CANOPY
- NEVER USE ACETONE ON THE PAINTWORK
- AVOID PINCHING/SQUASHING HANDS




3. Assembly front panel


Front panel bracket

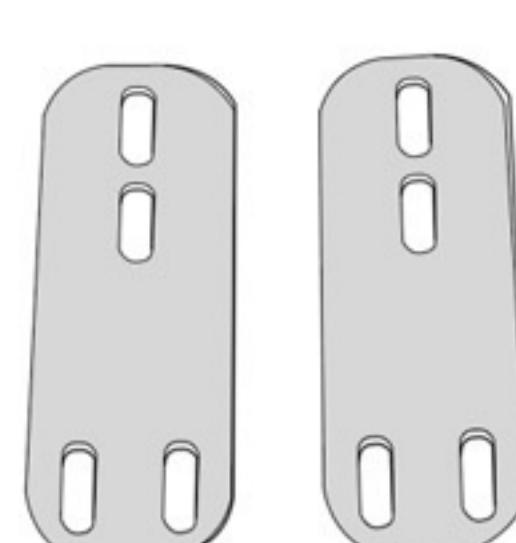

- Socket pan head bolt M8x12 =4set
- Hex bolt M6x15 =4set

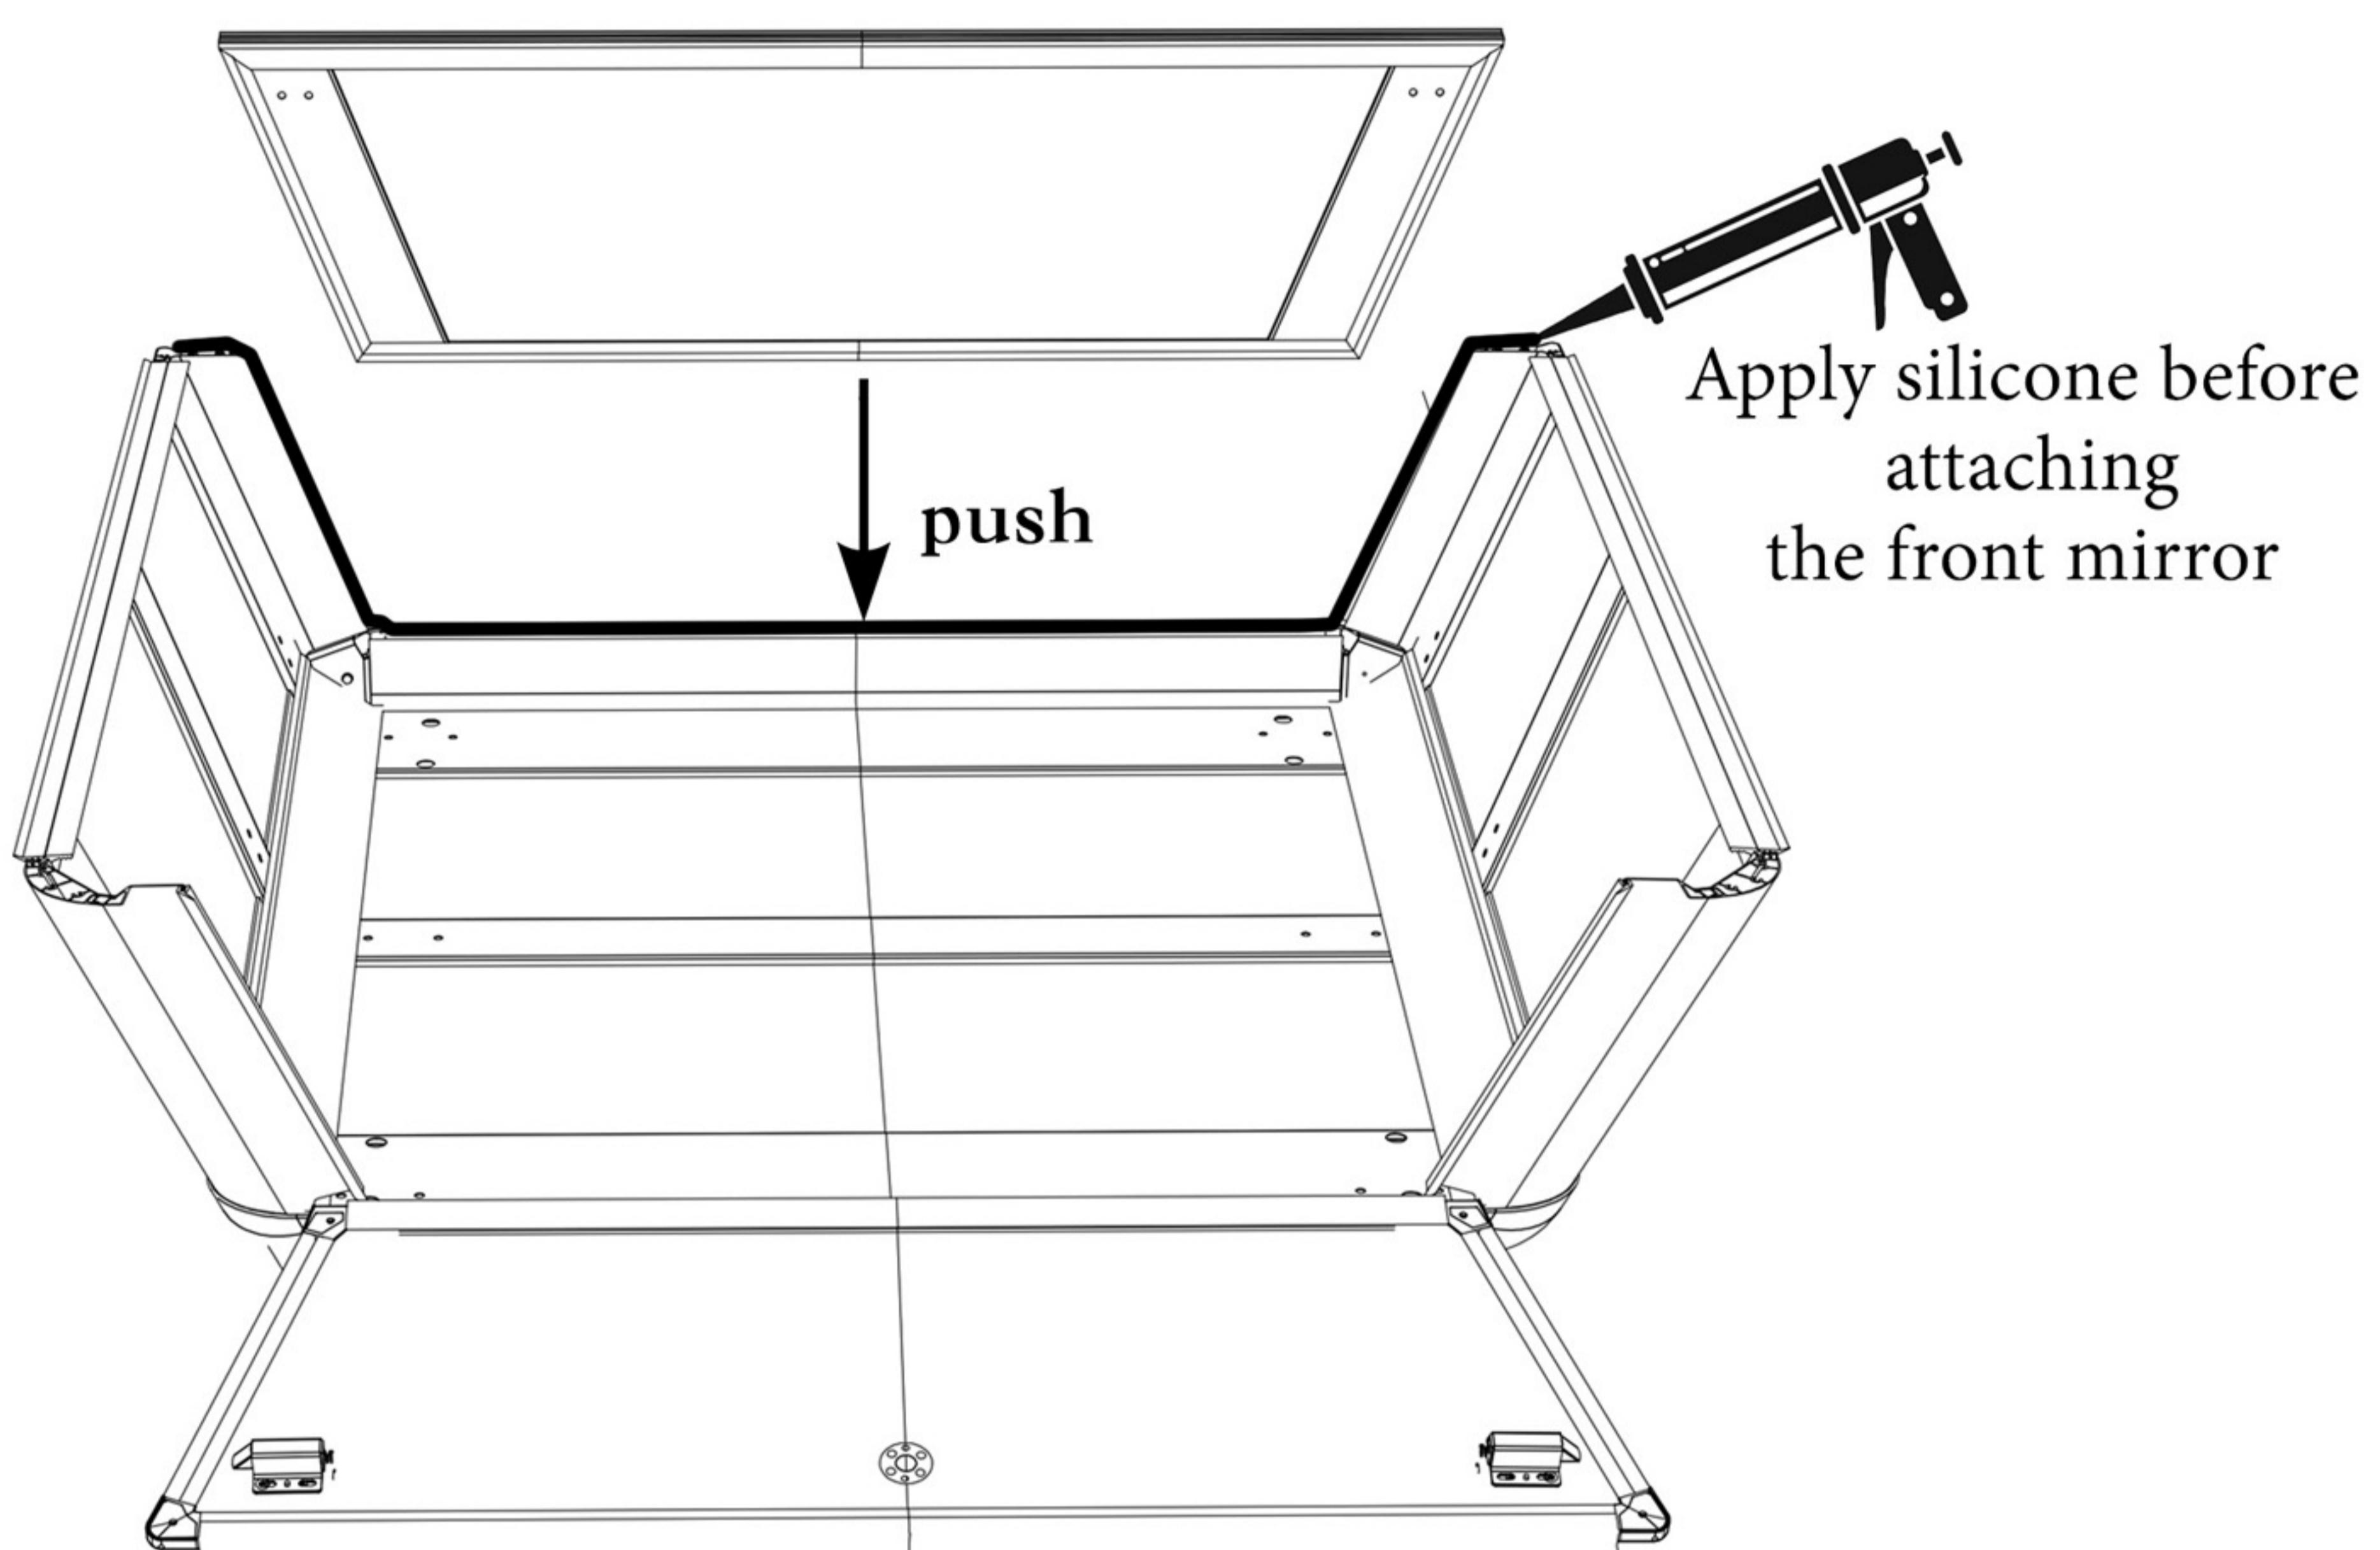


Note: Pre-assamby fastener by hand then tigthen by tool

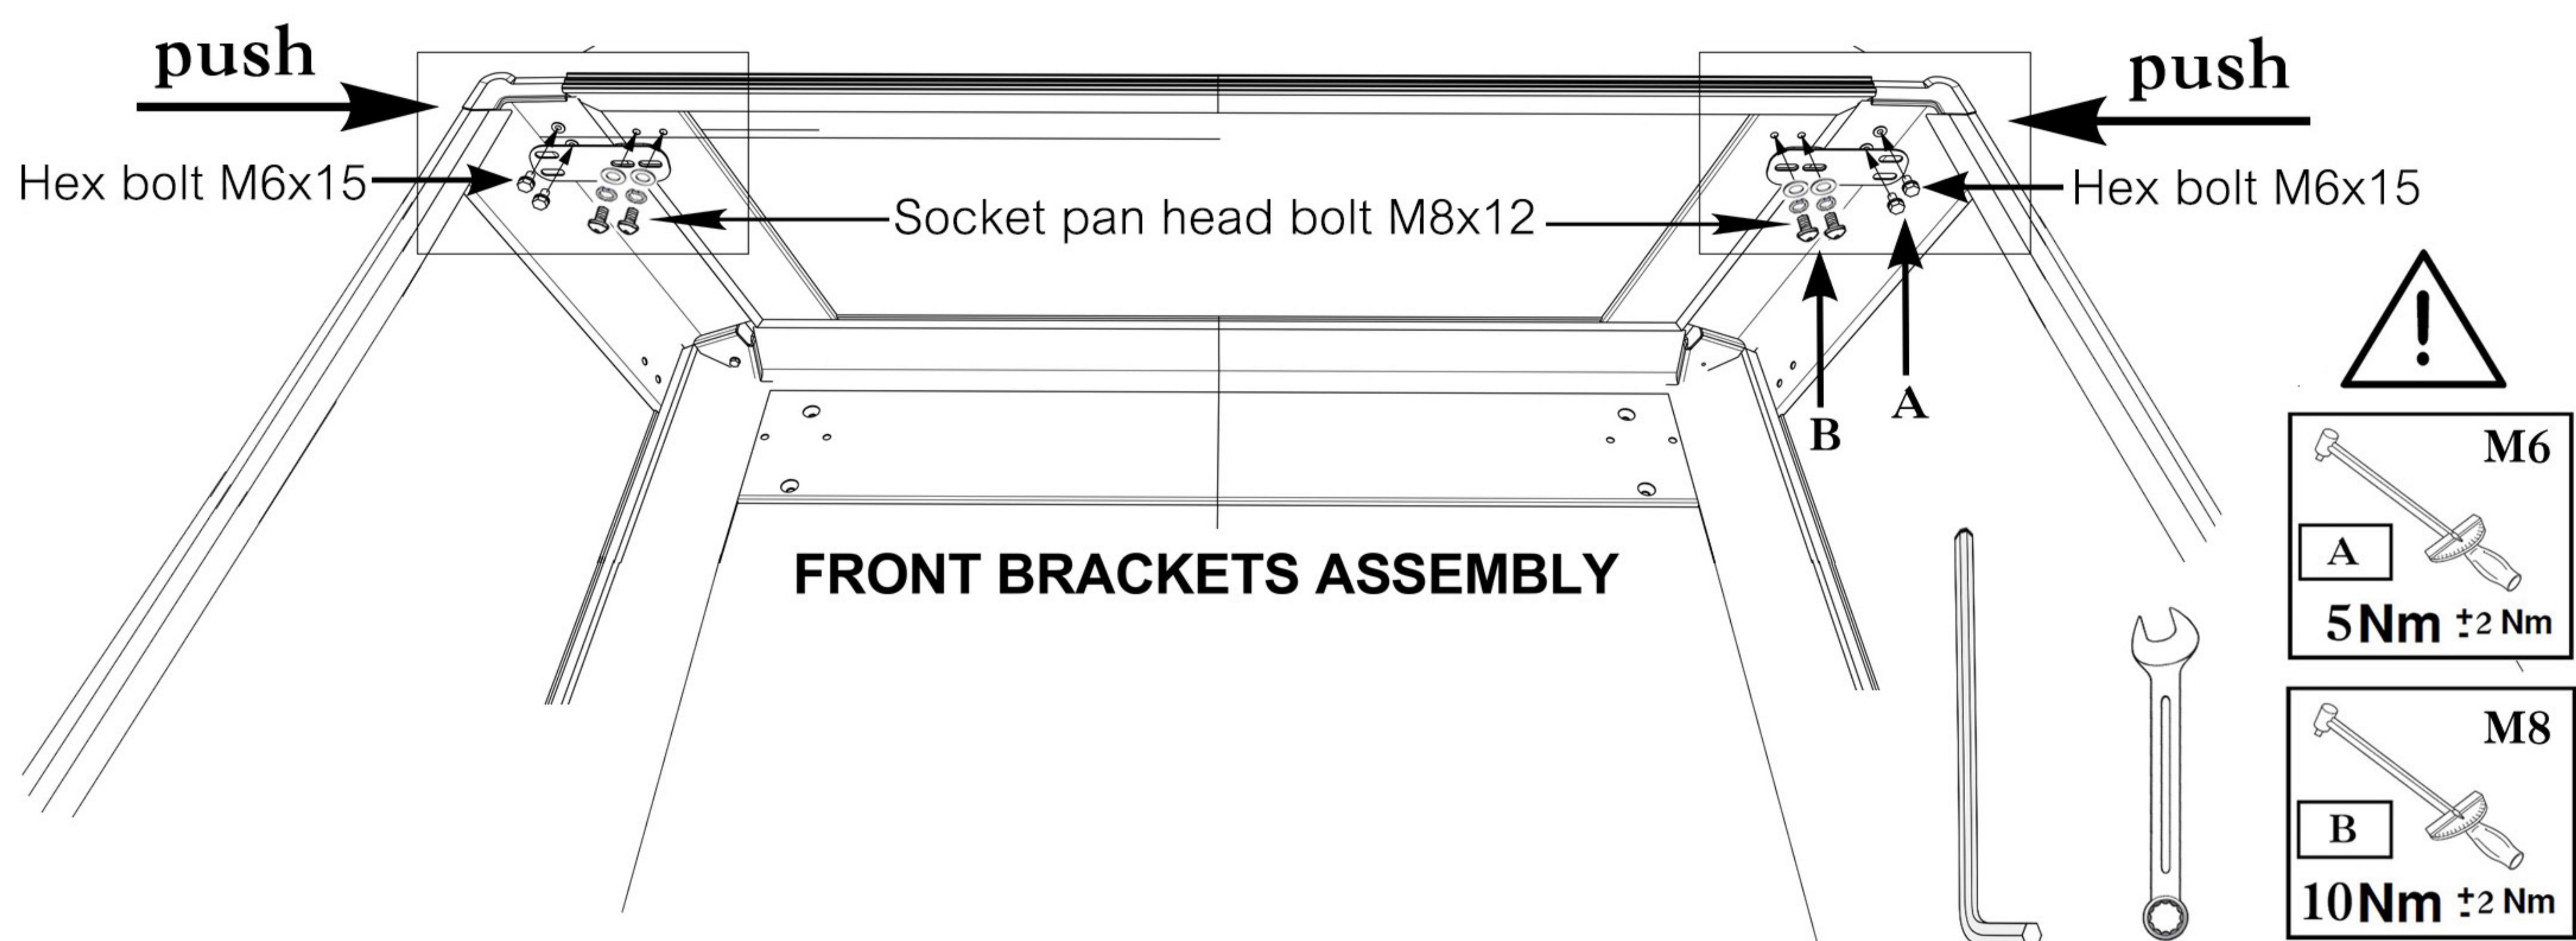

WARNING

- USE ONLY THE TOOLS RECOMMENDED IN THIS GUIDE
- USE ONLY THE HARDWARE THAT HAS BEEN PROVIDED
- HANDLE ALL COMPONENTS WITH CARE
- IT IS RECOMMENDED THAT FOUR PEOPLE LIFT/LOWER THE CANOPY
- NEVER USE ACETONE ON THE PAINTWORK
- AVOID PINCHING/SQUASHING HANDS



No.5 No.10

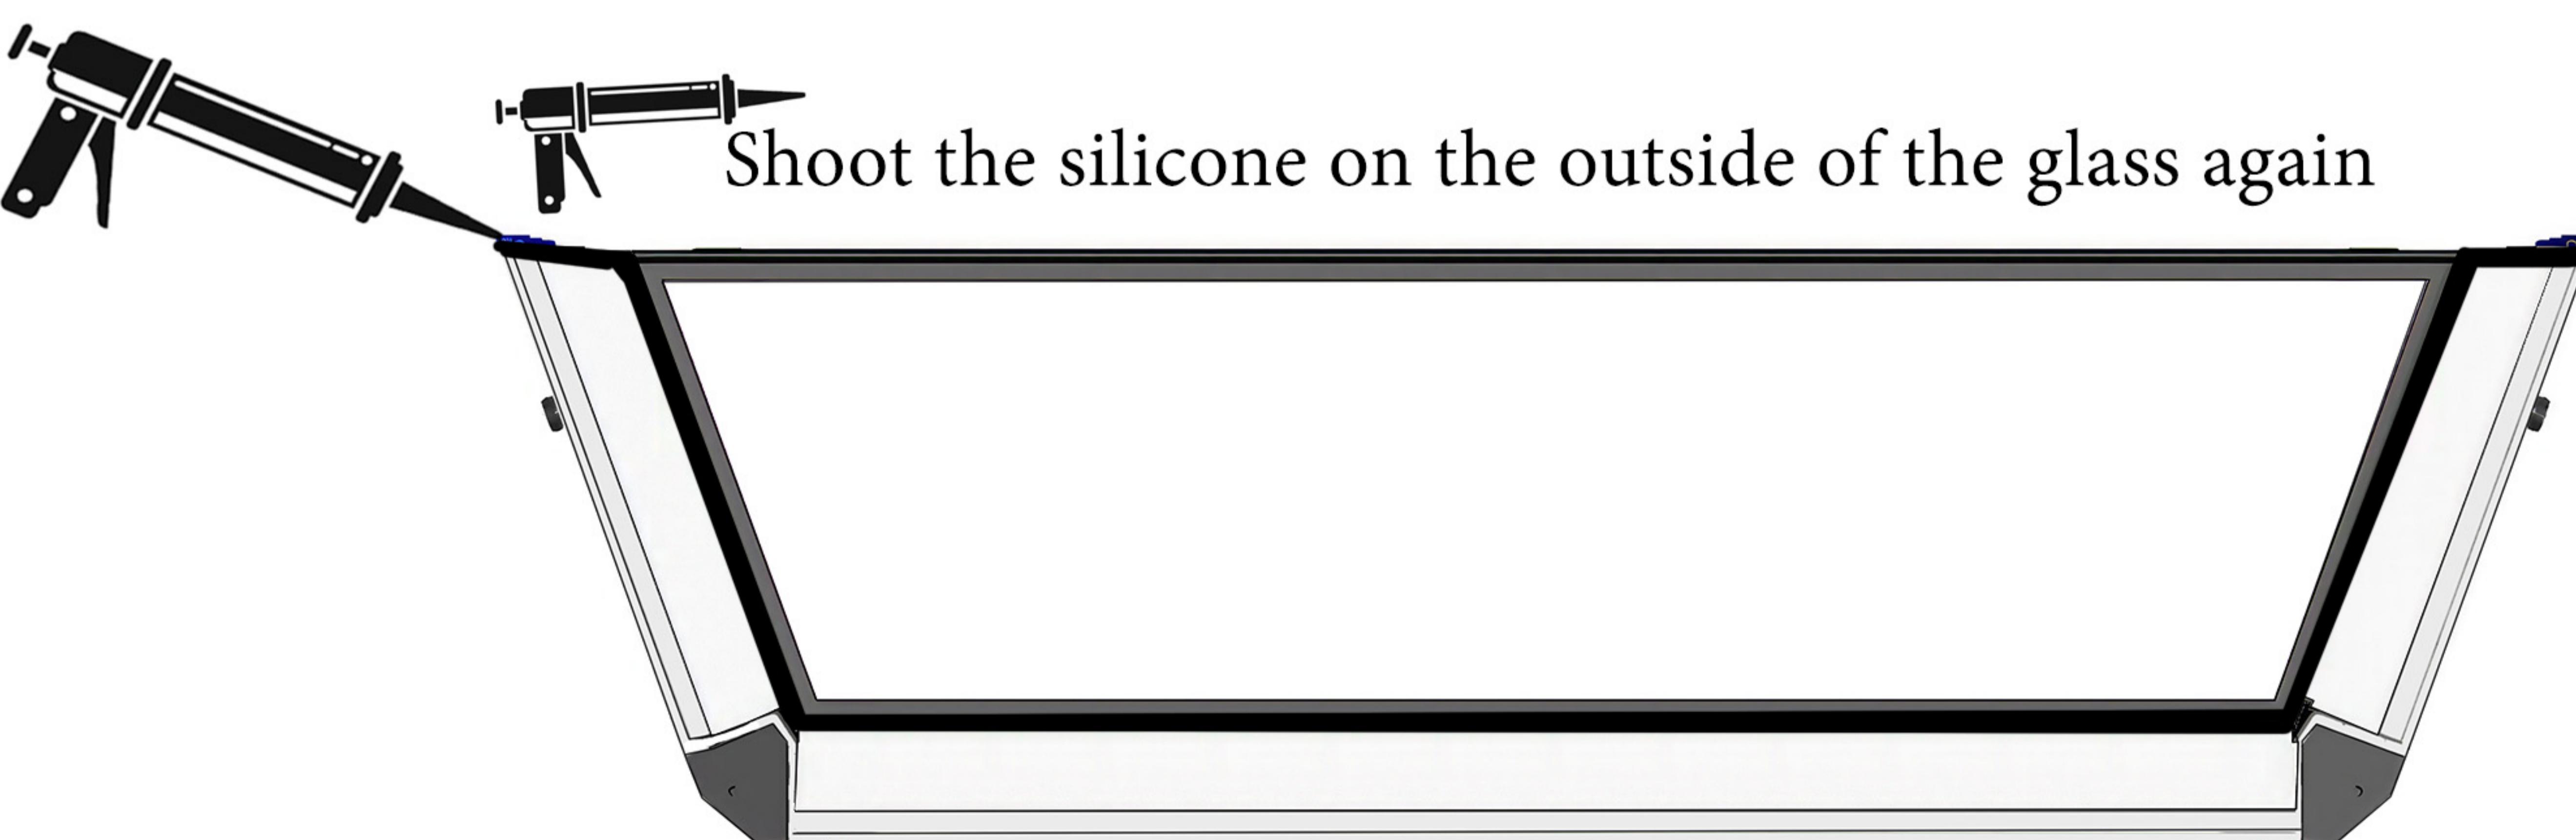

Shoot the silicone on the outside of the glass again



4. Locking the side panels to the roof

front corner cover LH-RH

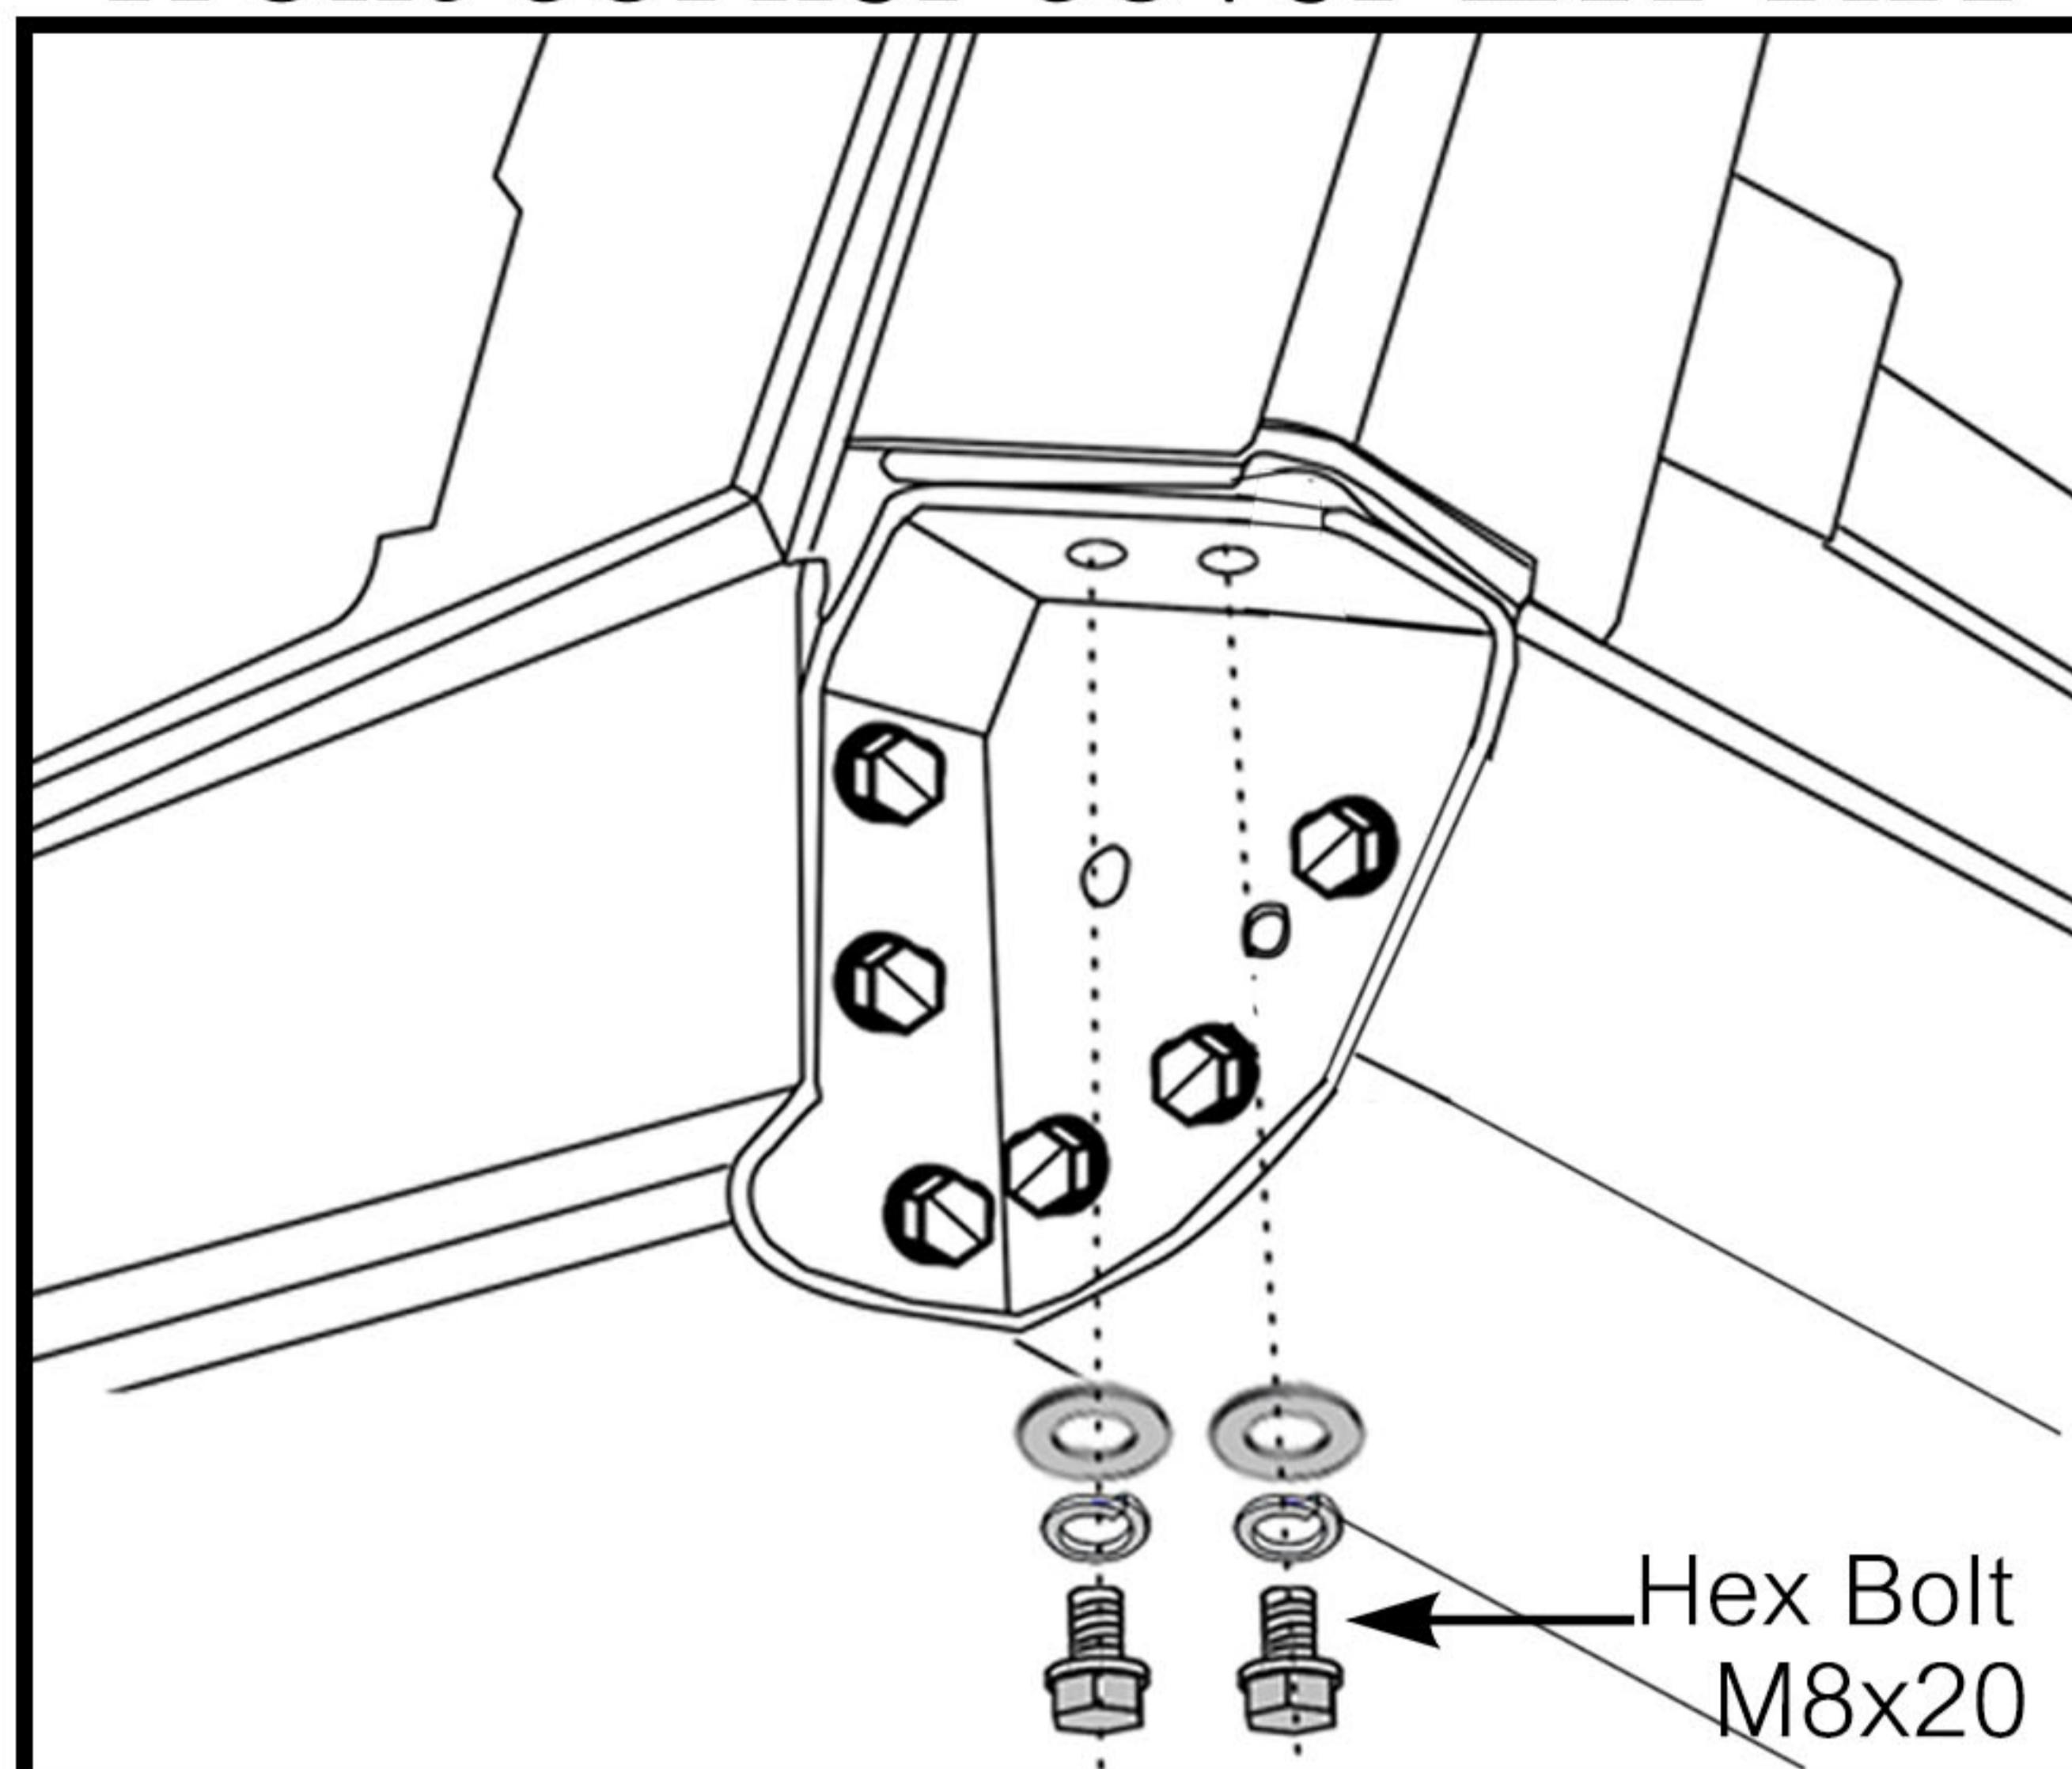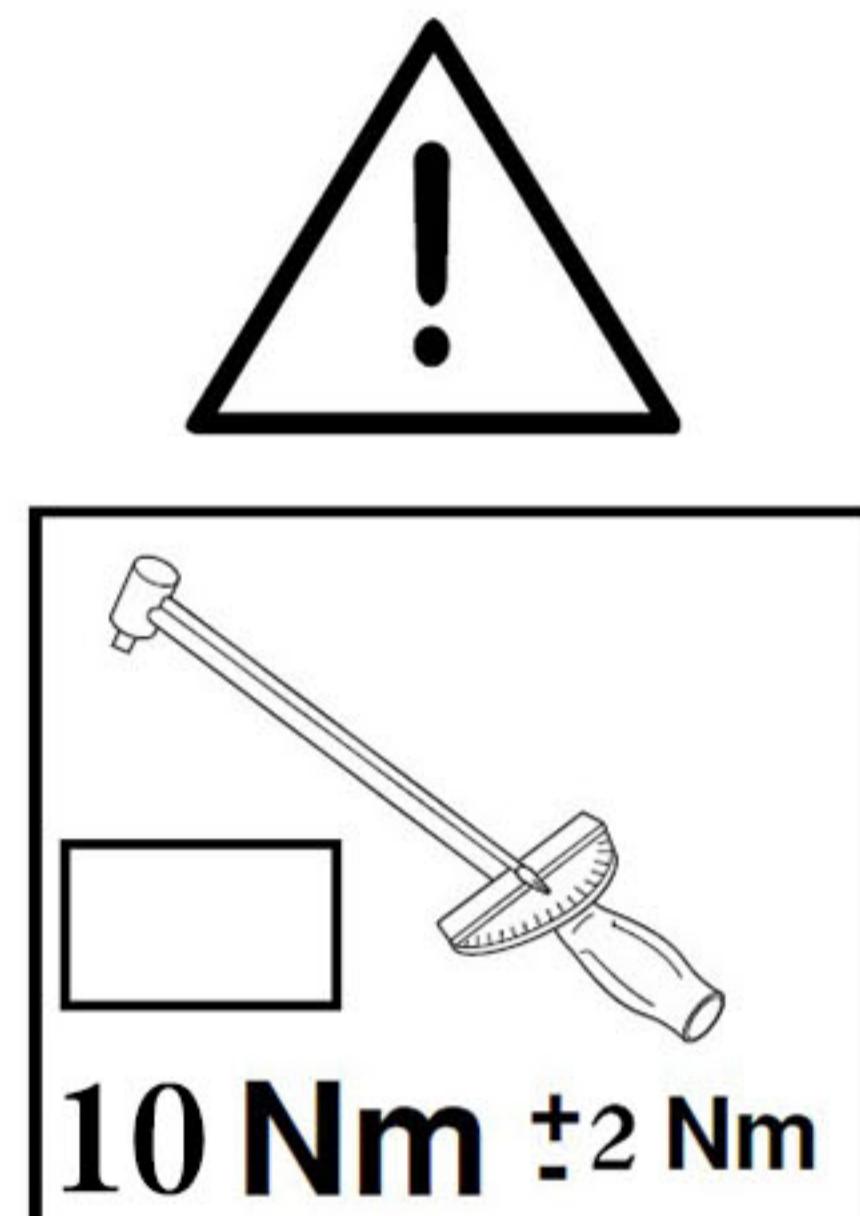


Note: Pre-assambly
fastener by hand then
tigthen by tool

Apply silicone along
the seams between
the gaps

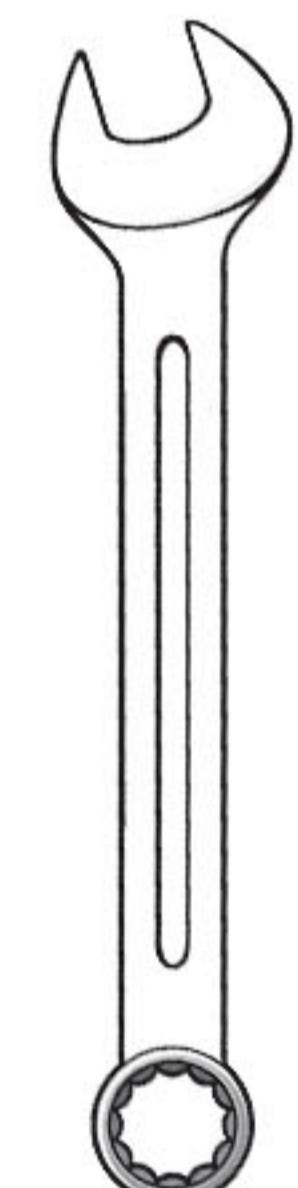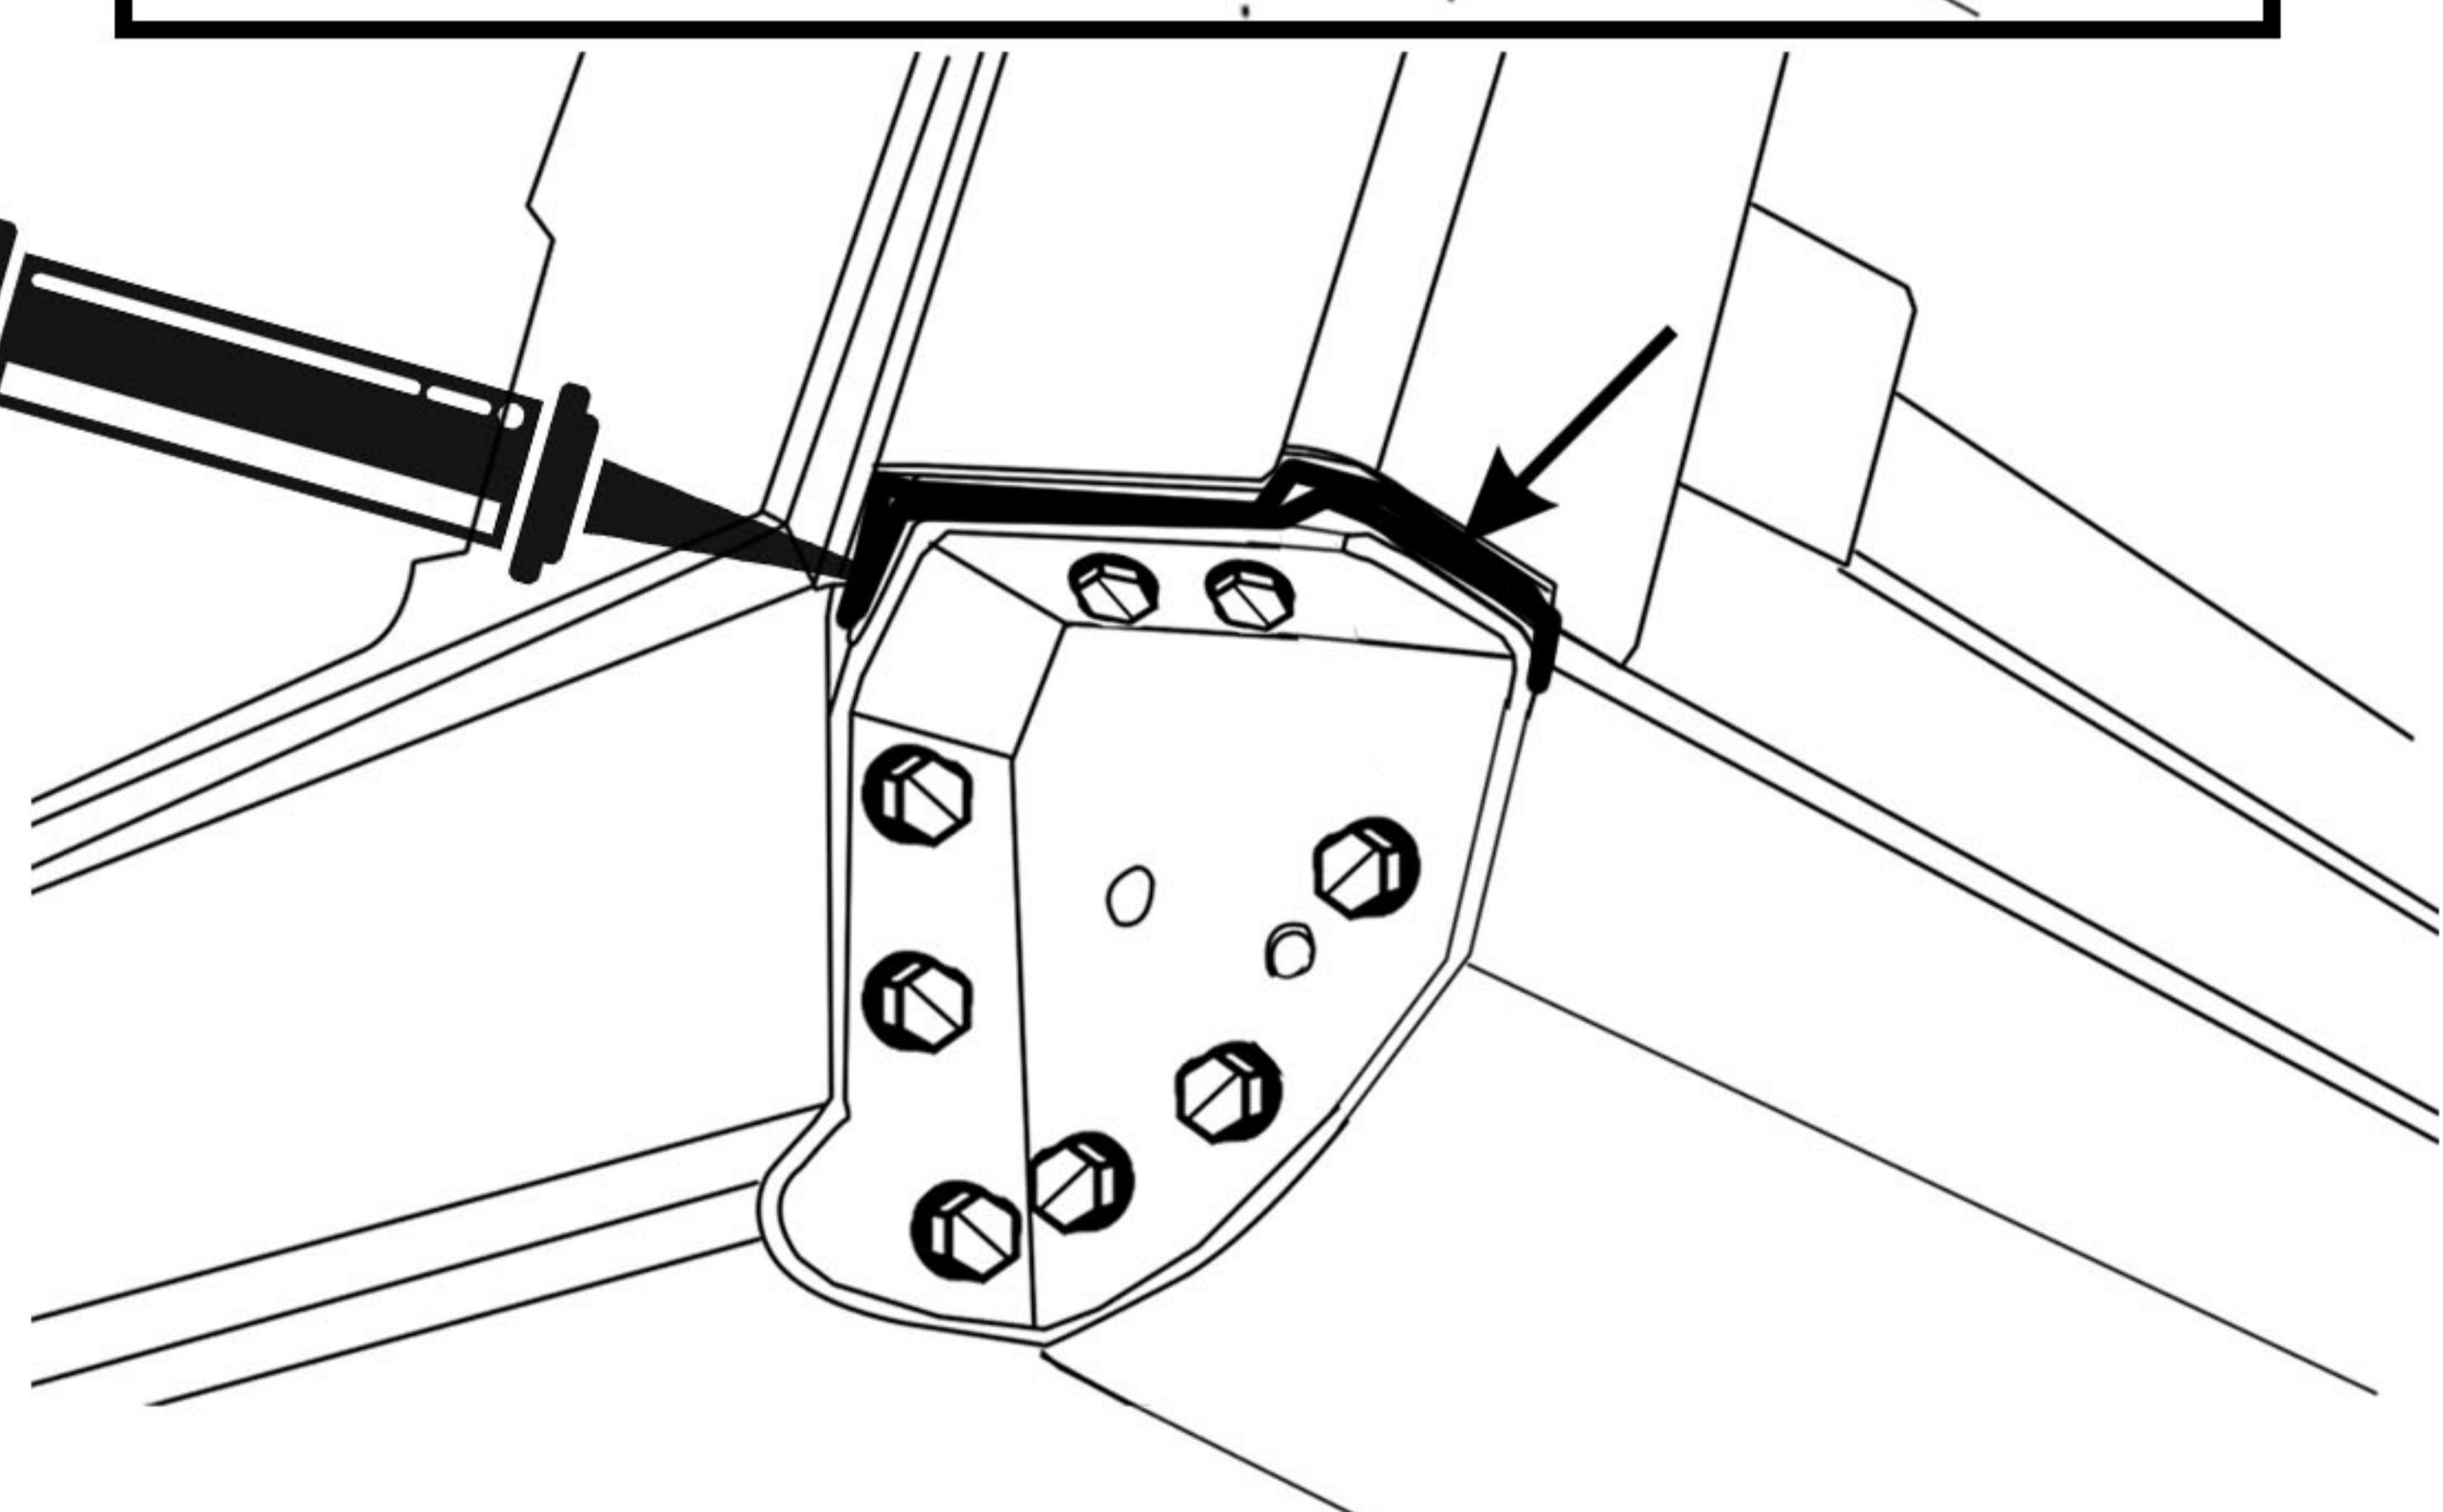


rear corner cover LH-RH

No.13

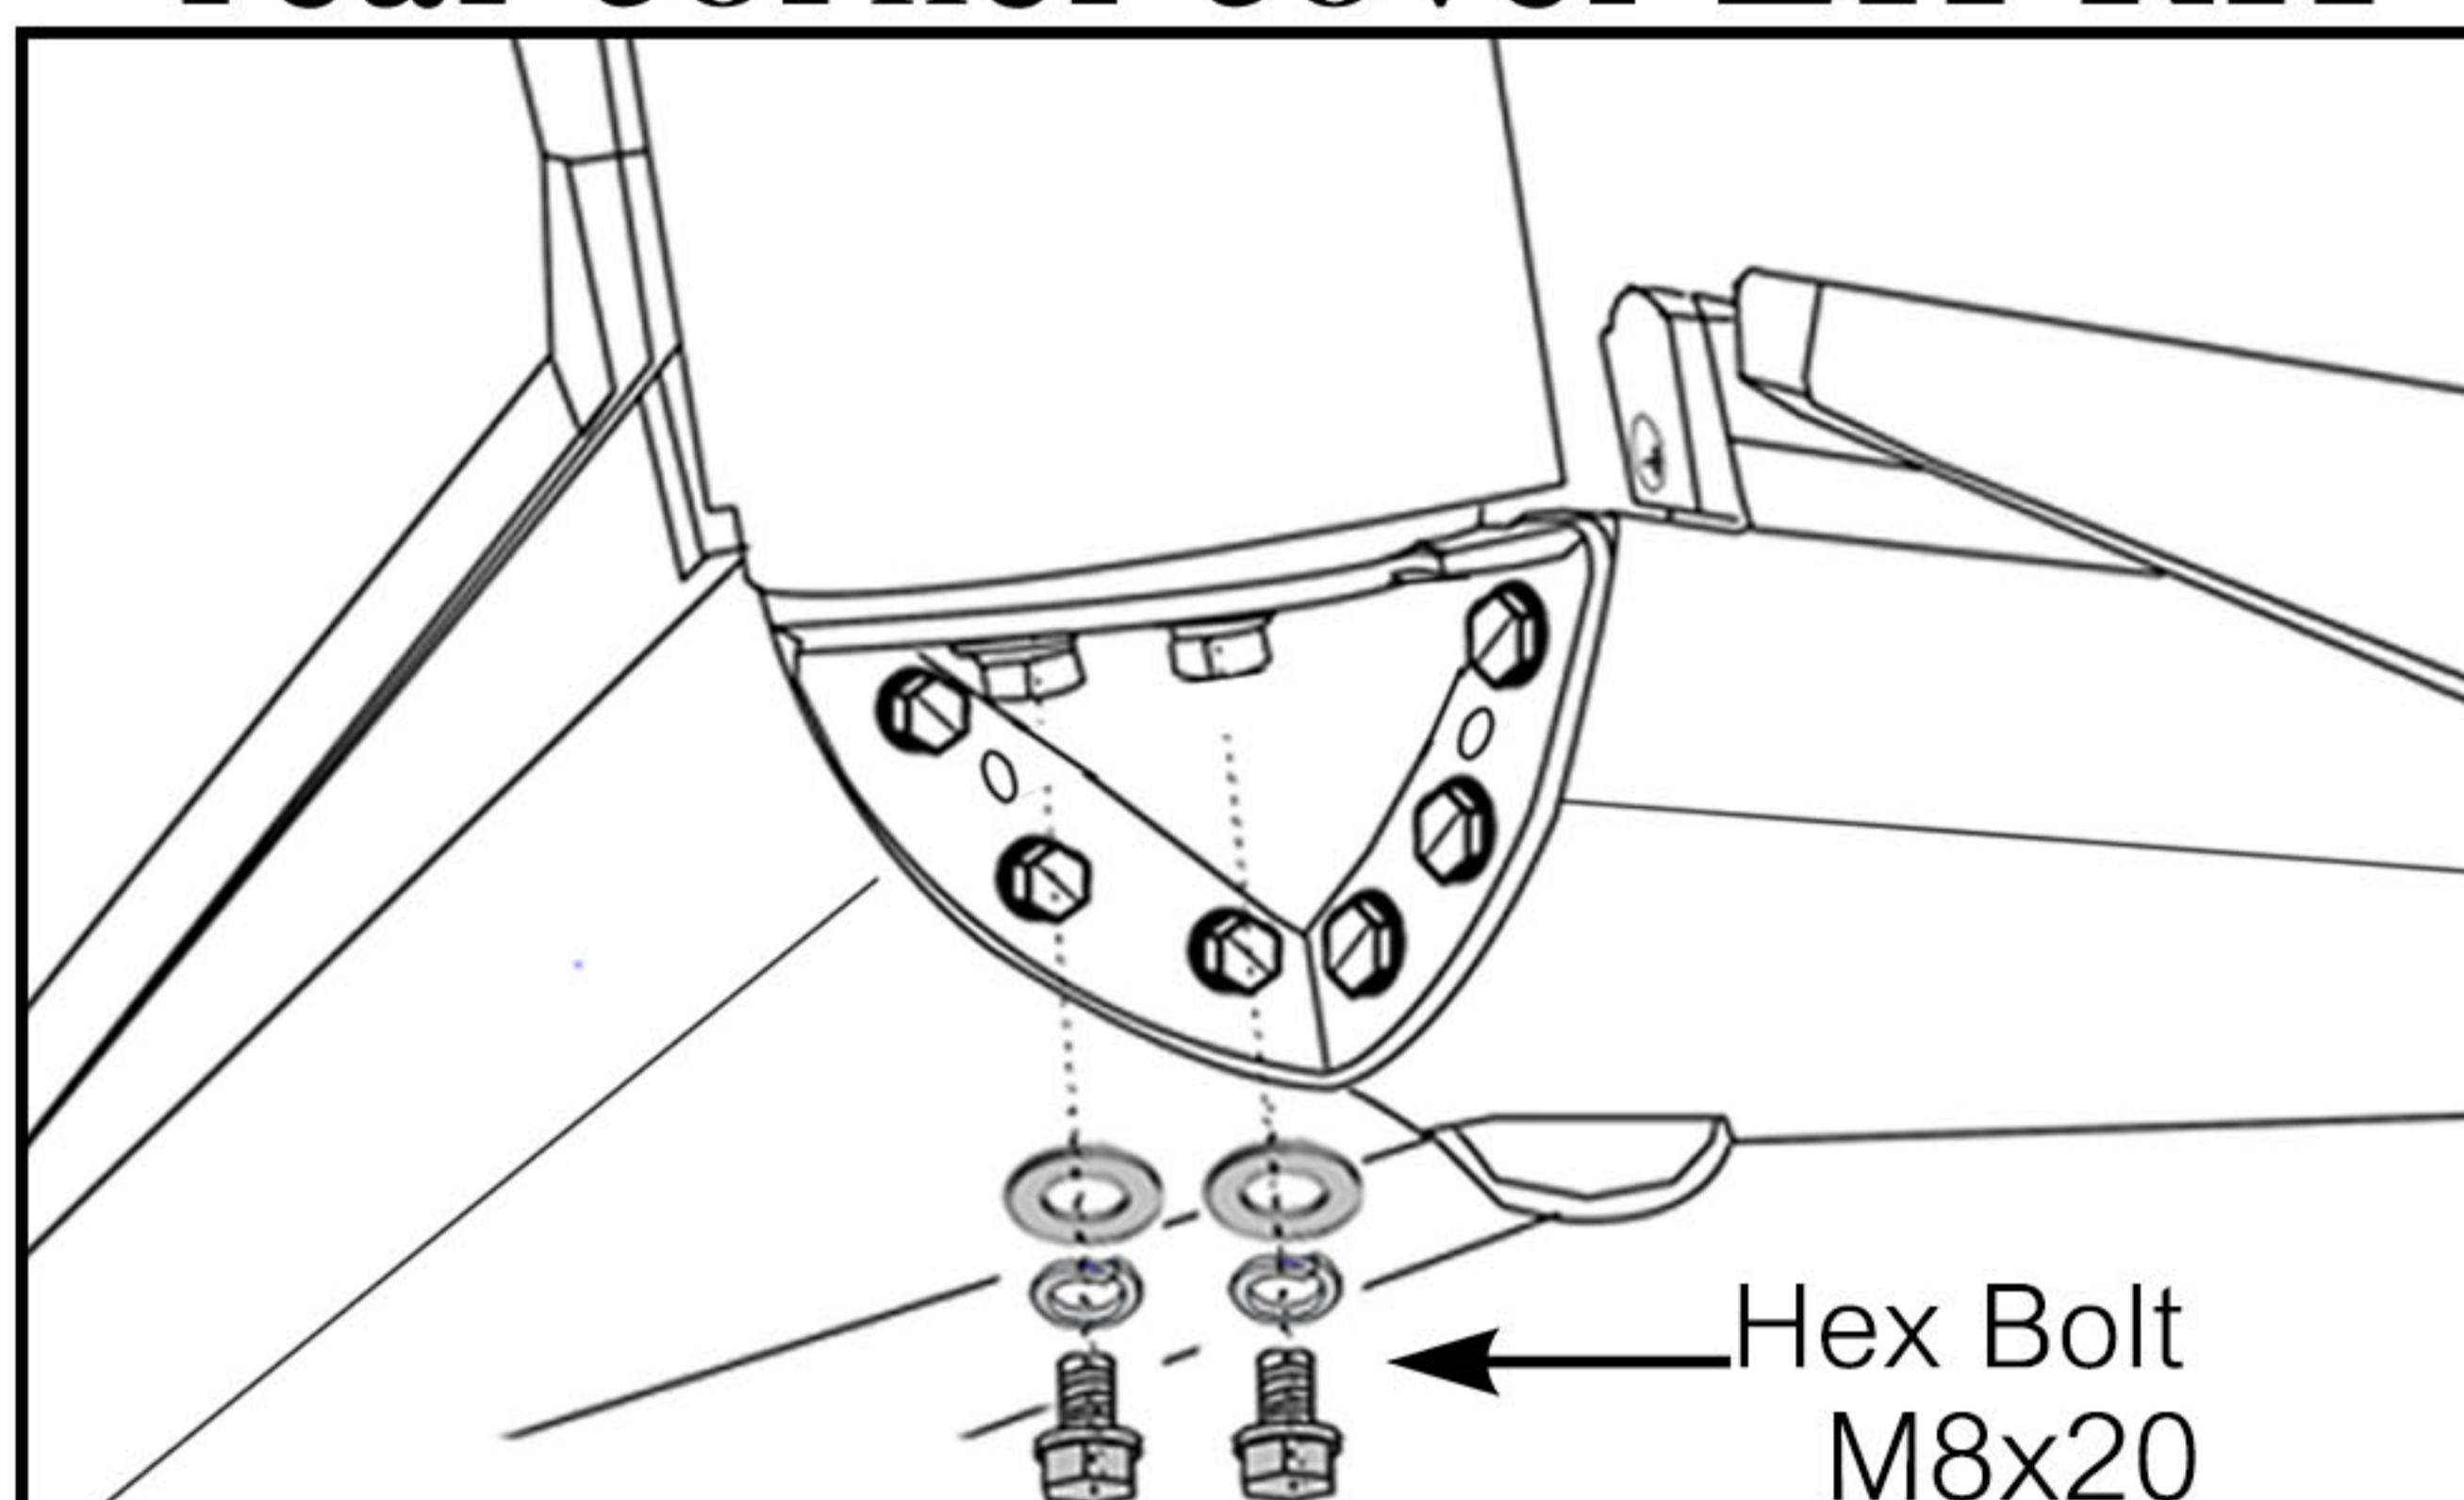


connect brake light

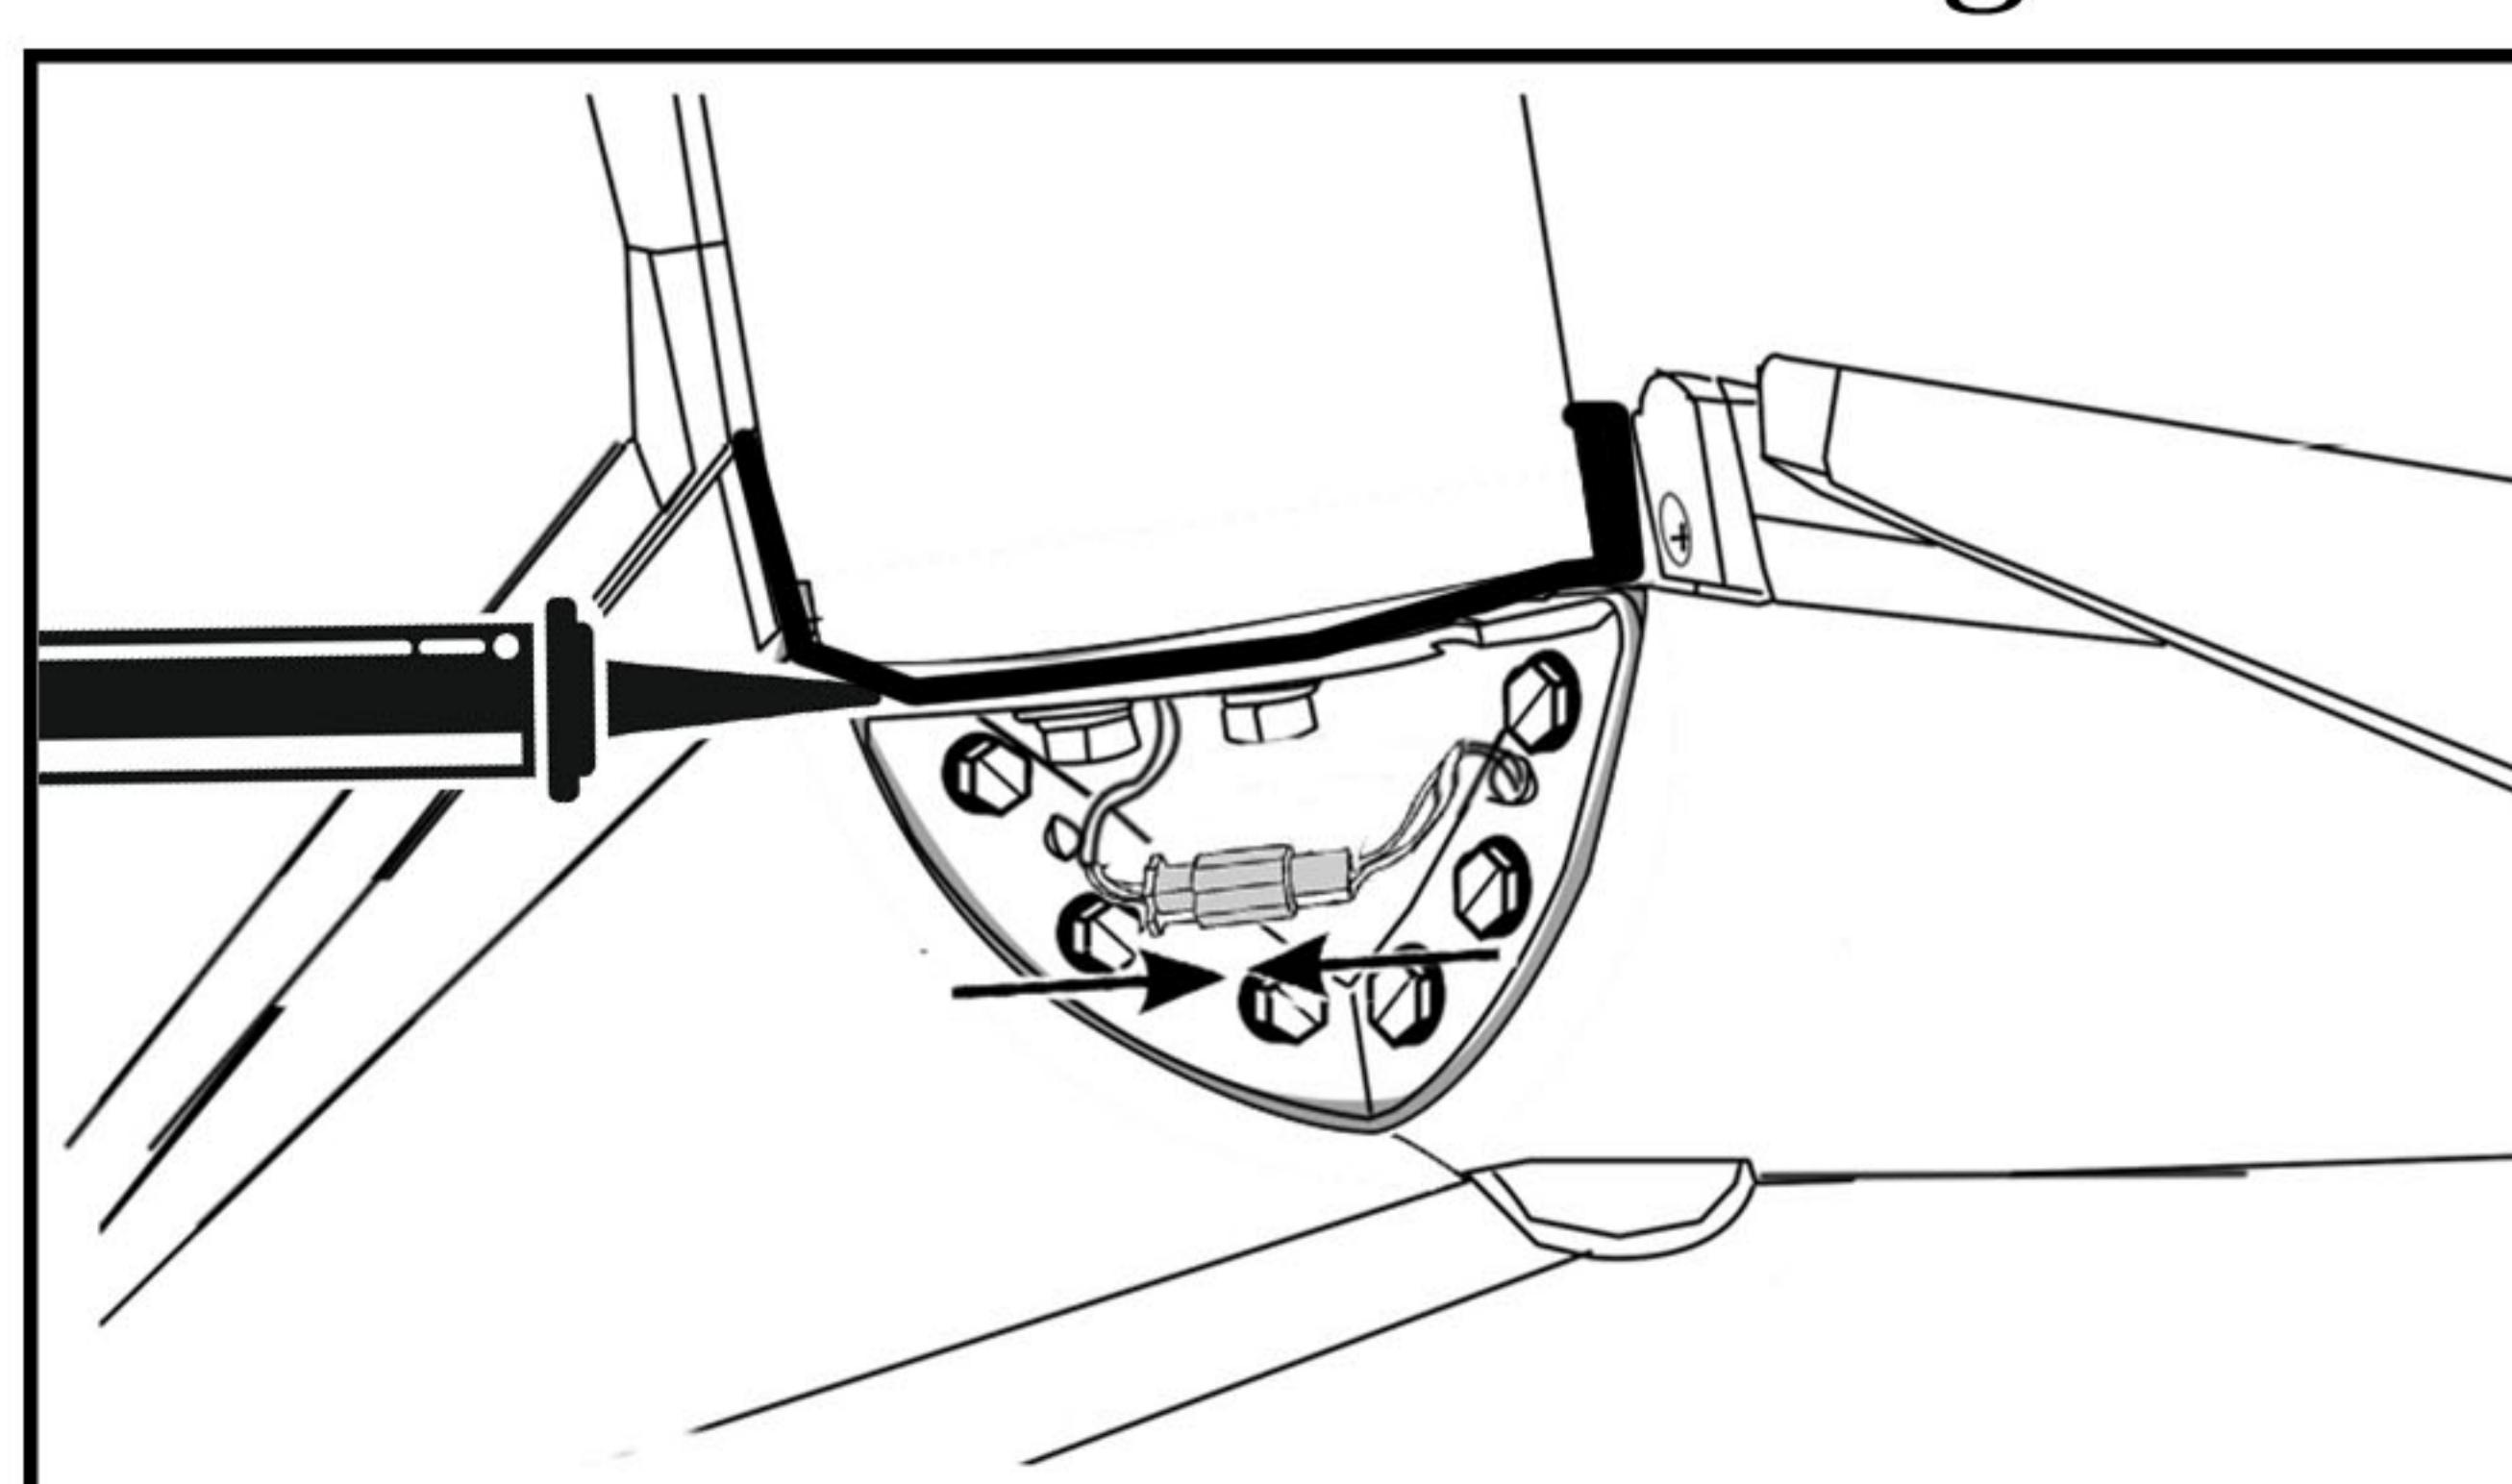


5. Assembly rear water channel

Water channel



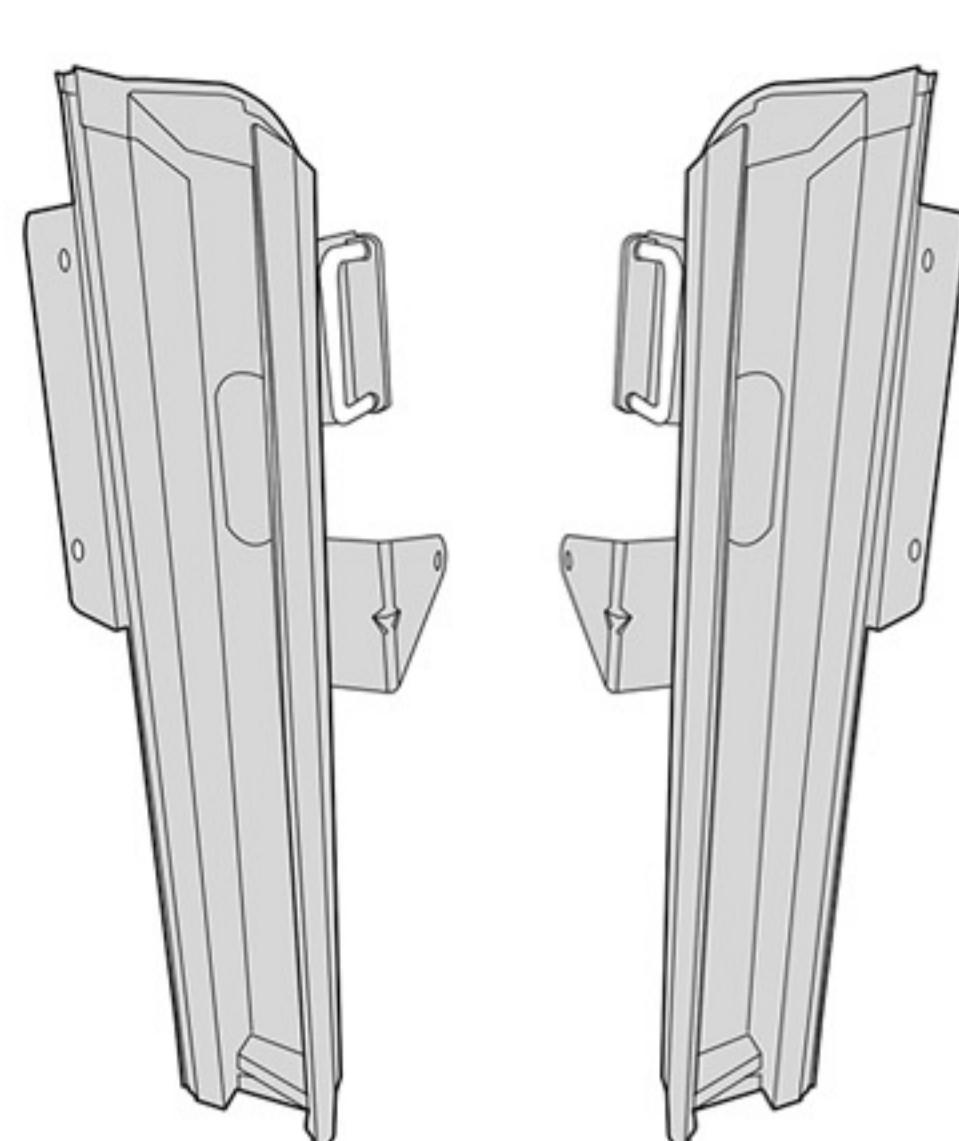


Hex bolt M8x20 = 4 set

Pan Head Tapping Screw 6x3/8 = 4 pcs.

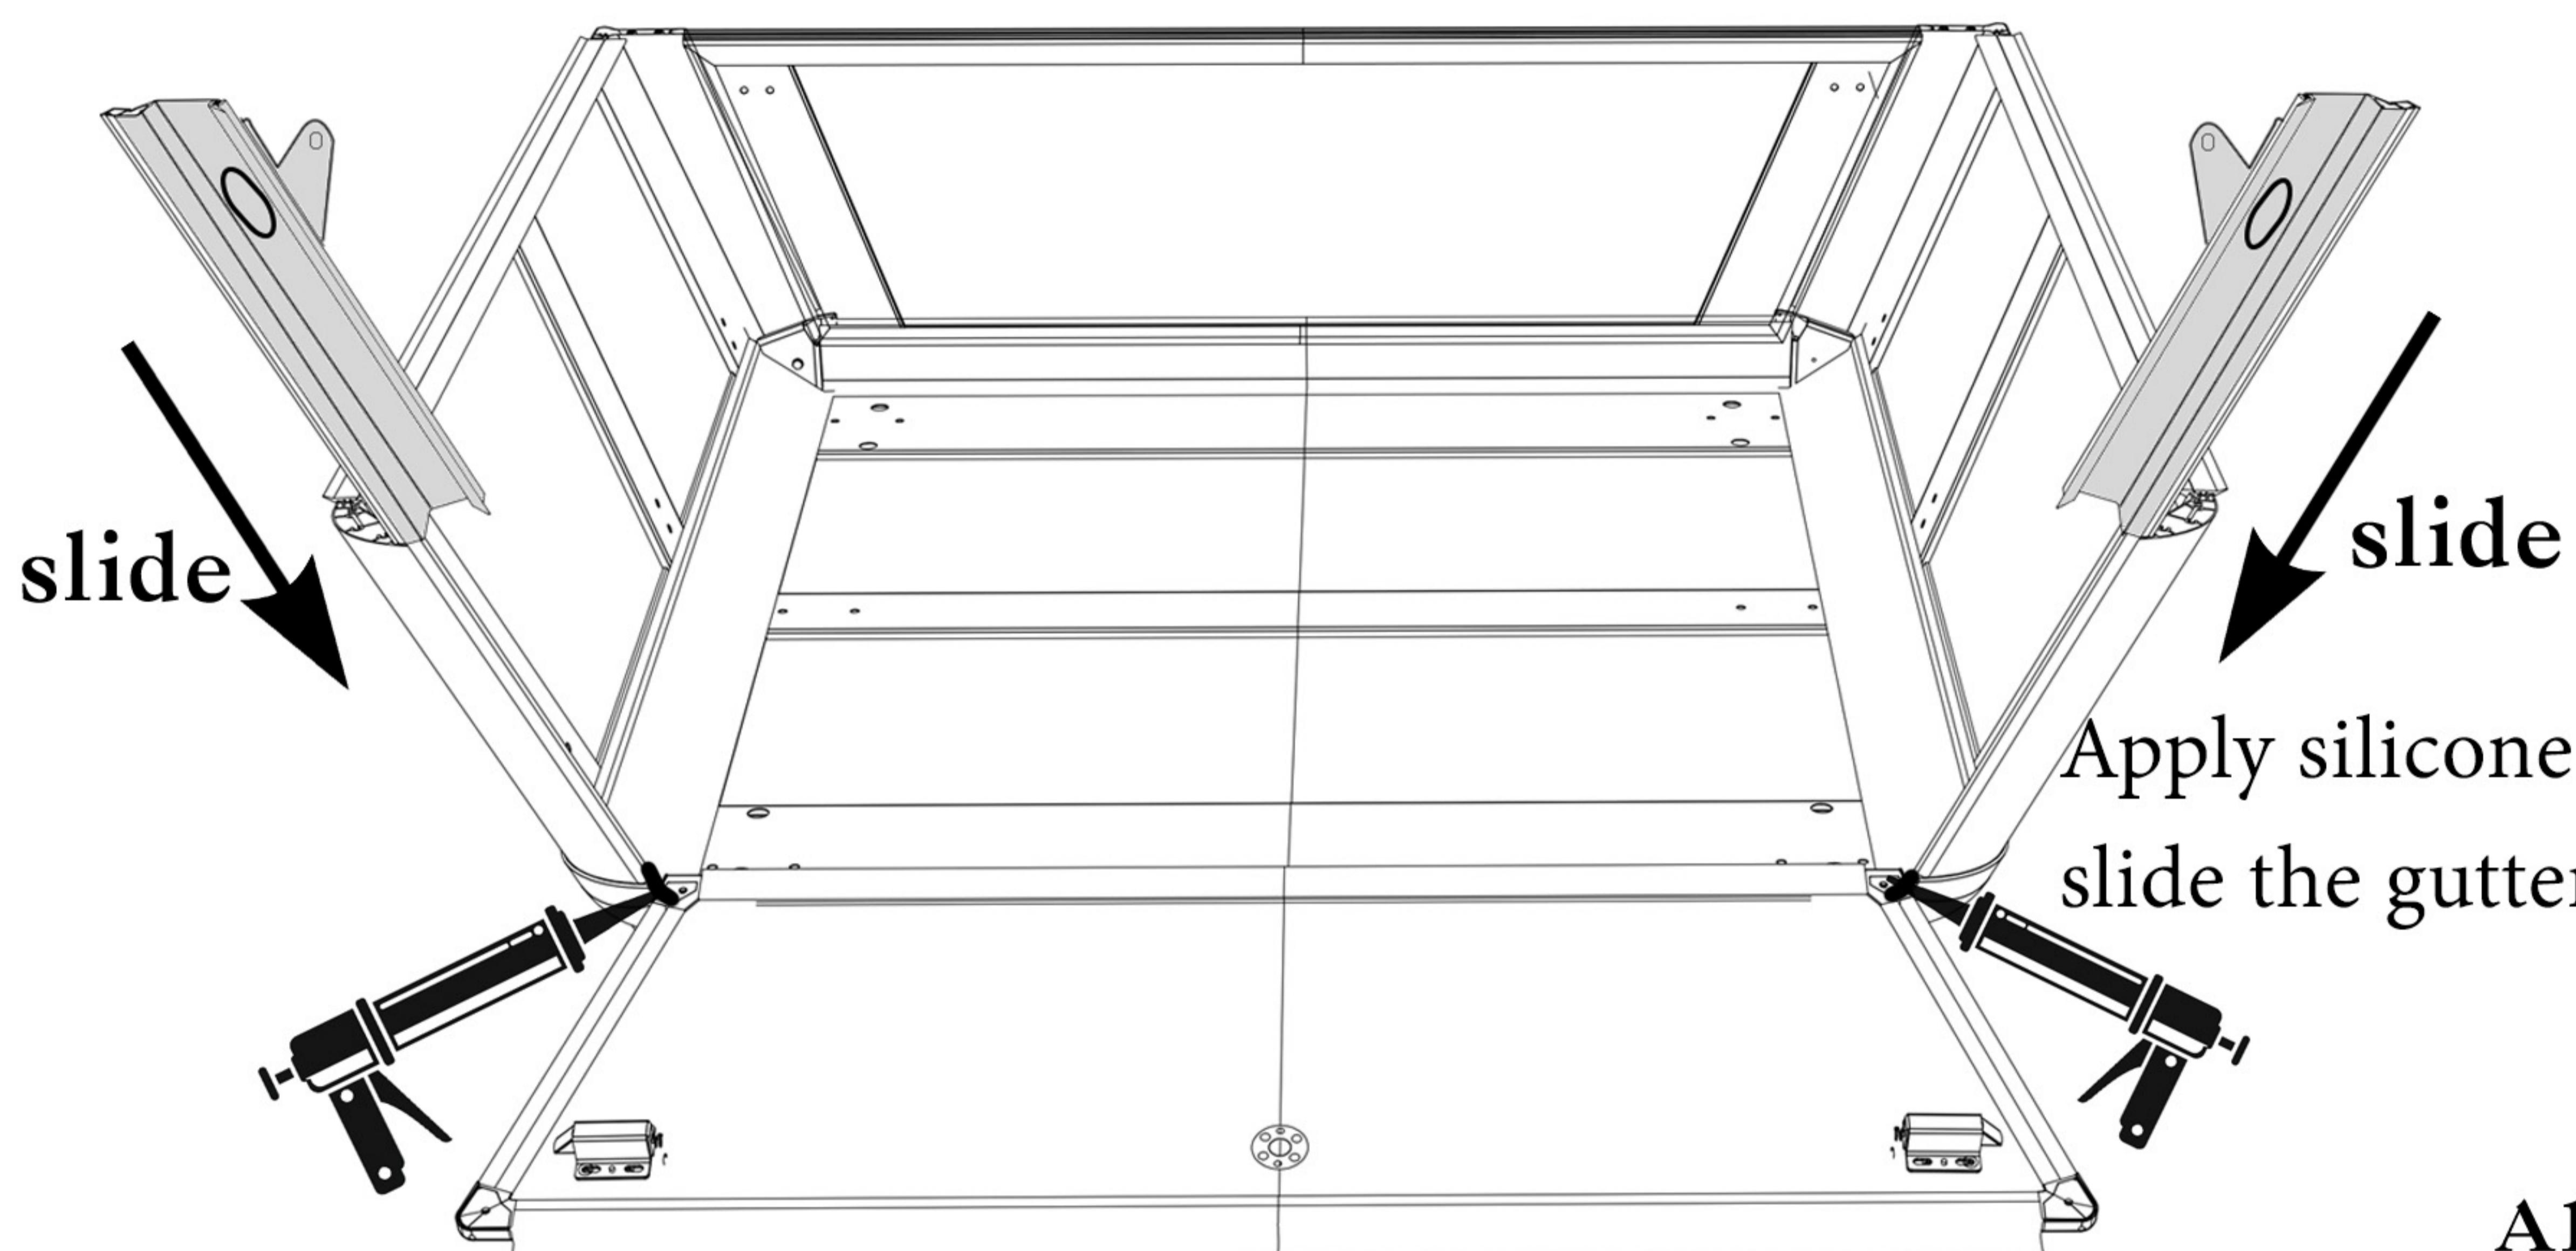

**Note: Pre-assambly fastener
by hand then tigthen by tool**

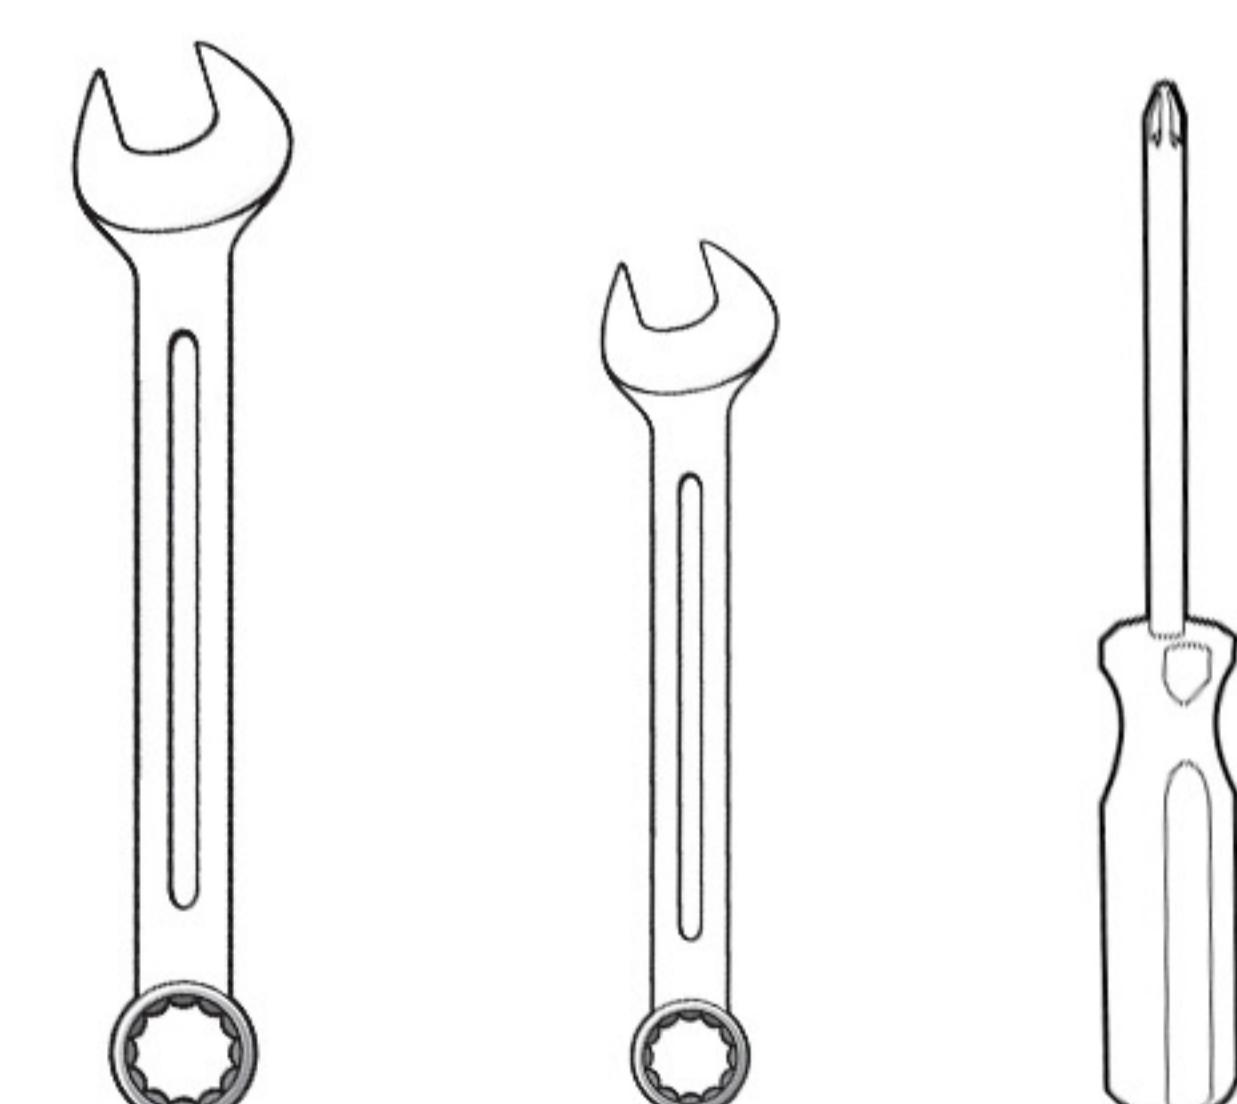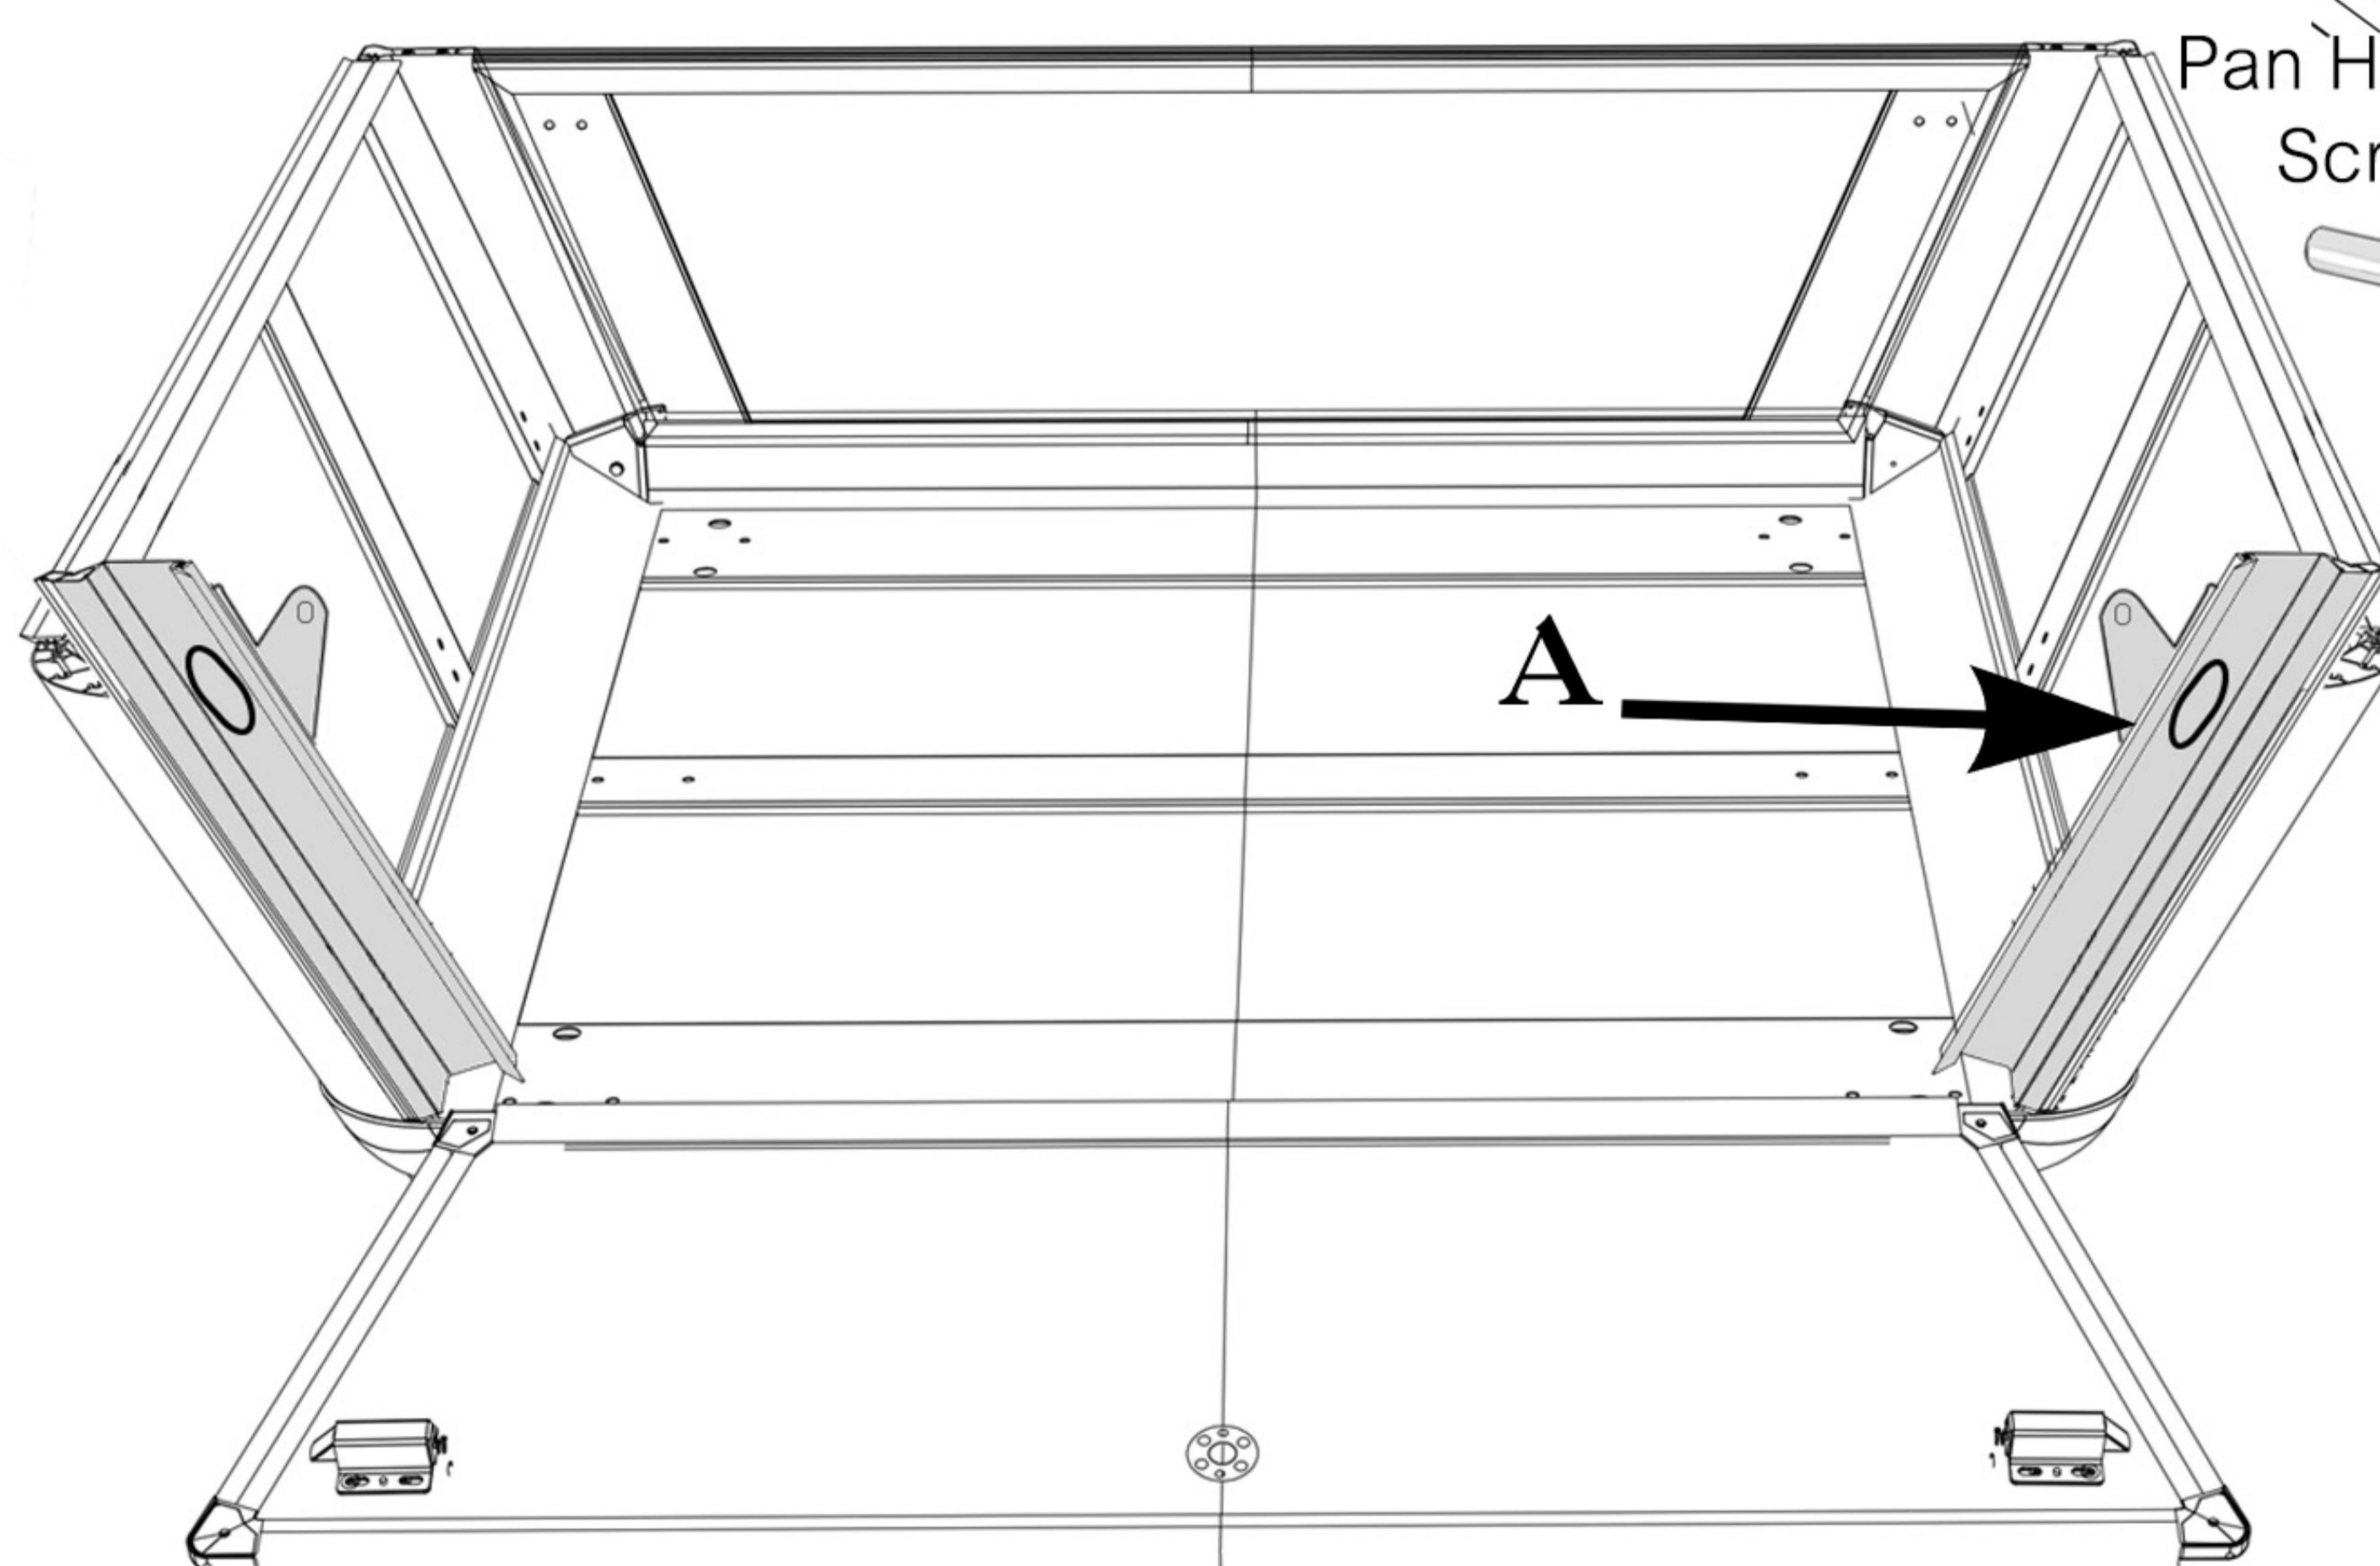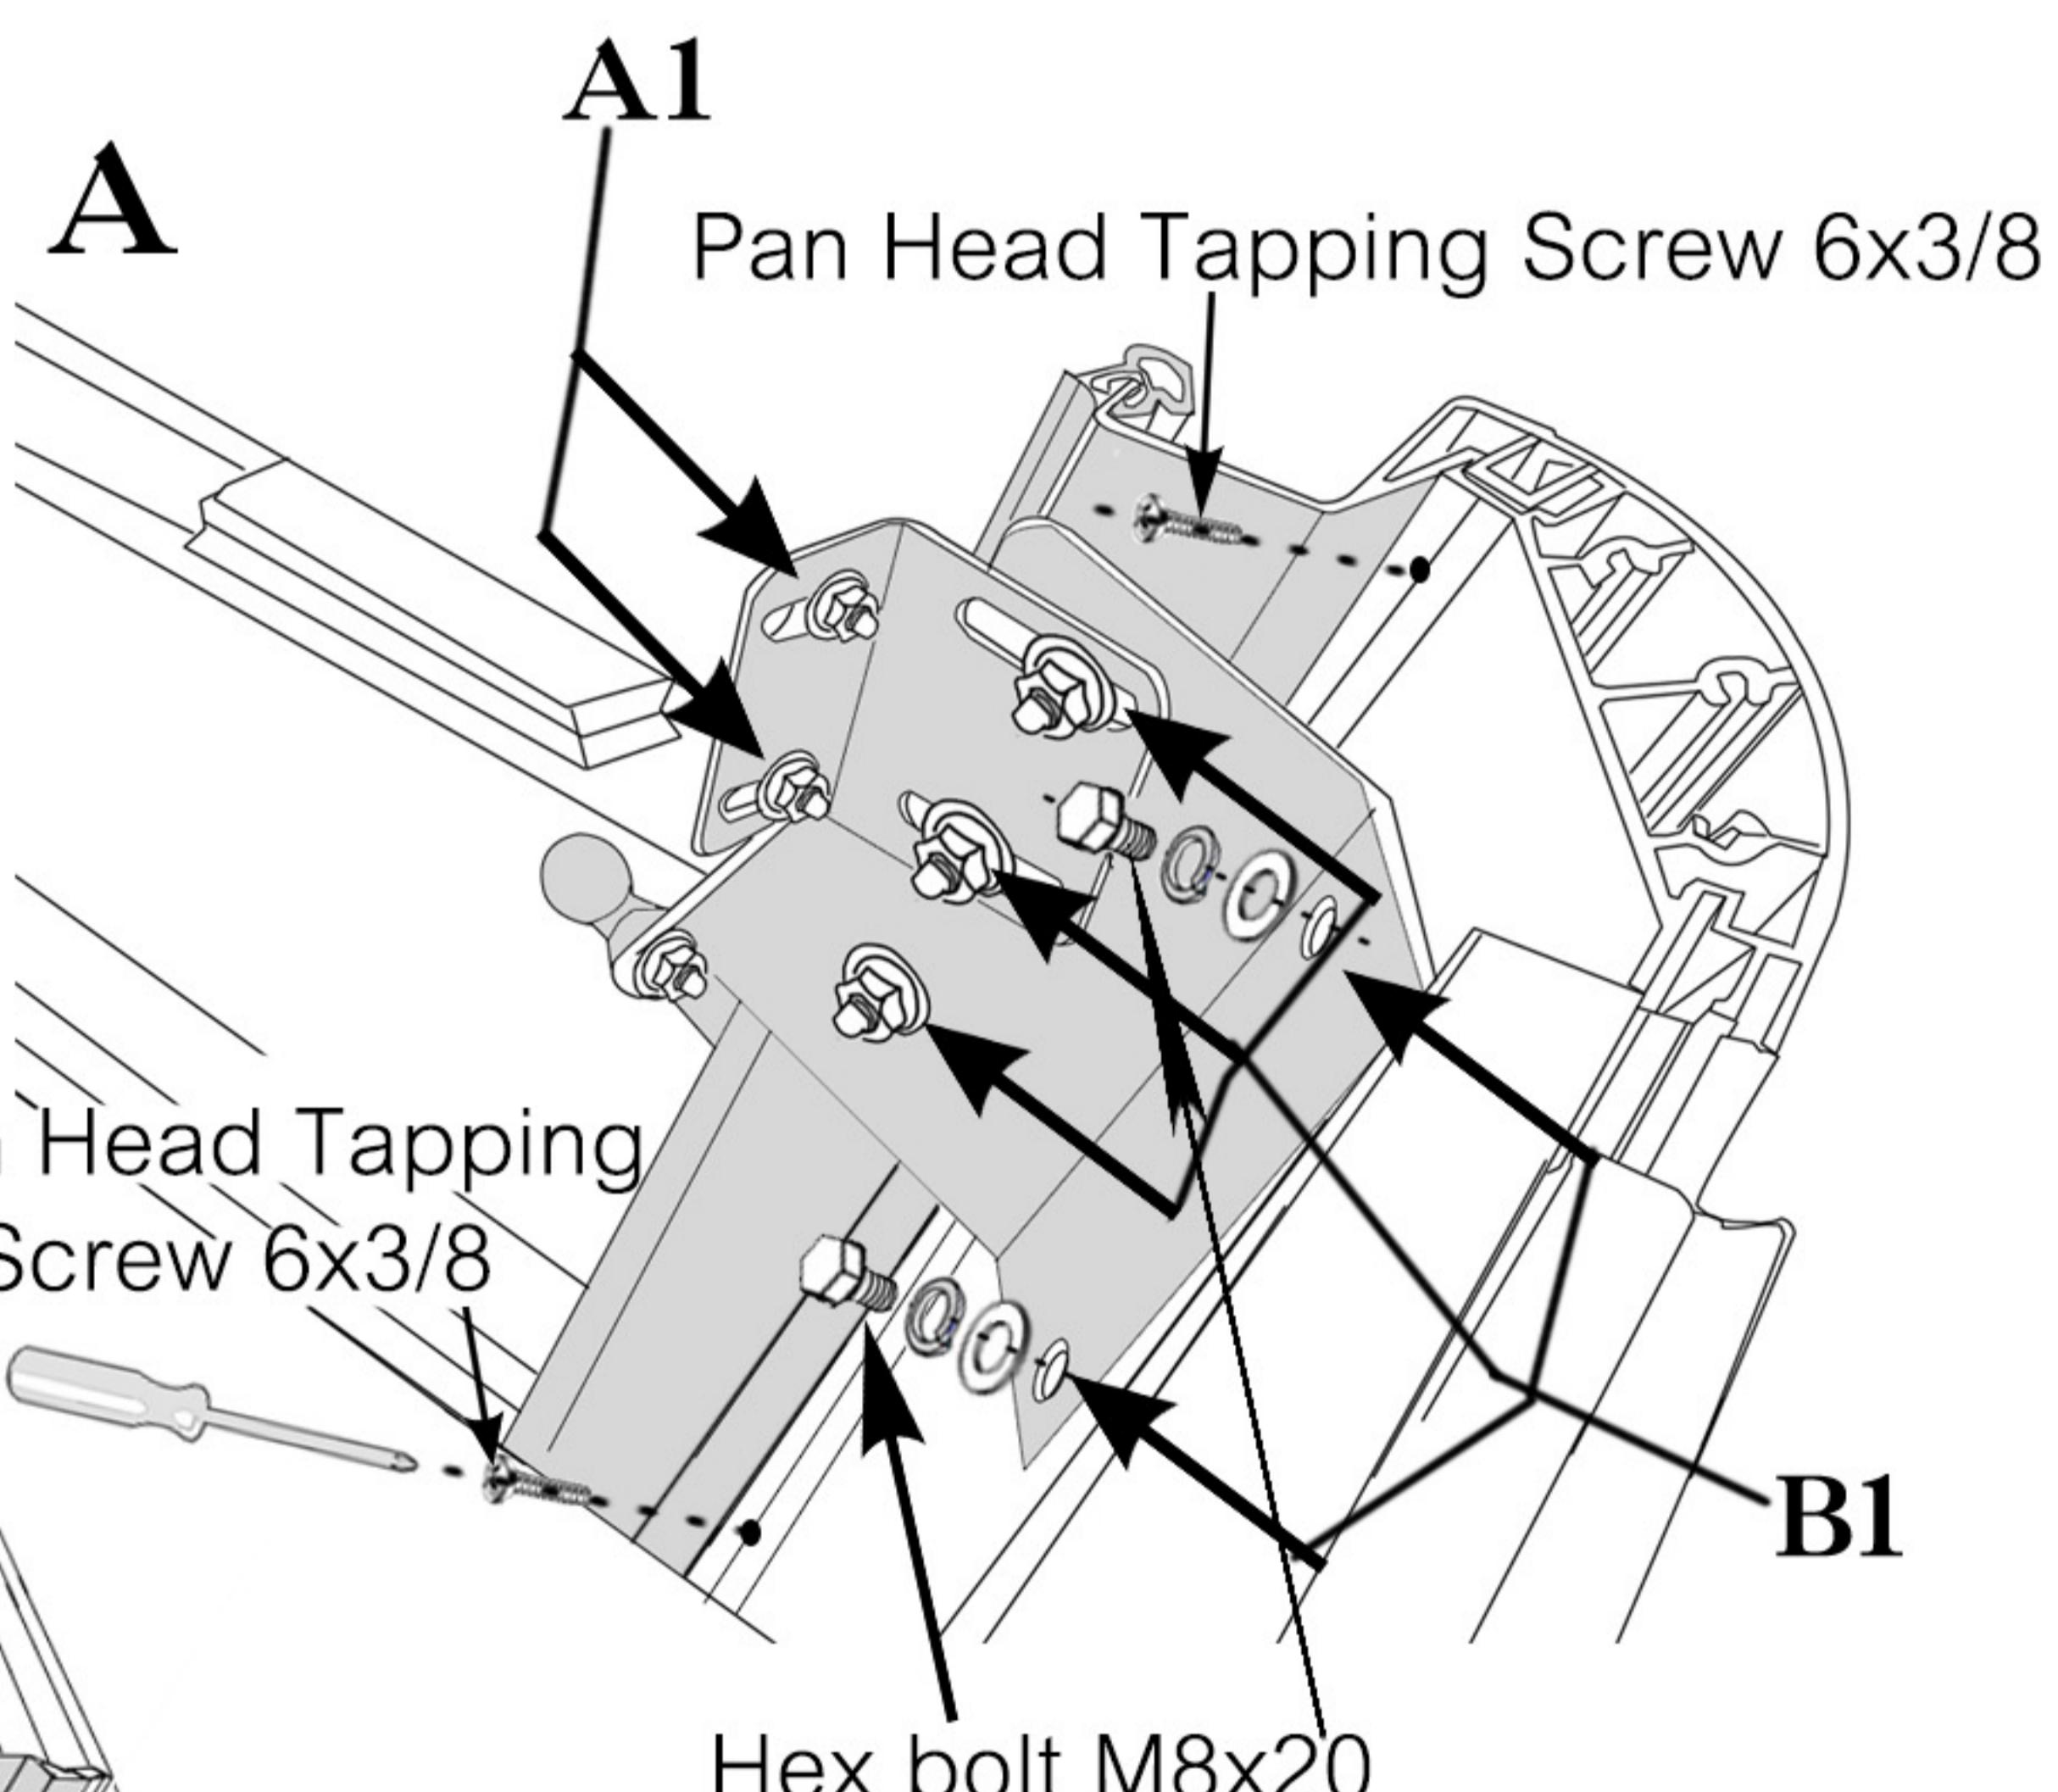


WARNING

- USE ONLY THE TOOLS RECOMMENDED IN THIS GUIDE
- USE ONLY THE HARDWARE THAT HAS BEEN PROVIDED
- HANDLE ALL COMPONENTS WITH CARE
- IT IS RECOMMENDED THAT FOUR PEOPLE LIFT/LOWER THE CANOPY
- NEVER USE ACETONE ON THE PAINTWORK
- AVOID PINCHING/SQUASHING HANDS




No.12 No.10

6. Attache front corner cover LH-RH

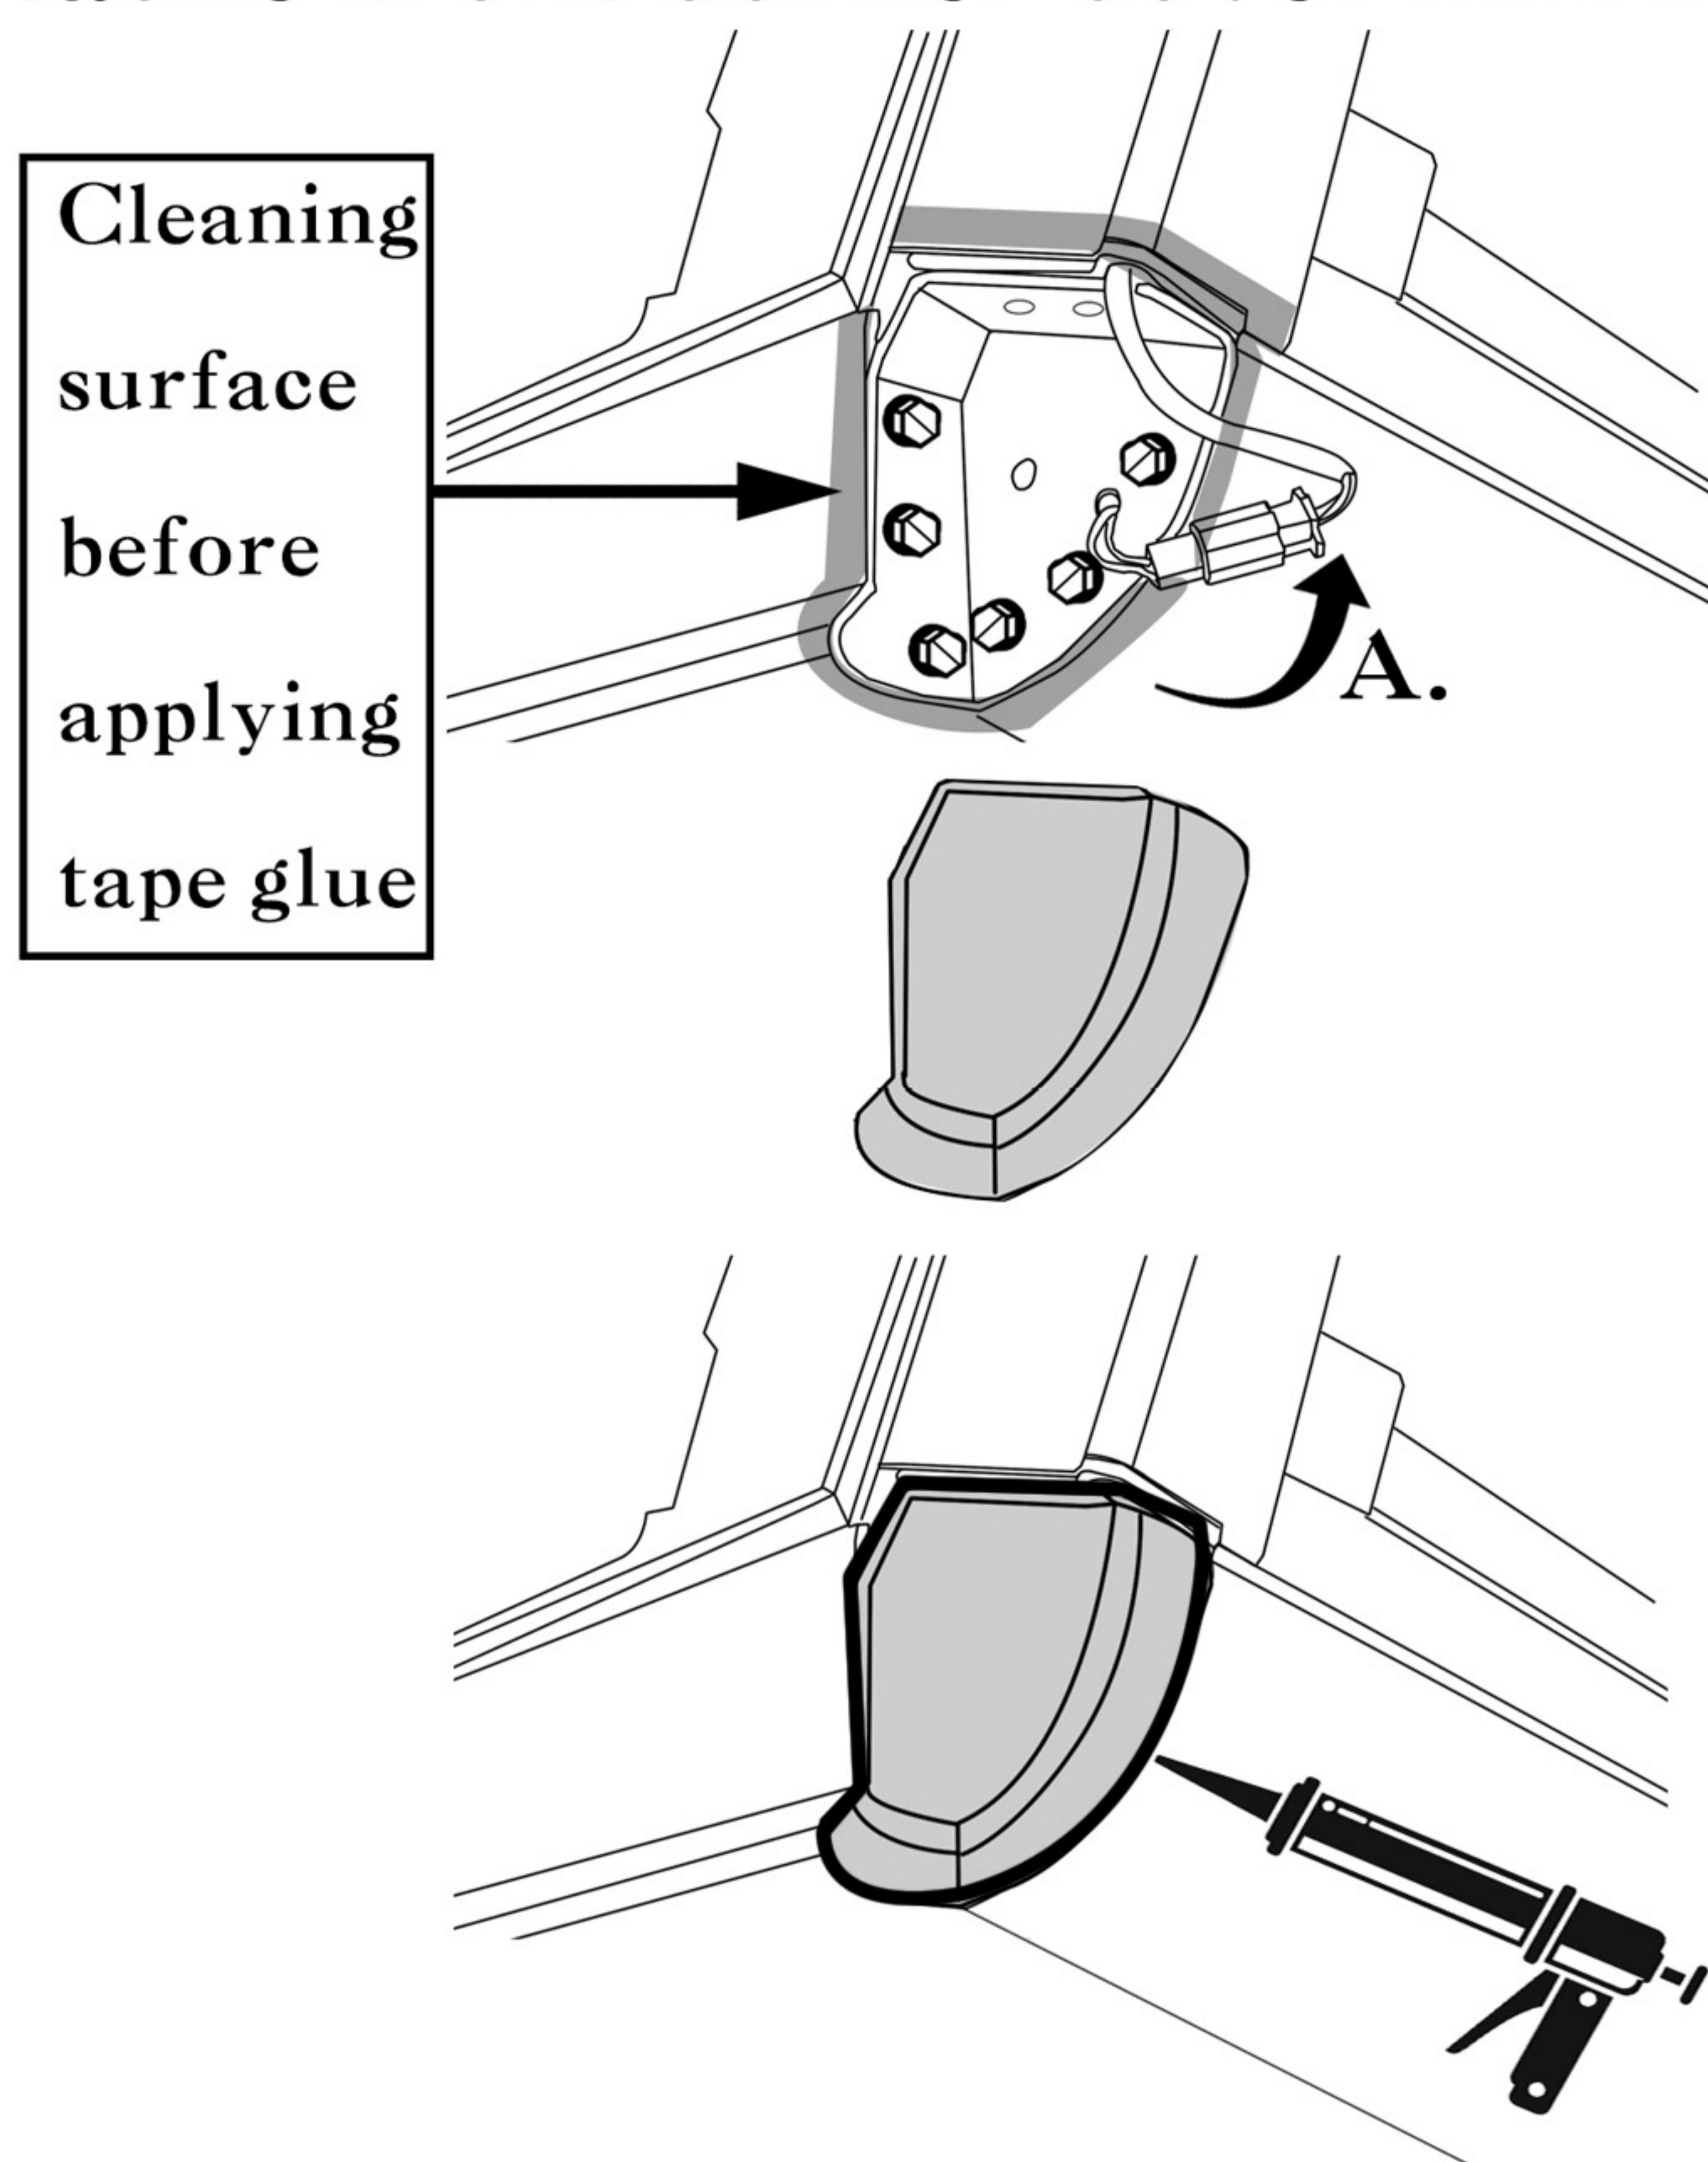


A. tighten the bolt from inside

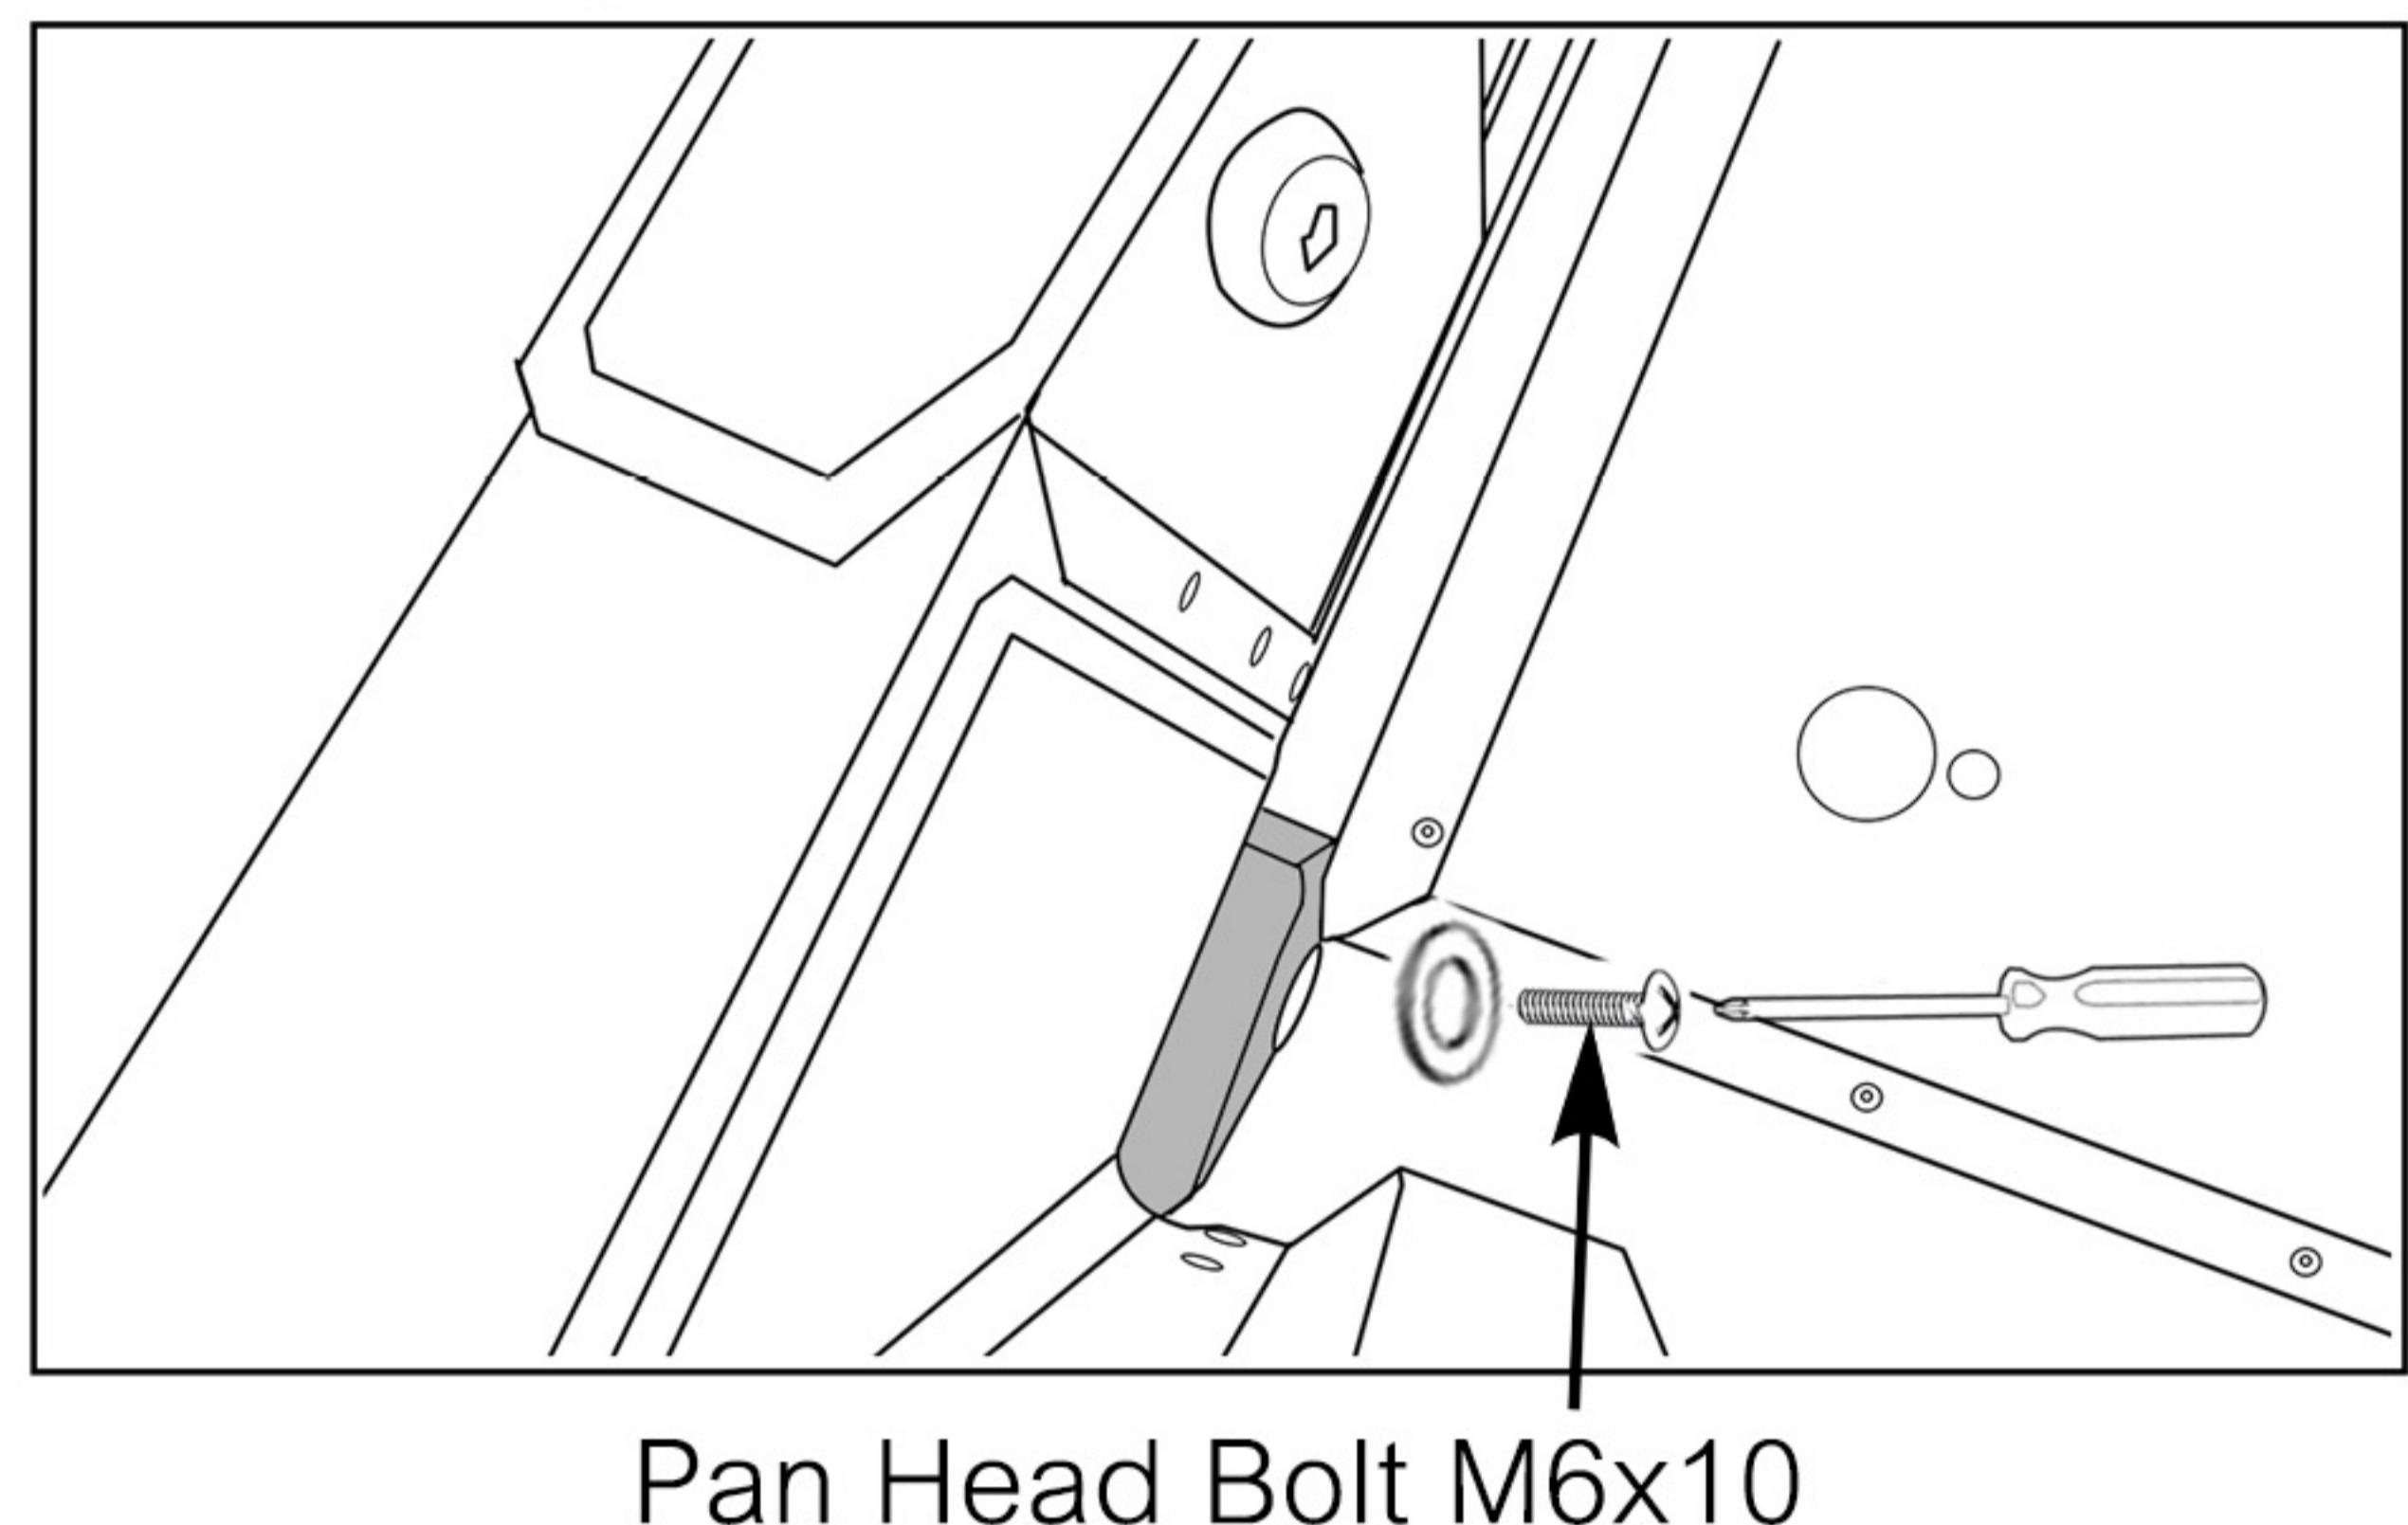


Pan Head Bolt M6x10

7. Attache rear corner cover LH-RH

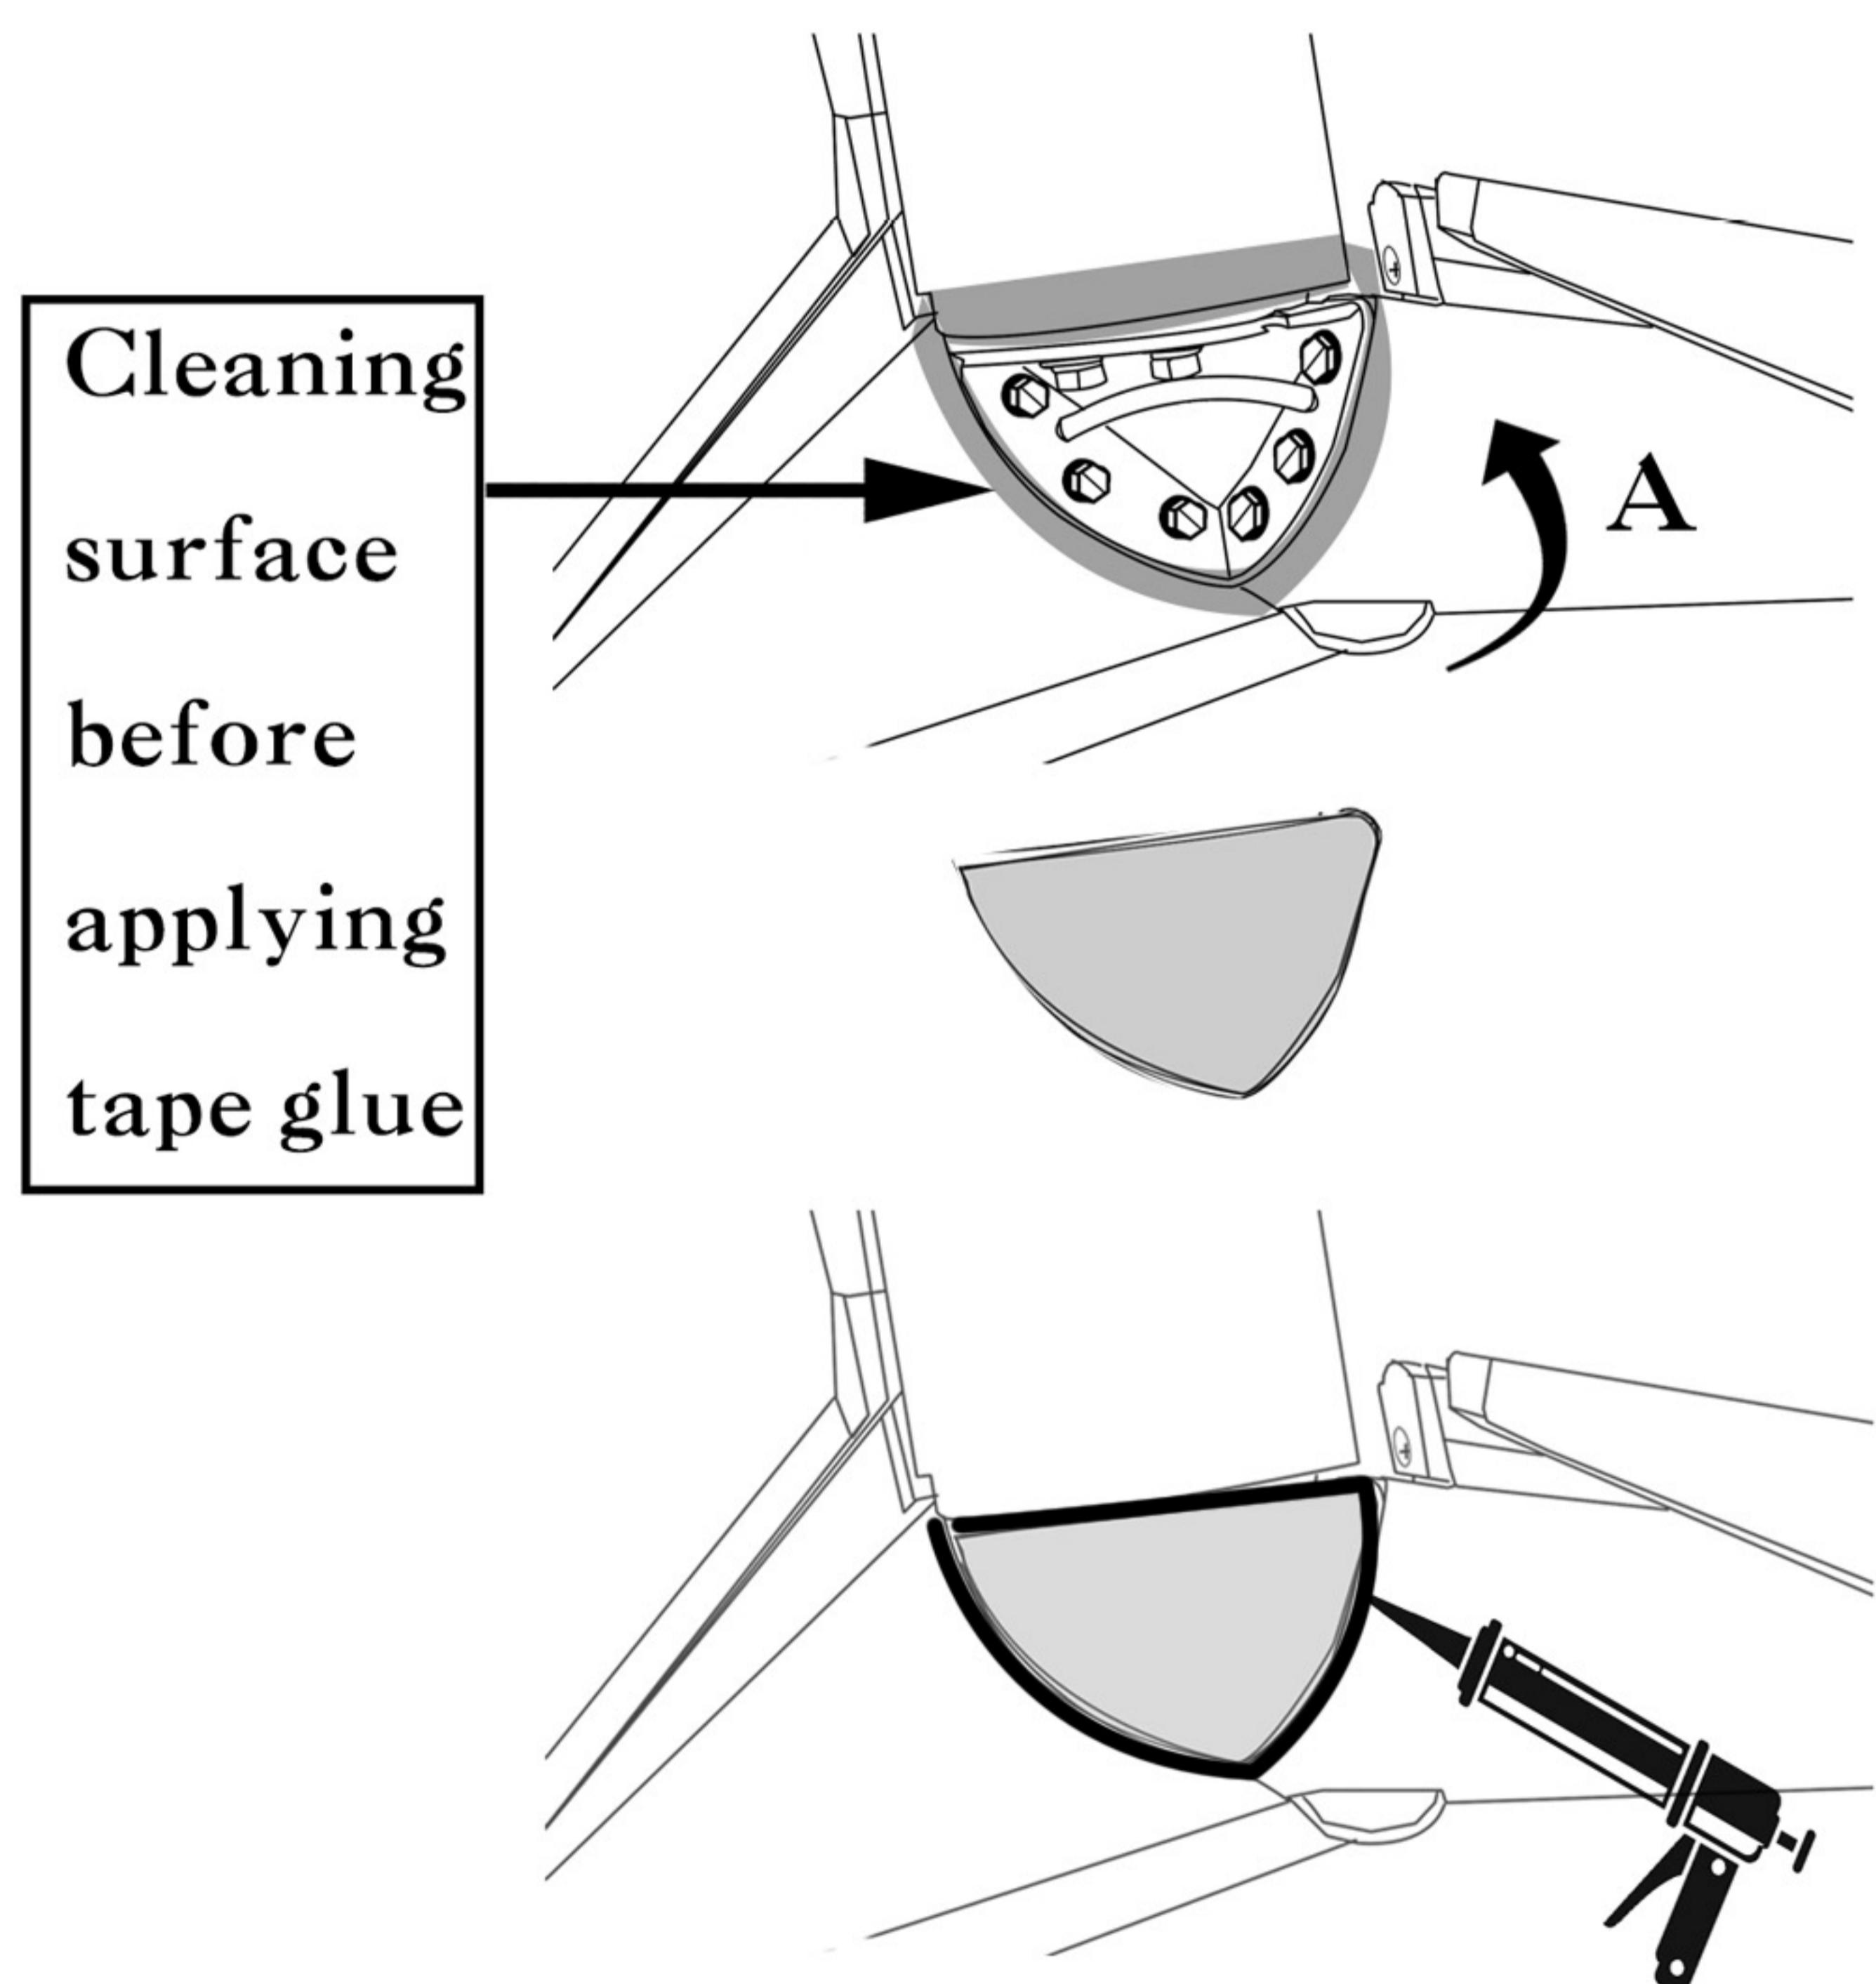


A. tighten the bolt from inside

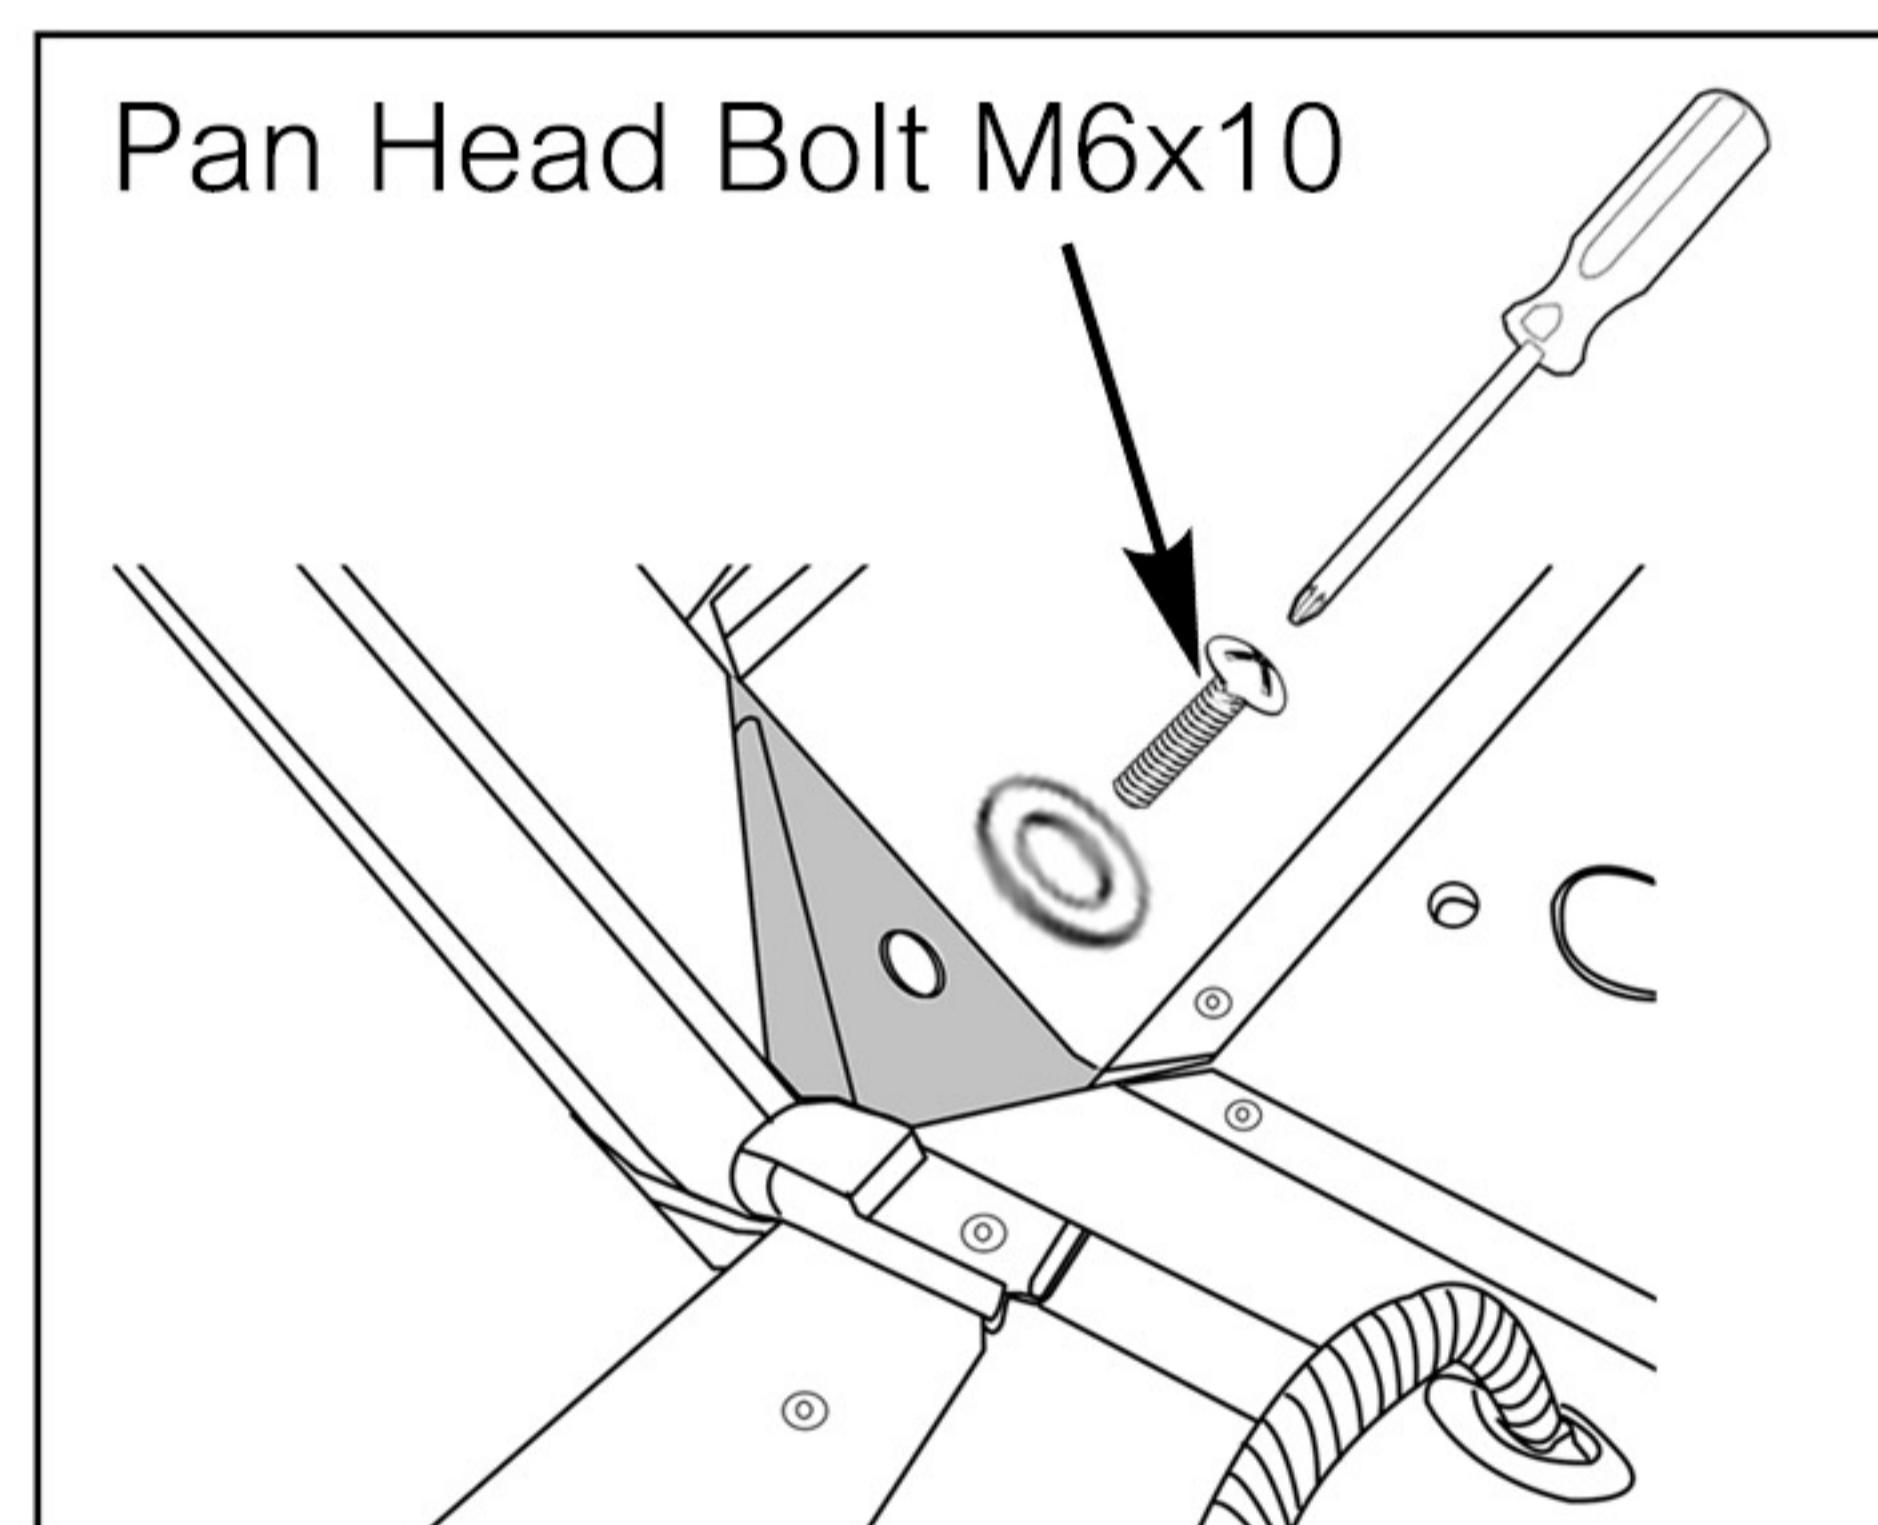


8. Install bracket to truck bed

8.1

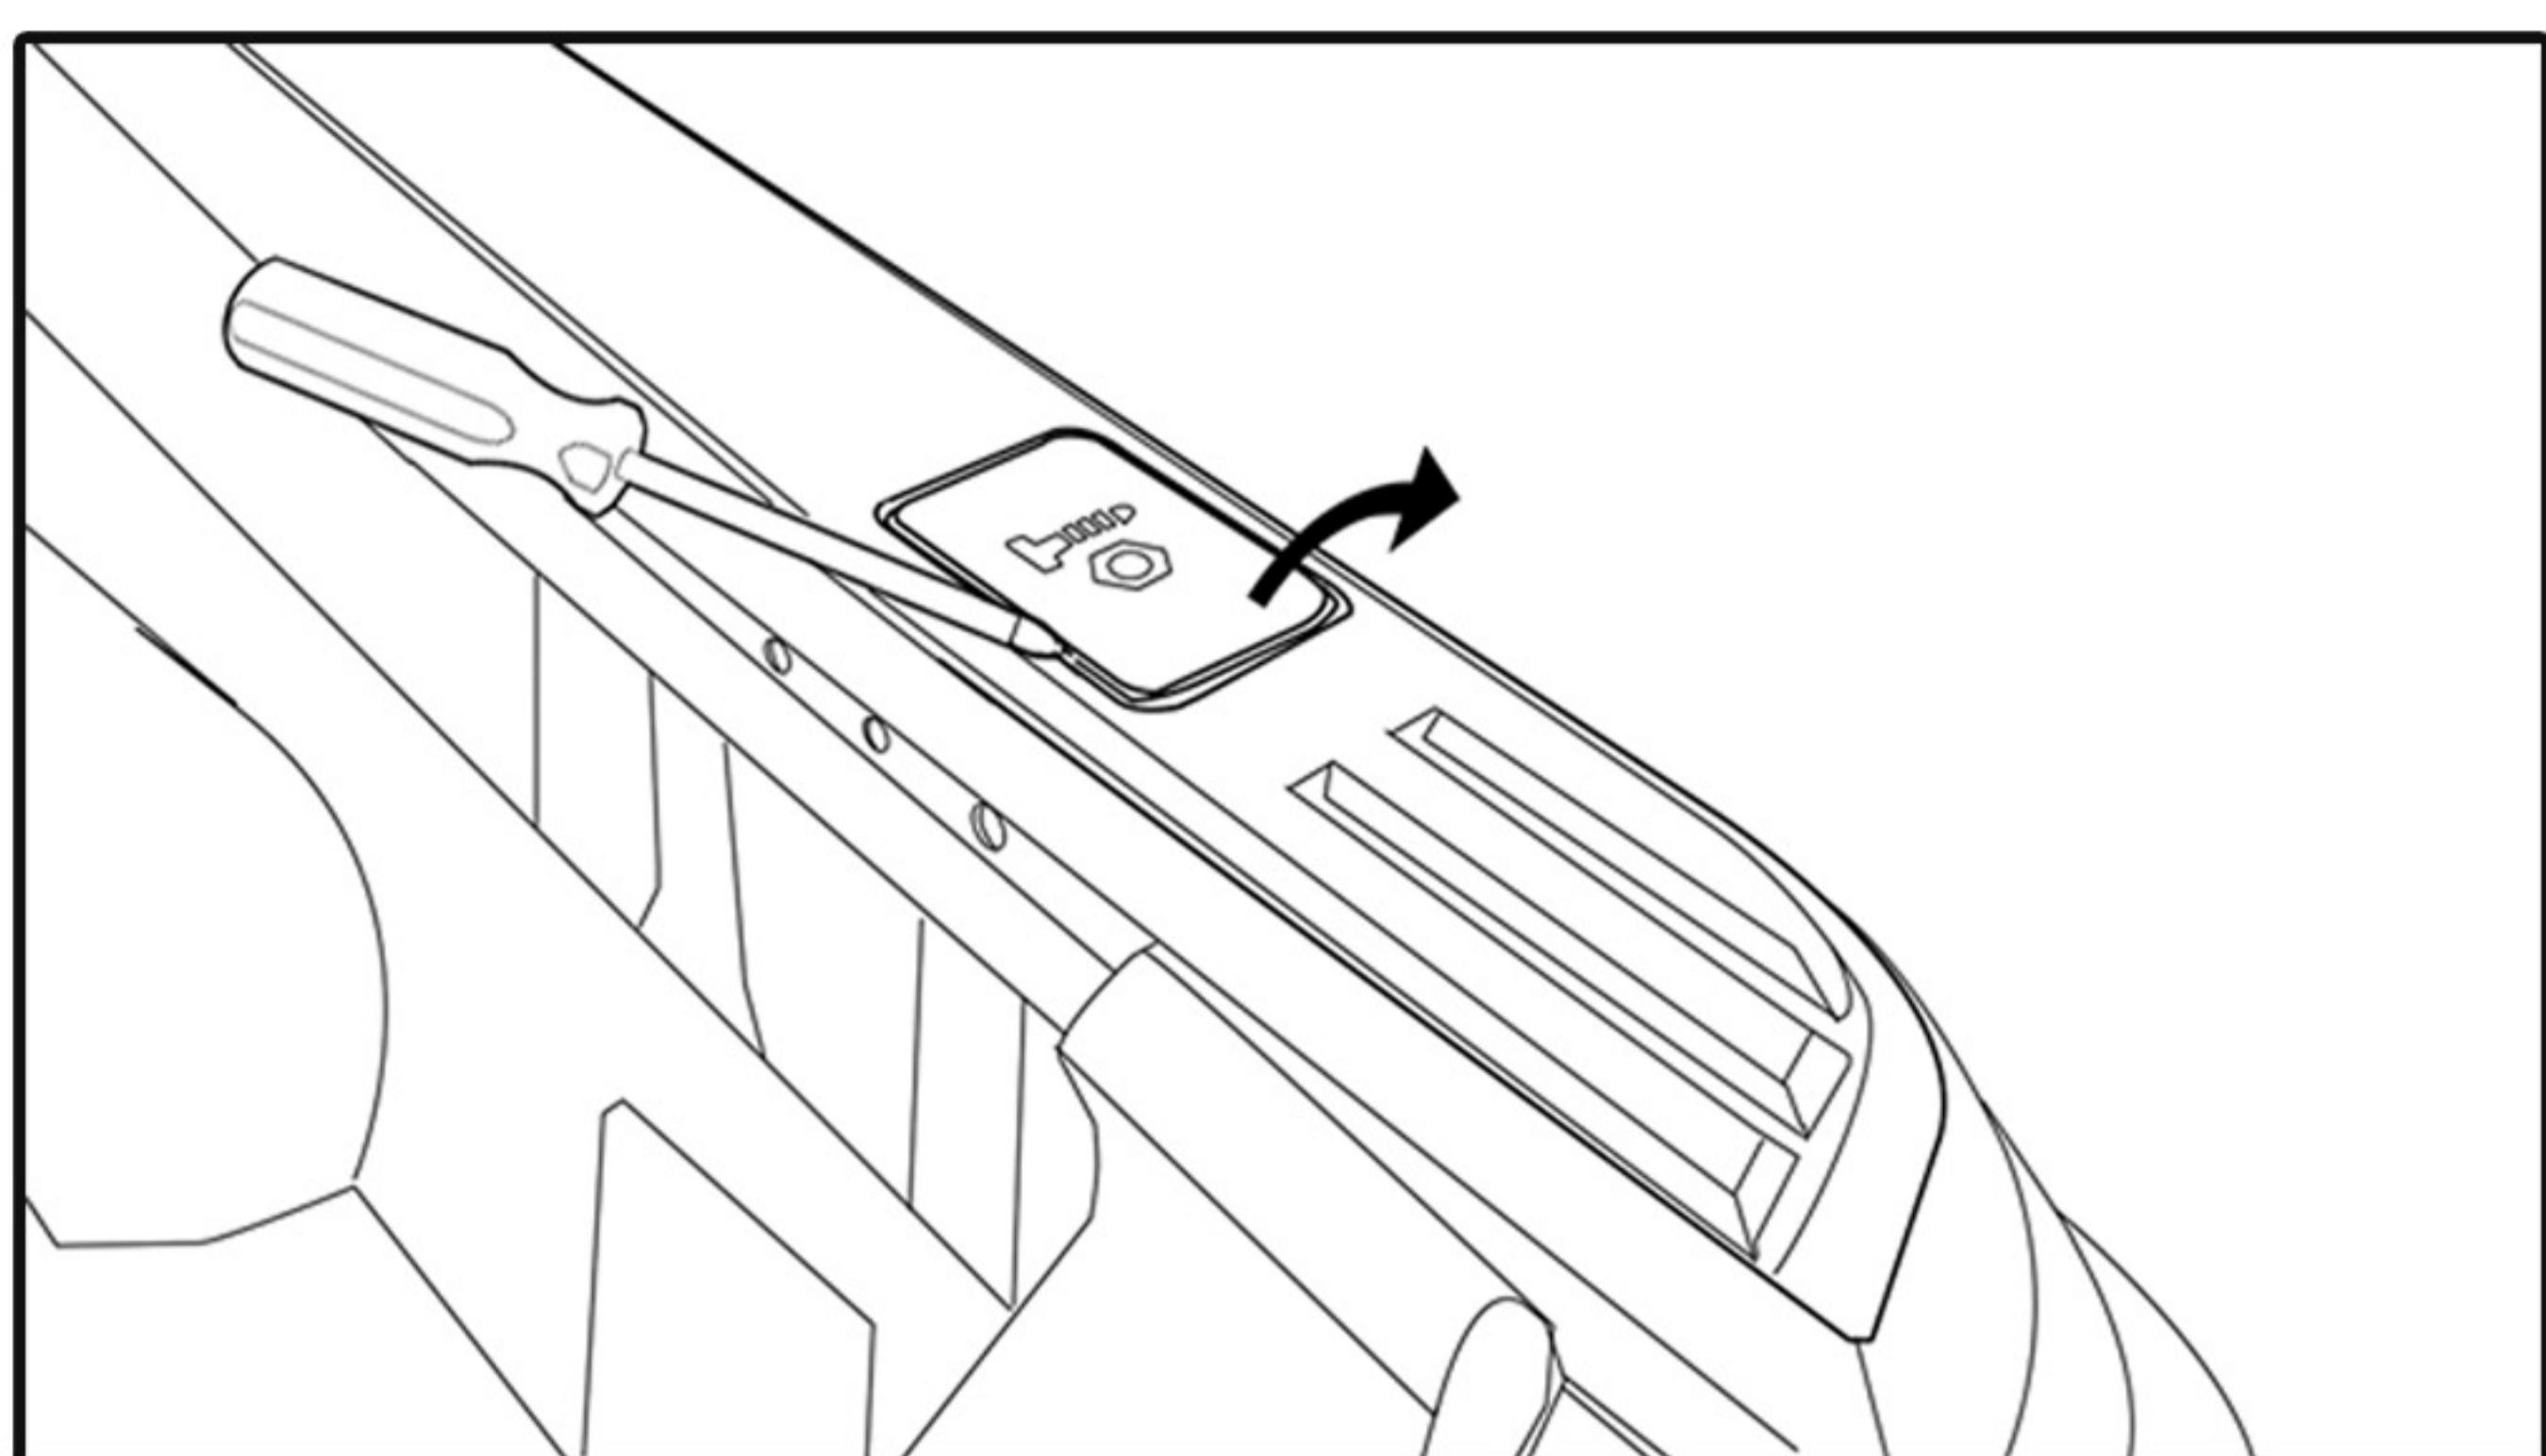


8.2

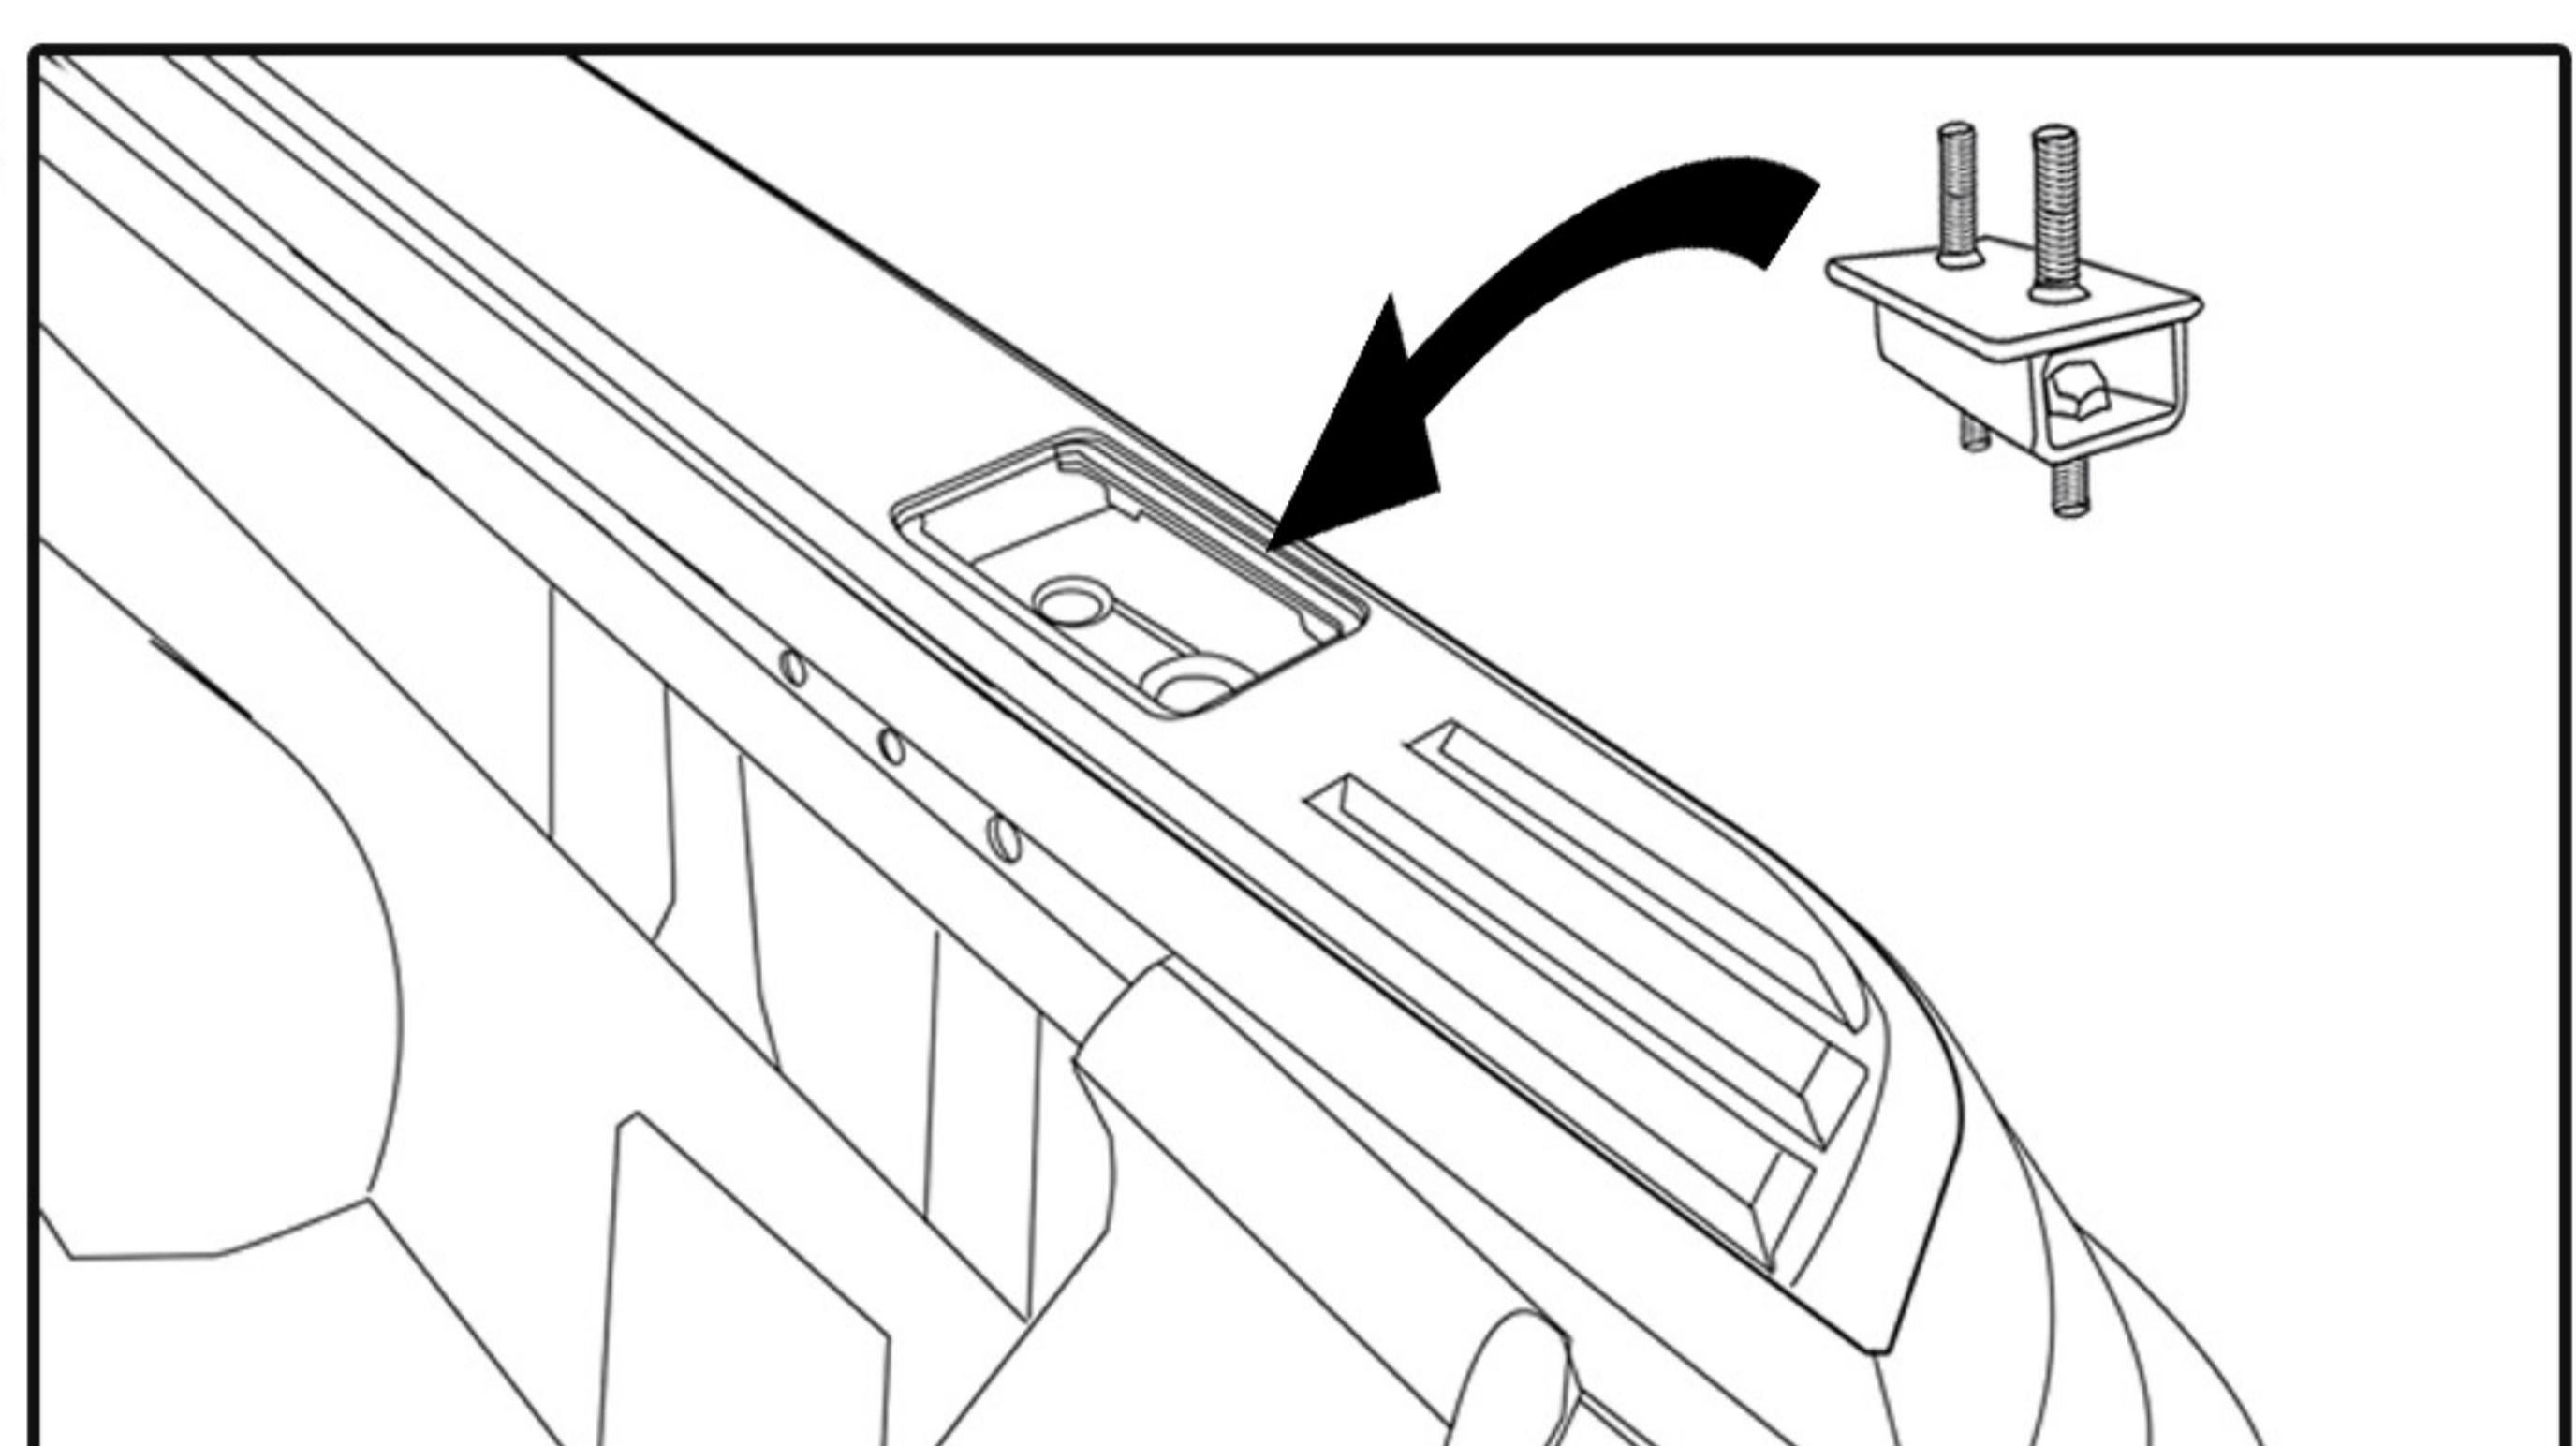


rear LH-RH

8.3

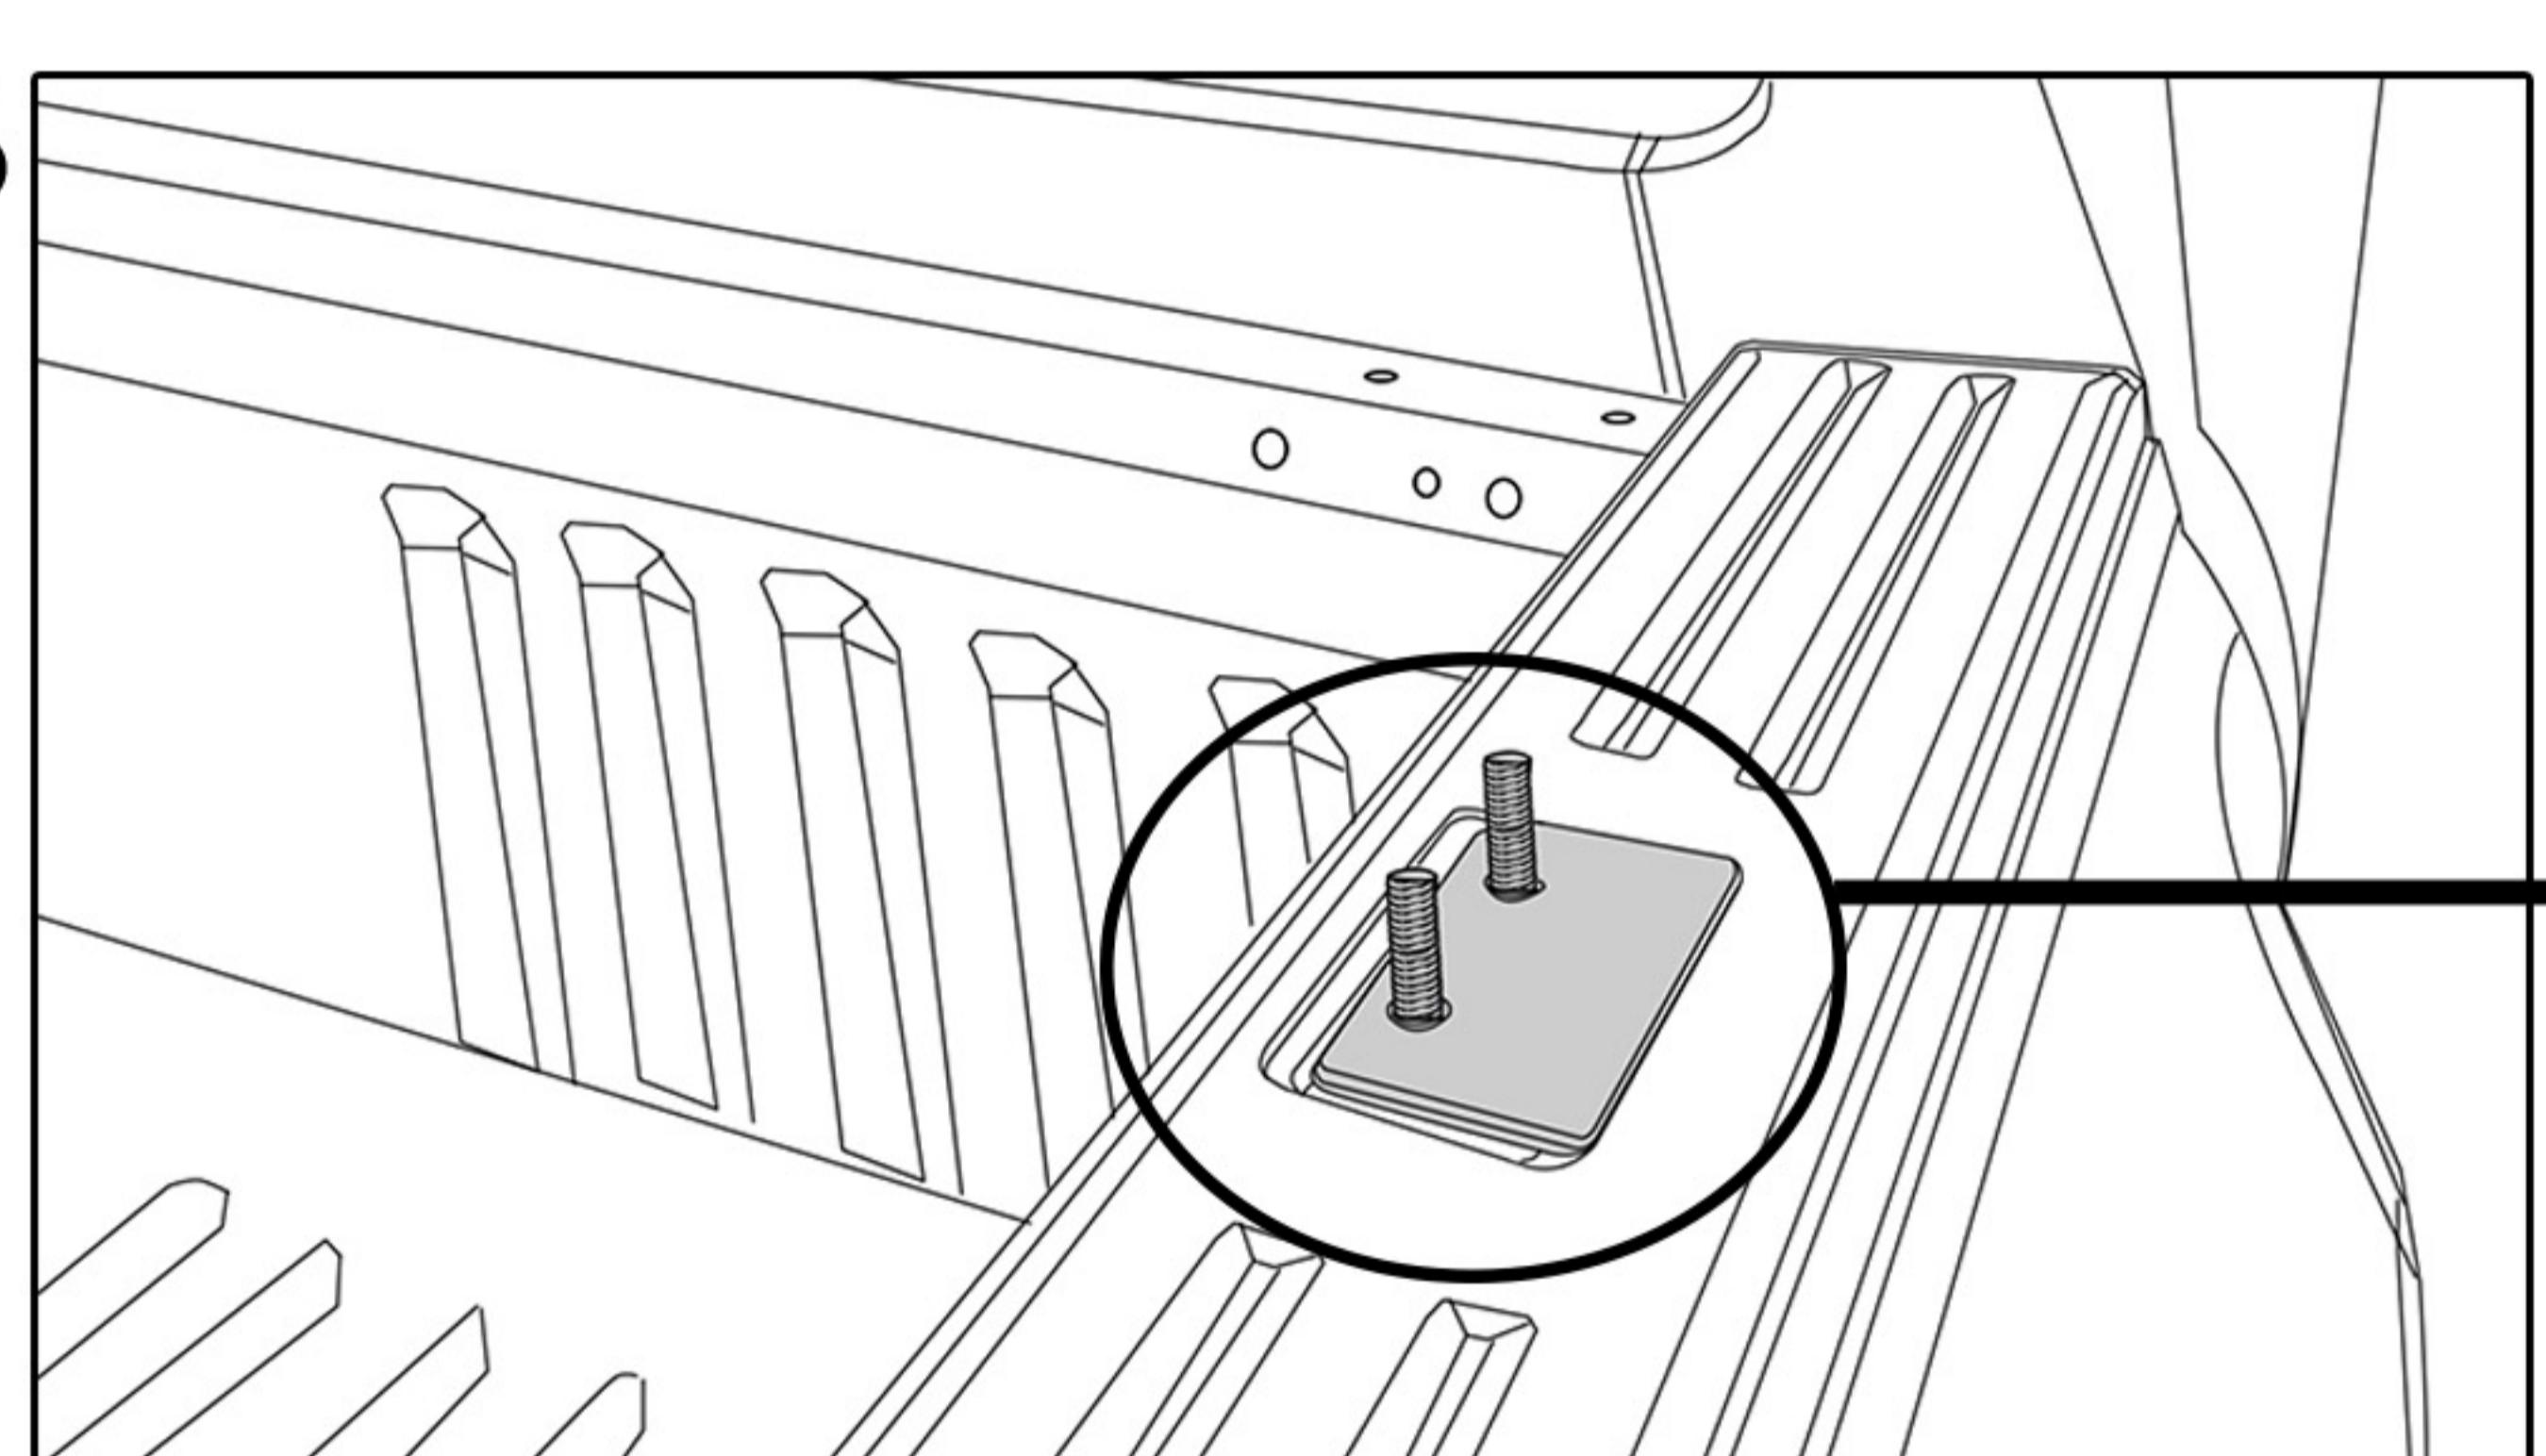


front LH-RH


8.4 Bottom view

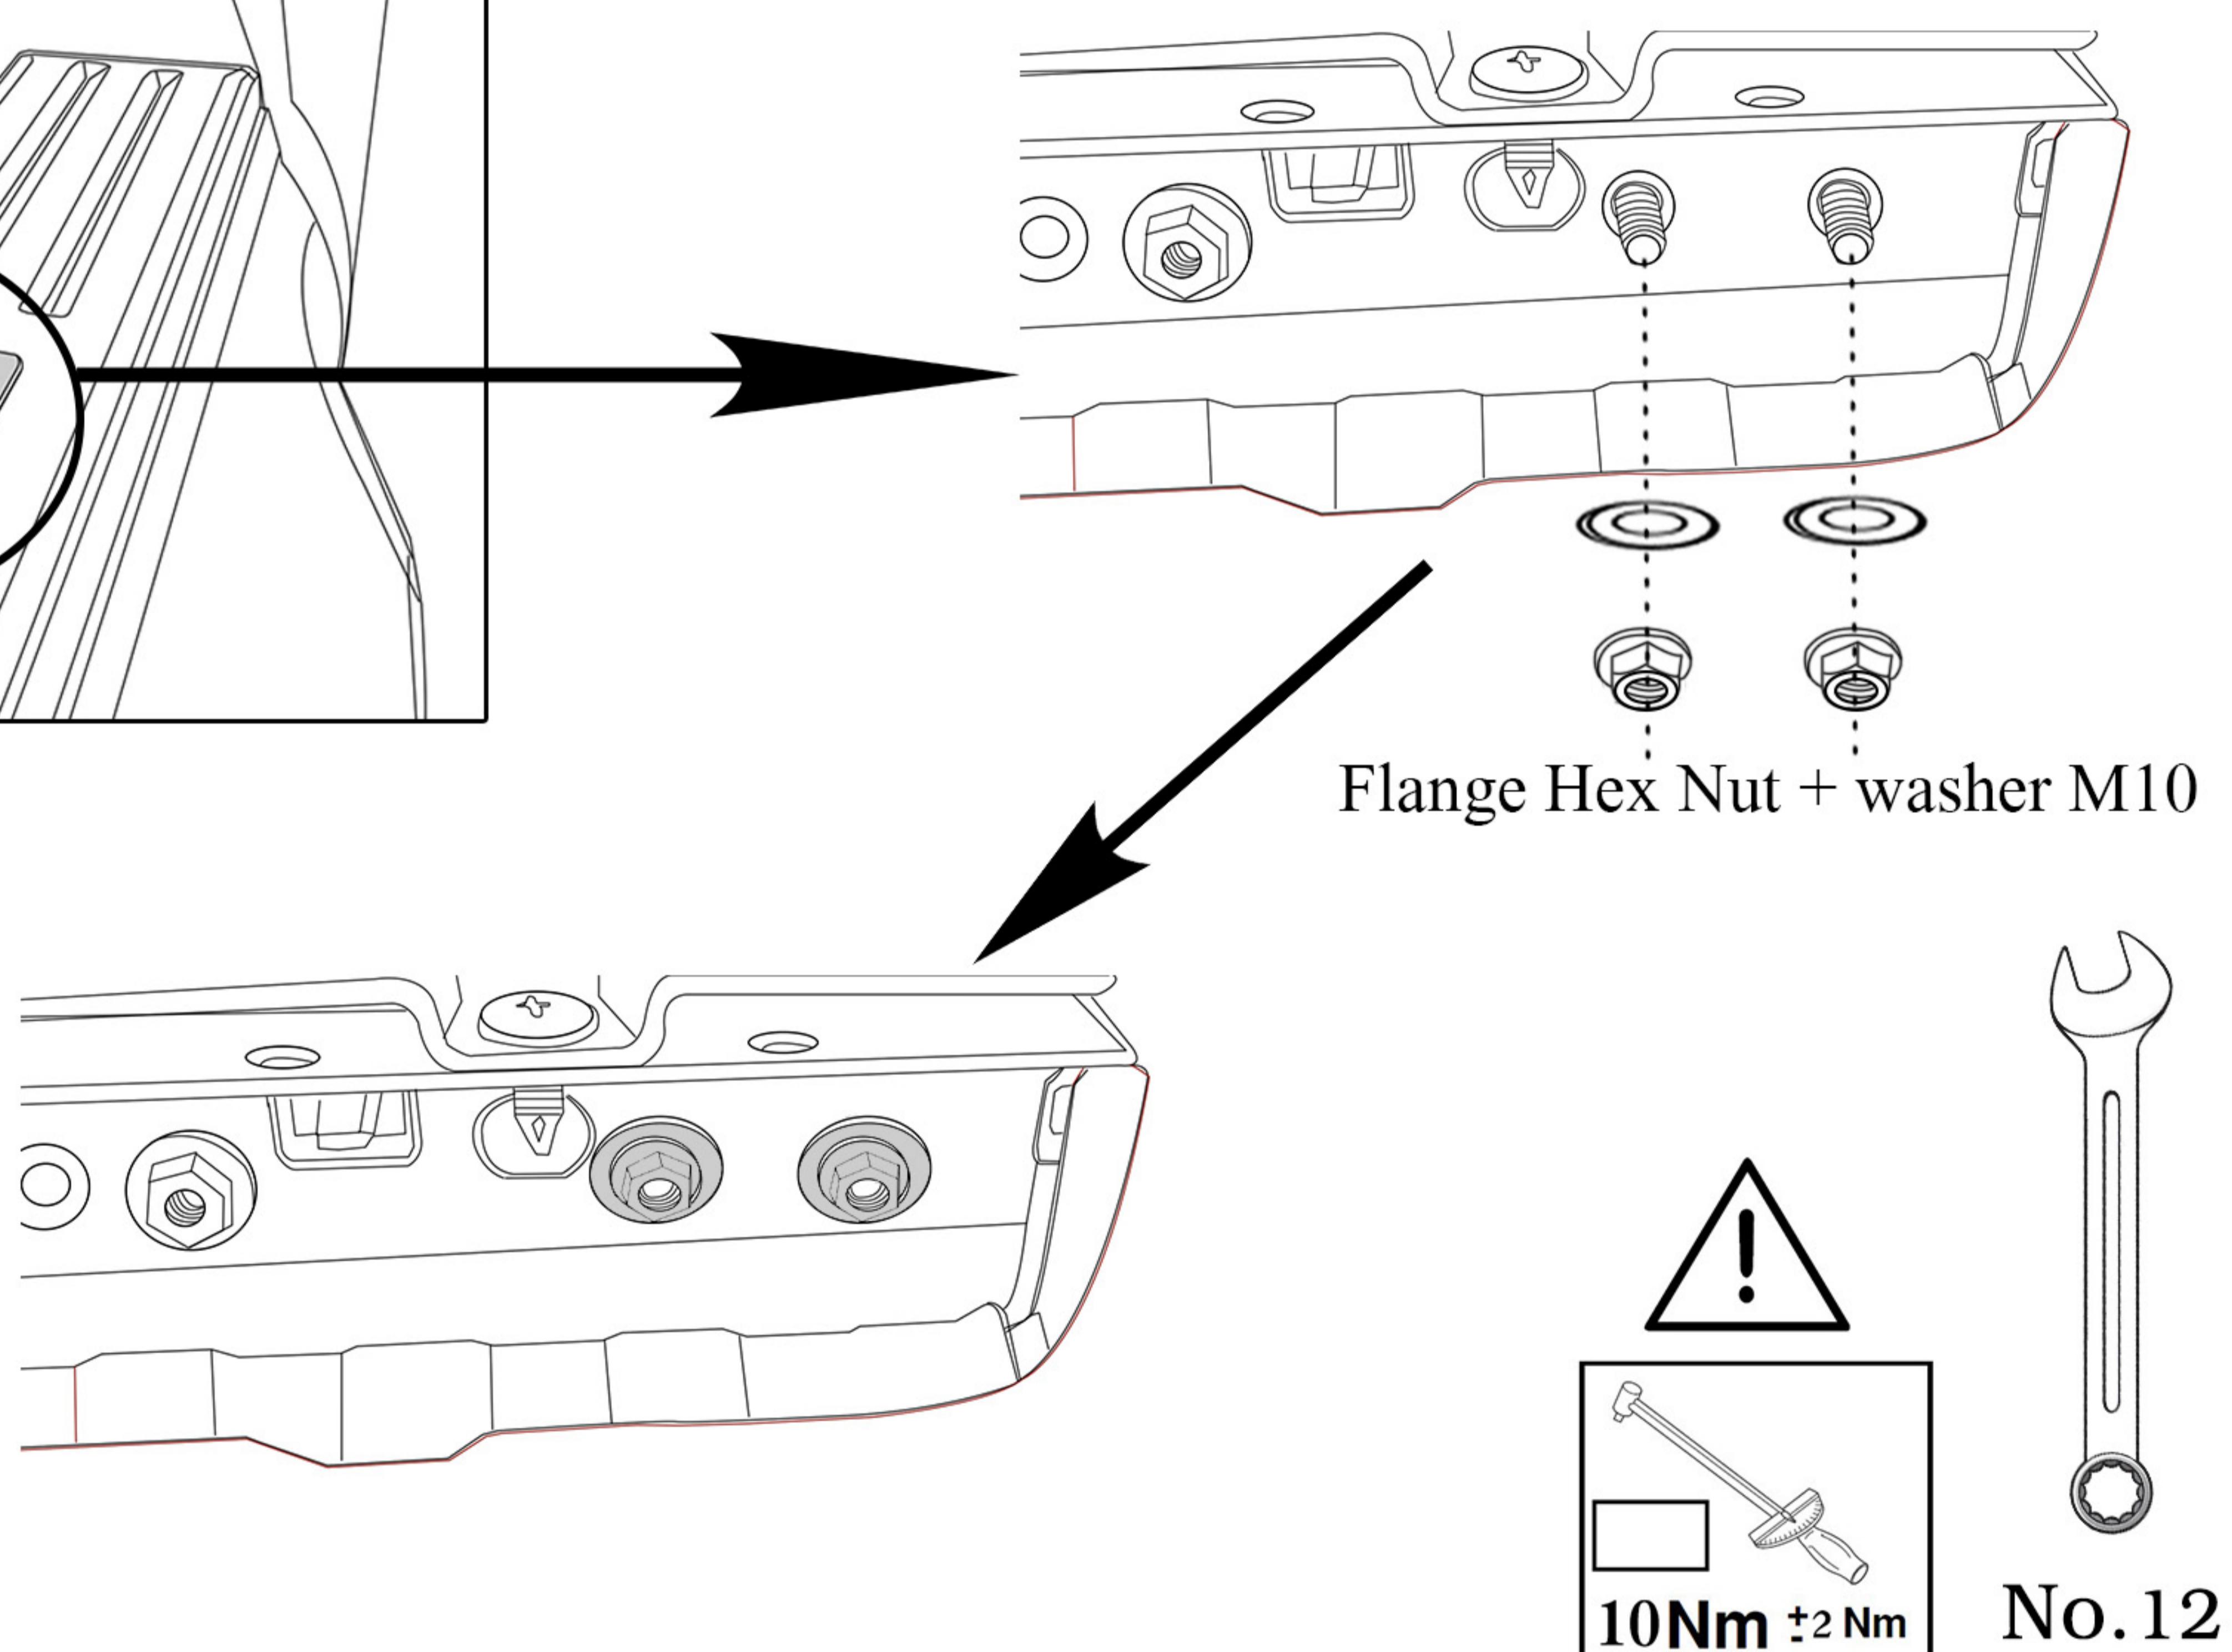

9 Attache front rubber pad on the front panel bed

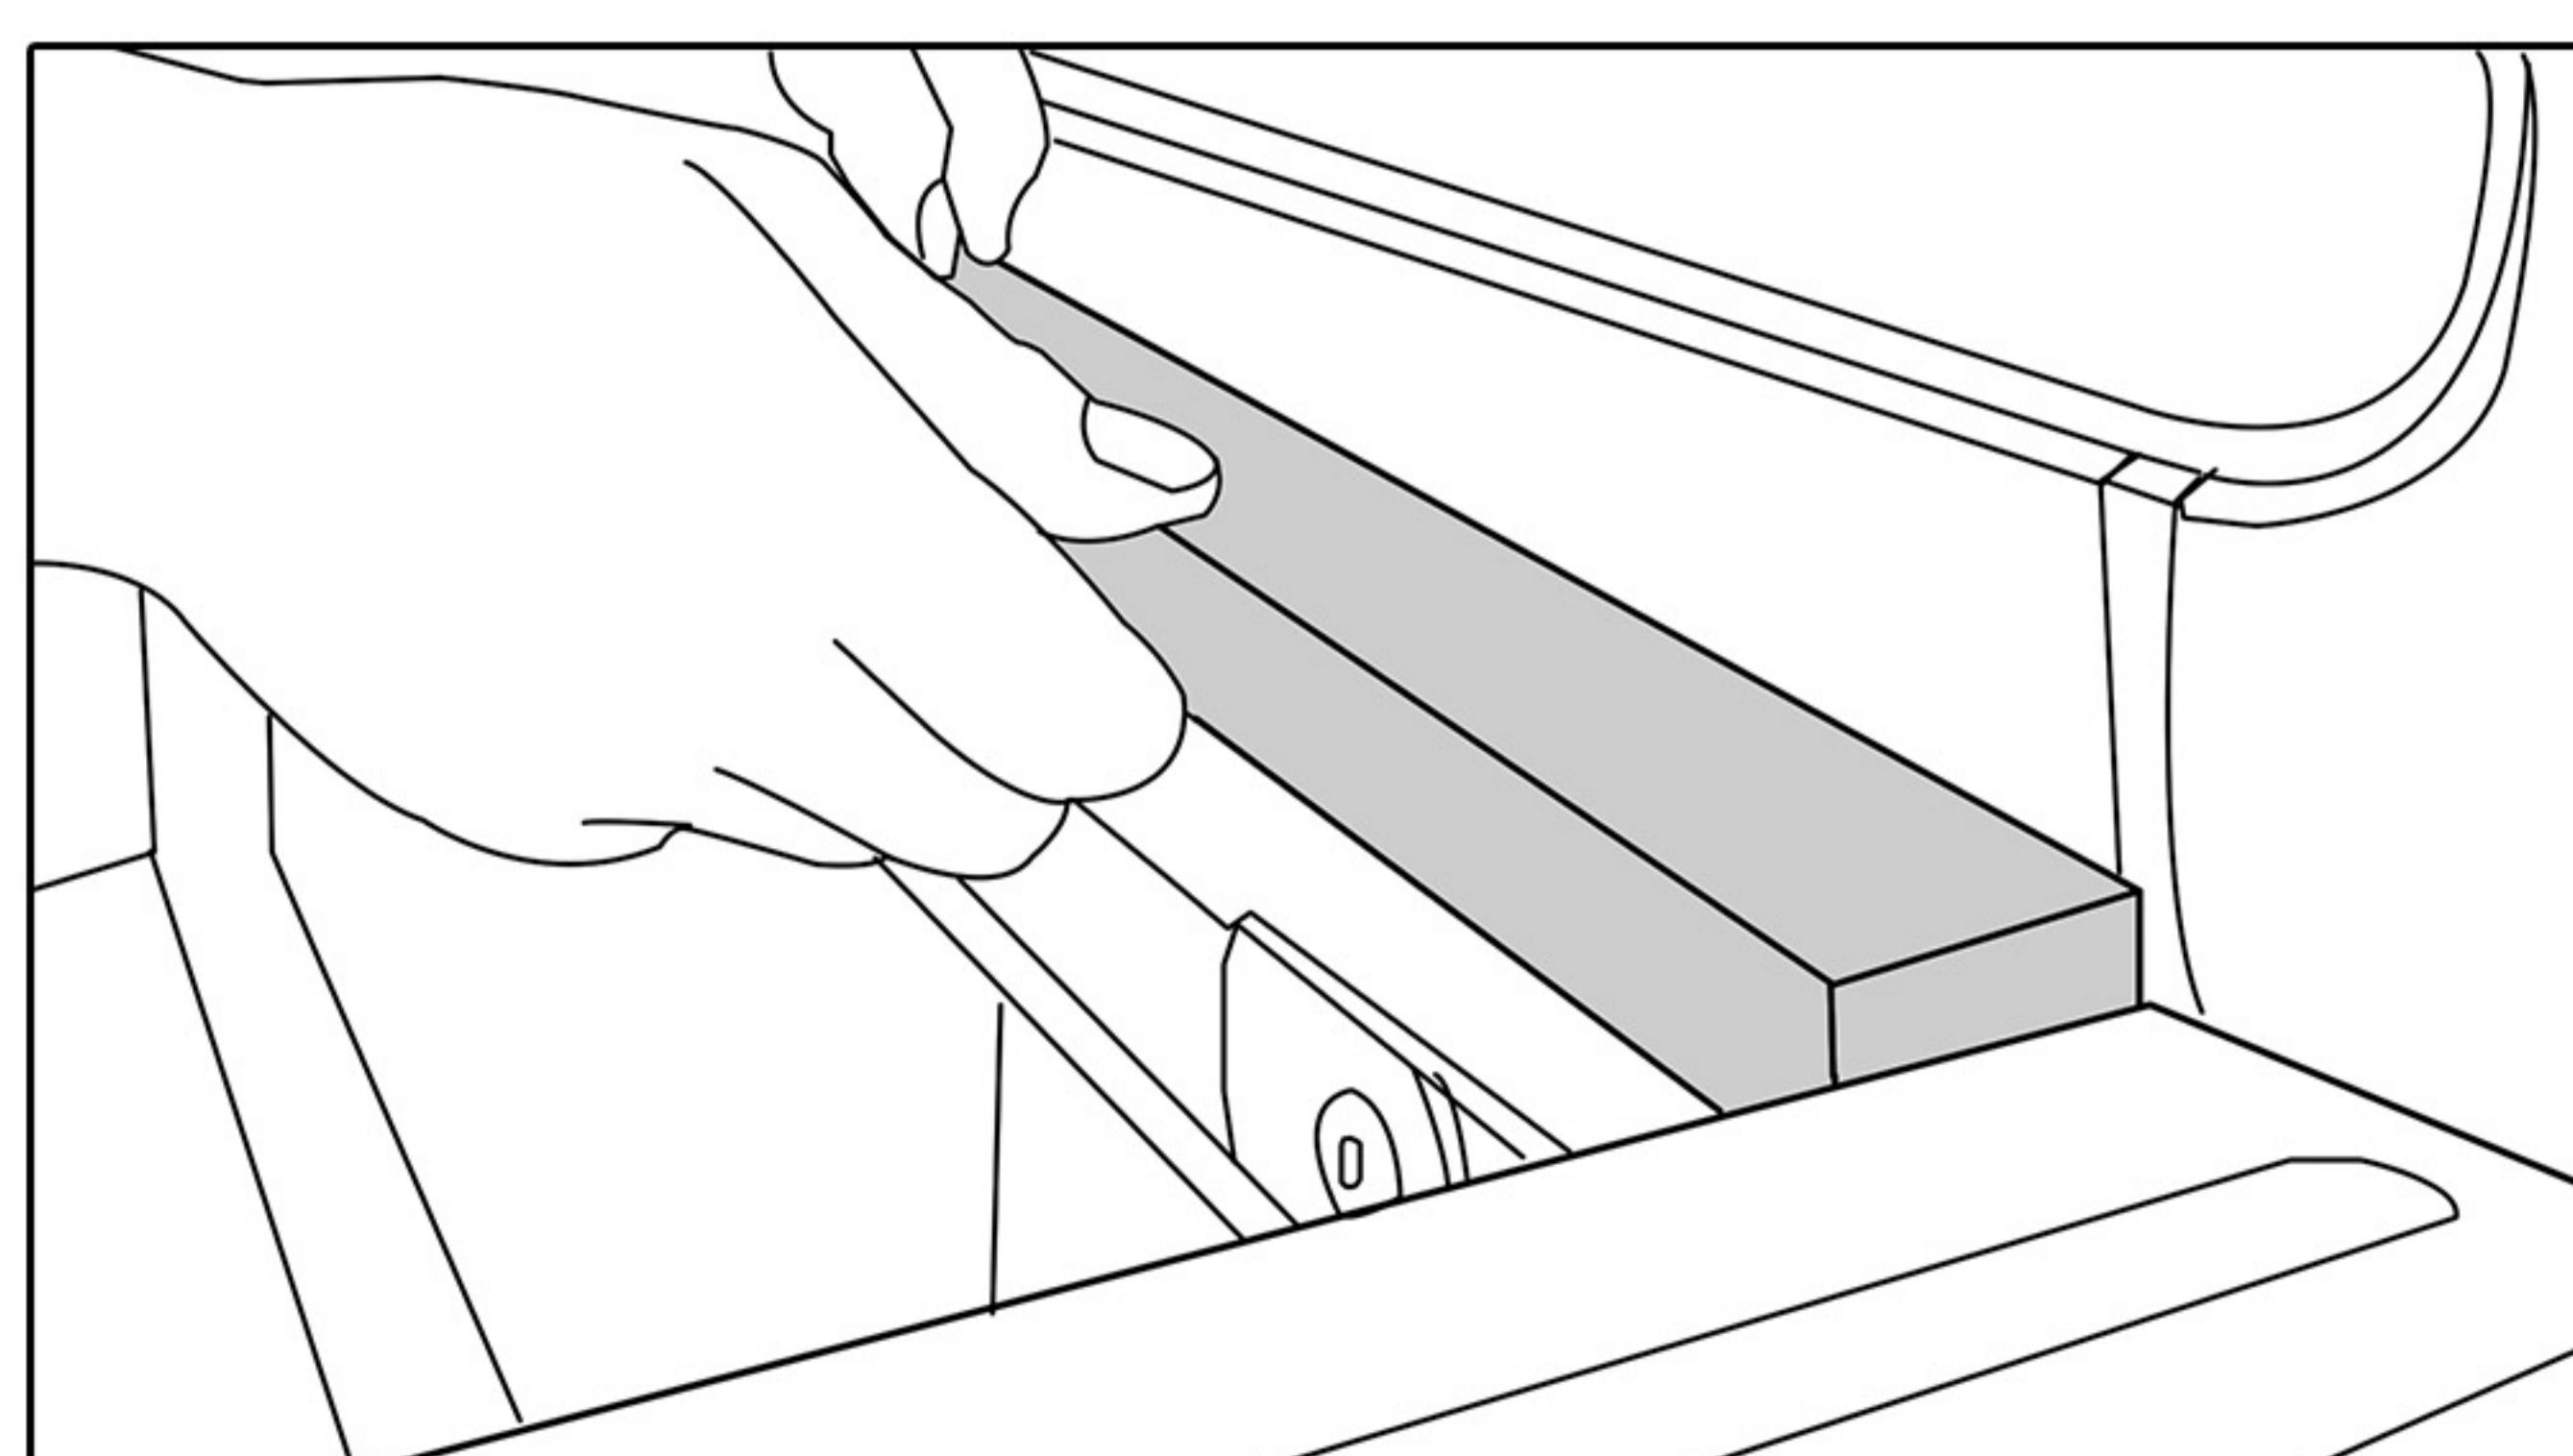


10. Install the canopy on the truck bed

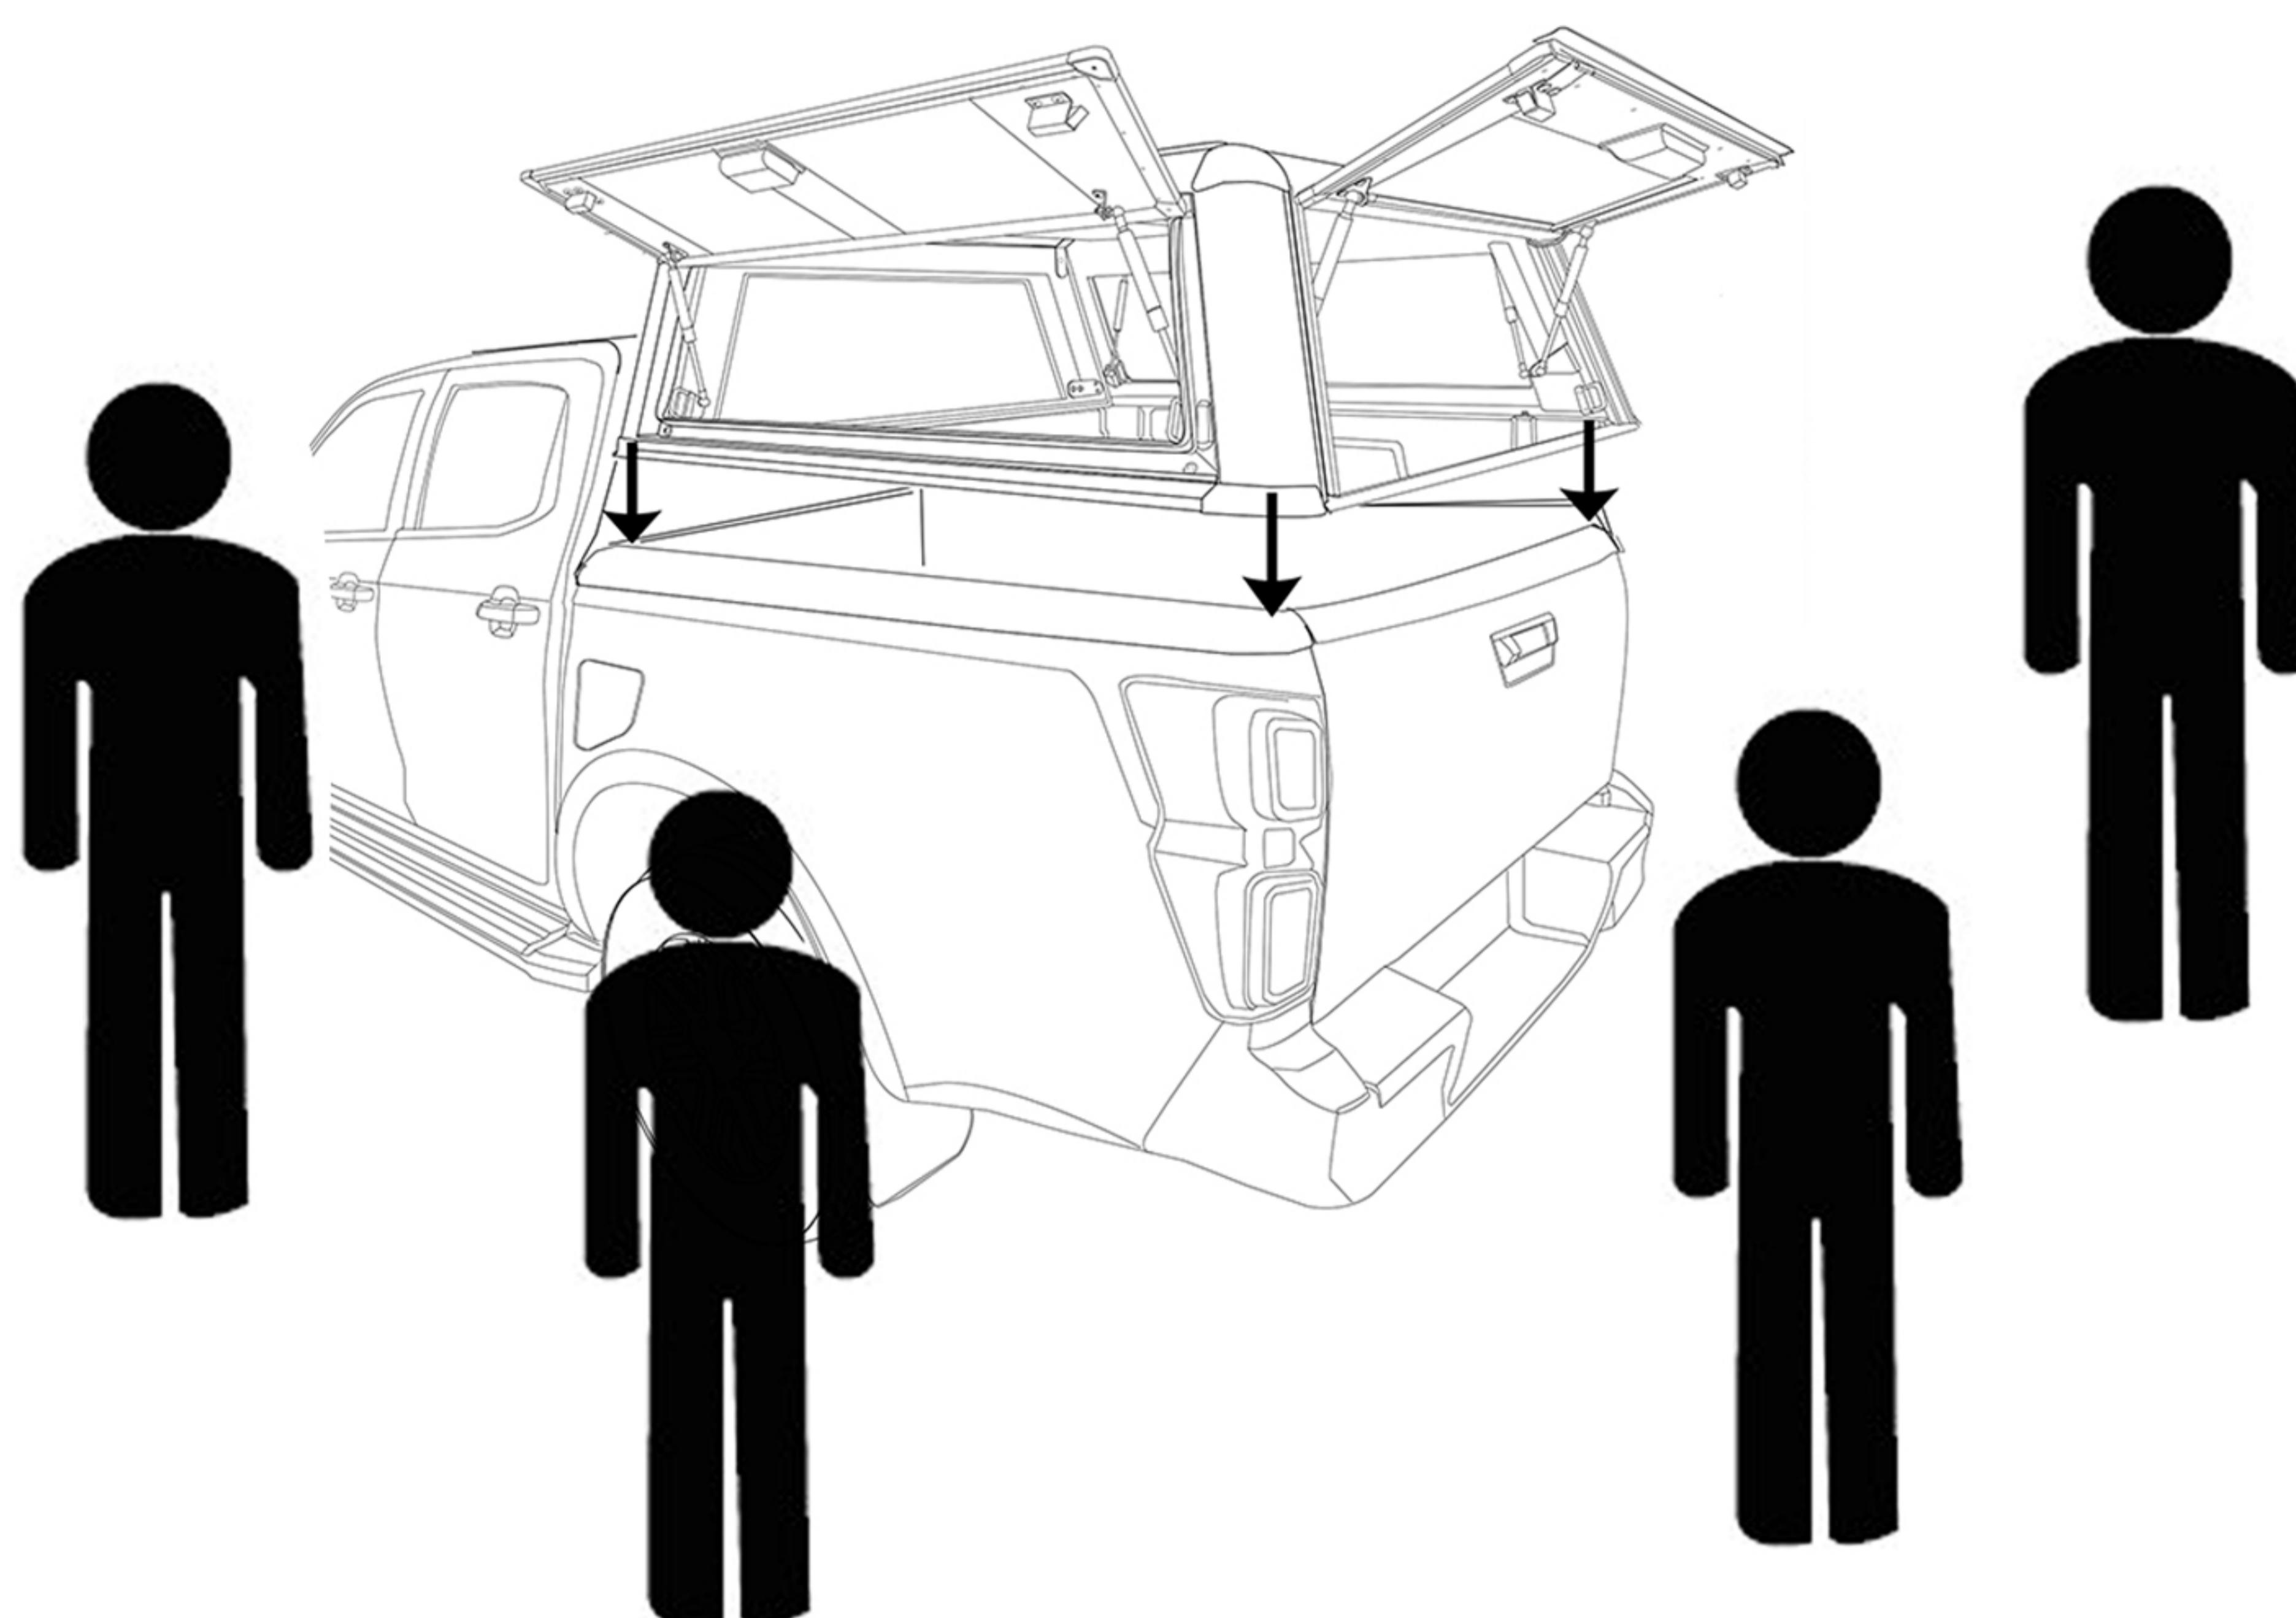


- A MINIMUM OF FOUR PEOPLE ARE RECOMMENDED TO PICK UP AND PLACE THE CANOPY ONTO THE TRUCK.
- TO KEEP FROM DAMAGING YOUR D-RUBBER DURING THE INSTALLATION PROCESS, IT IS IMPORTANT YOU LIFT THE CANOPY IN PLACE AND DO NOT DRAG IT ACROSS THE TRUCK BED RAILS.
- ONCE THE CANOPY IS CENTERED, PLACE CLAMPS IN POSITION.


10.1

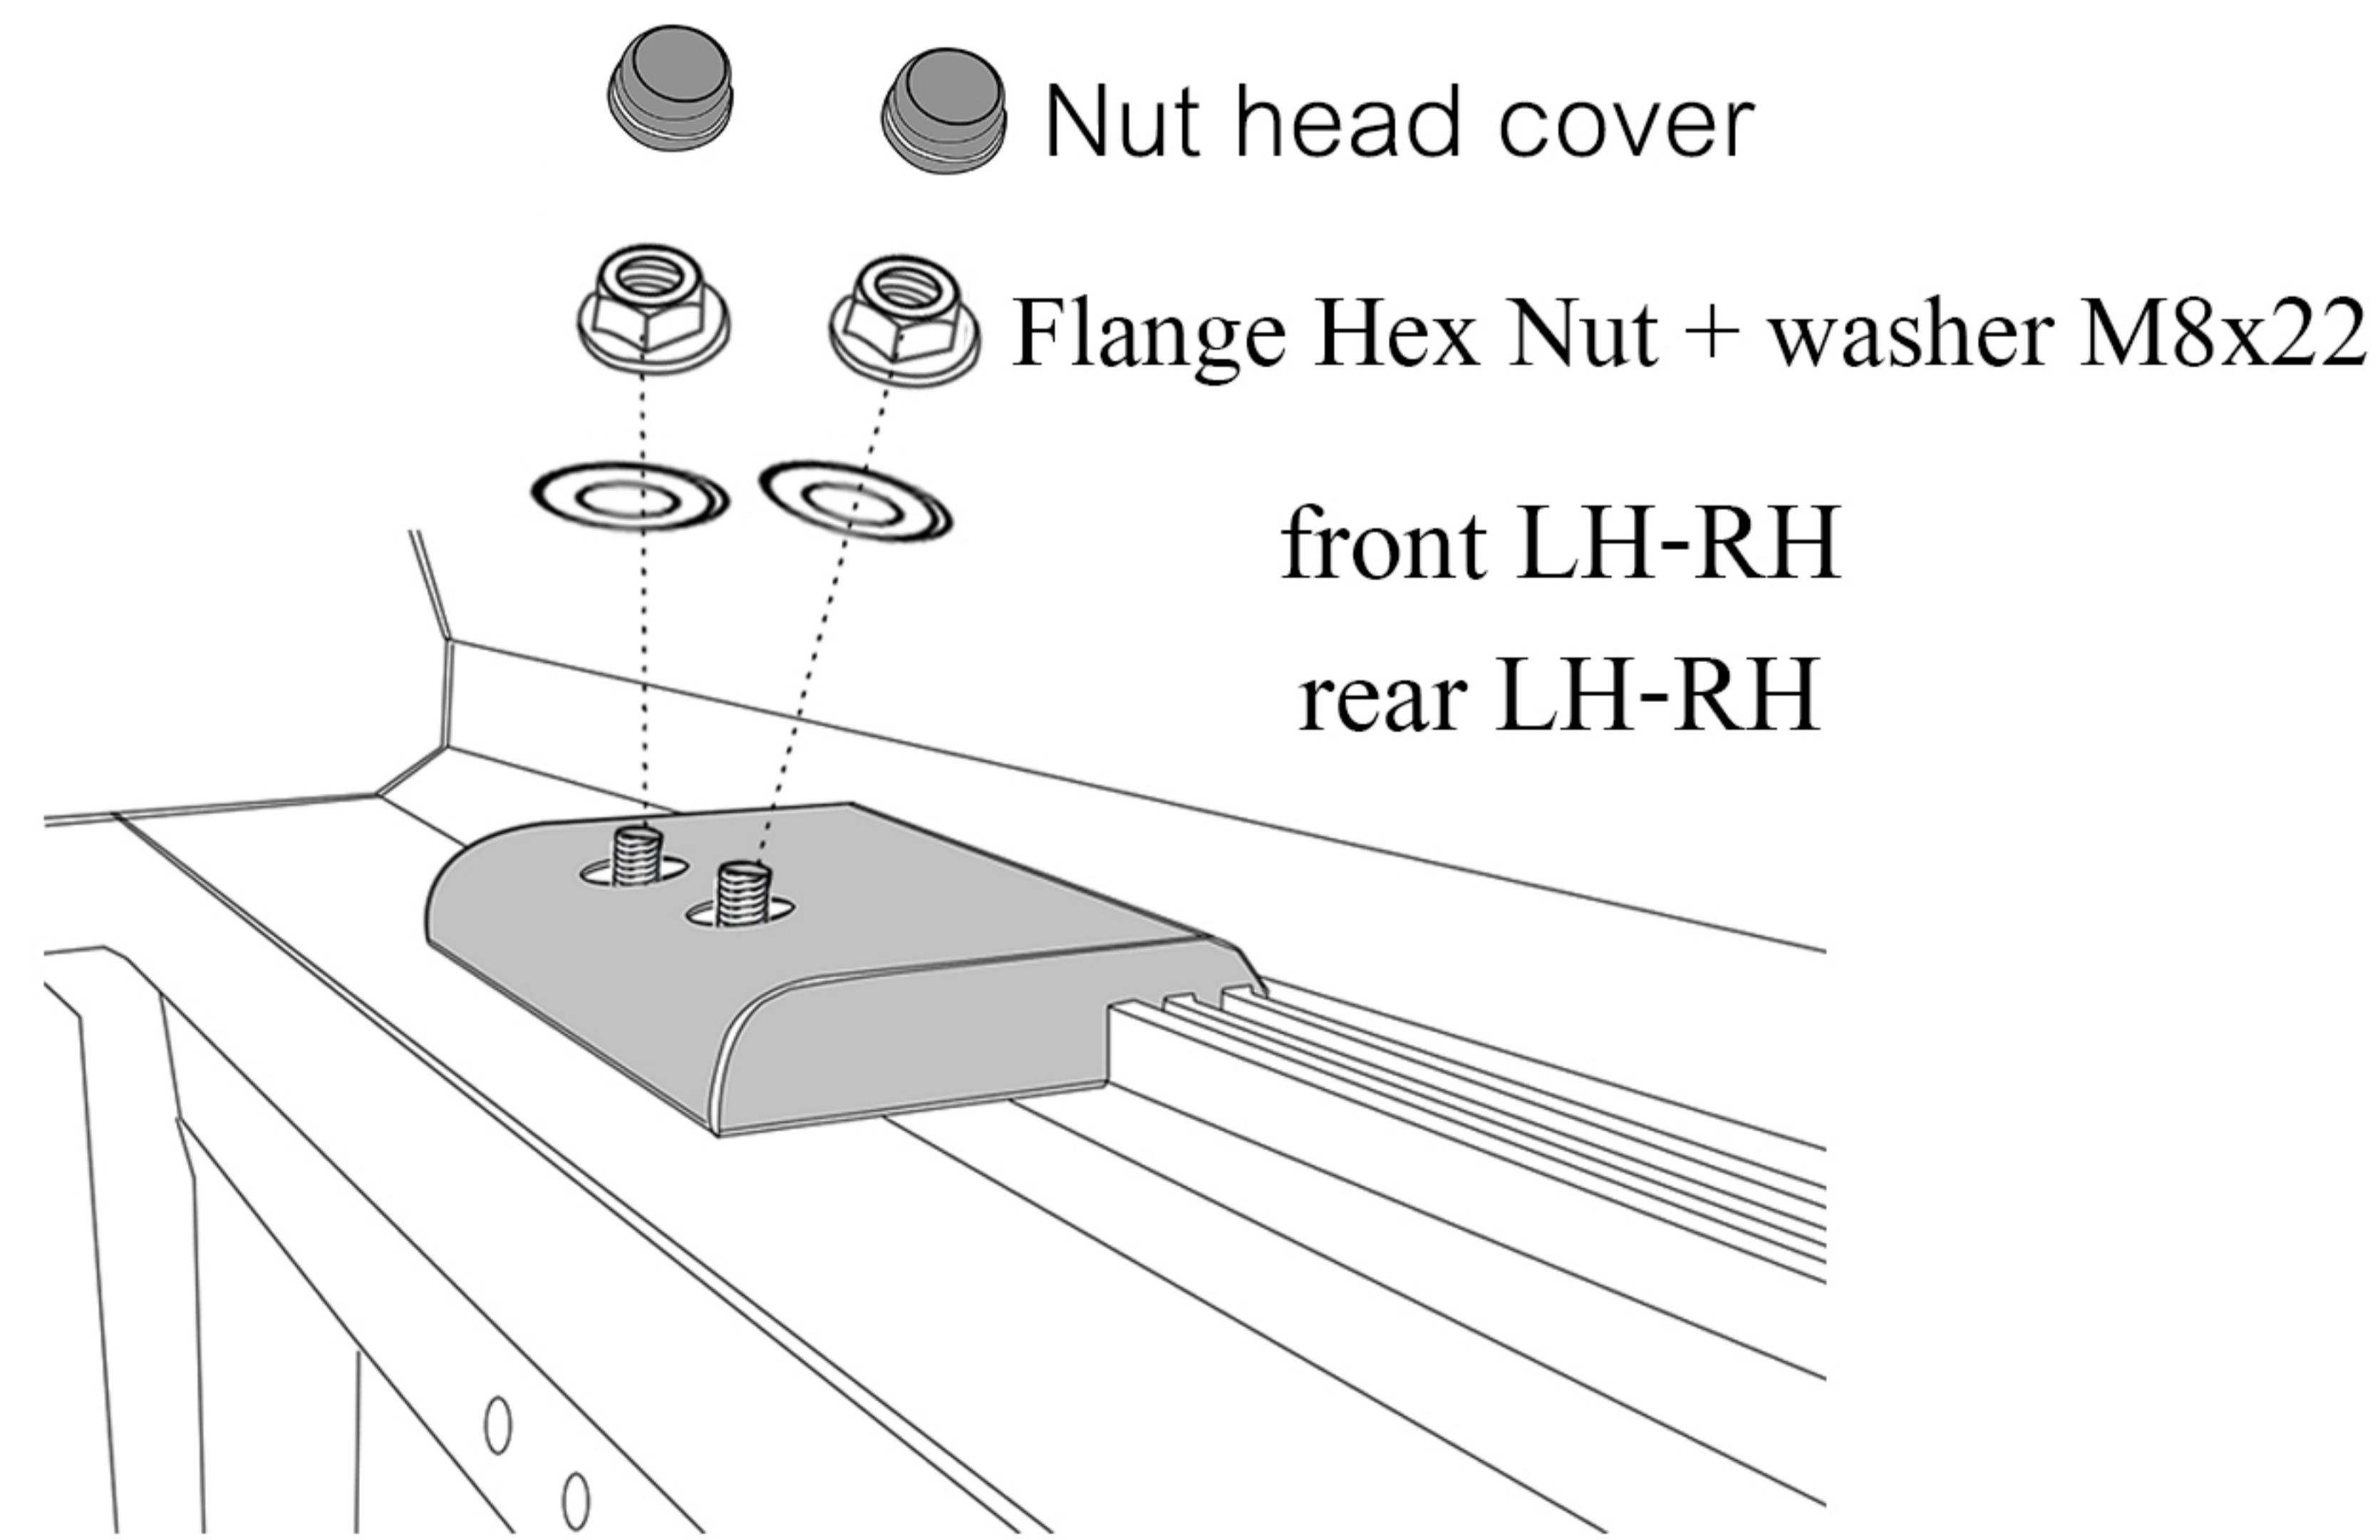

10.2 optional

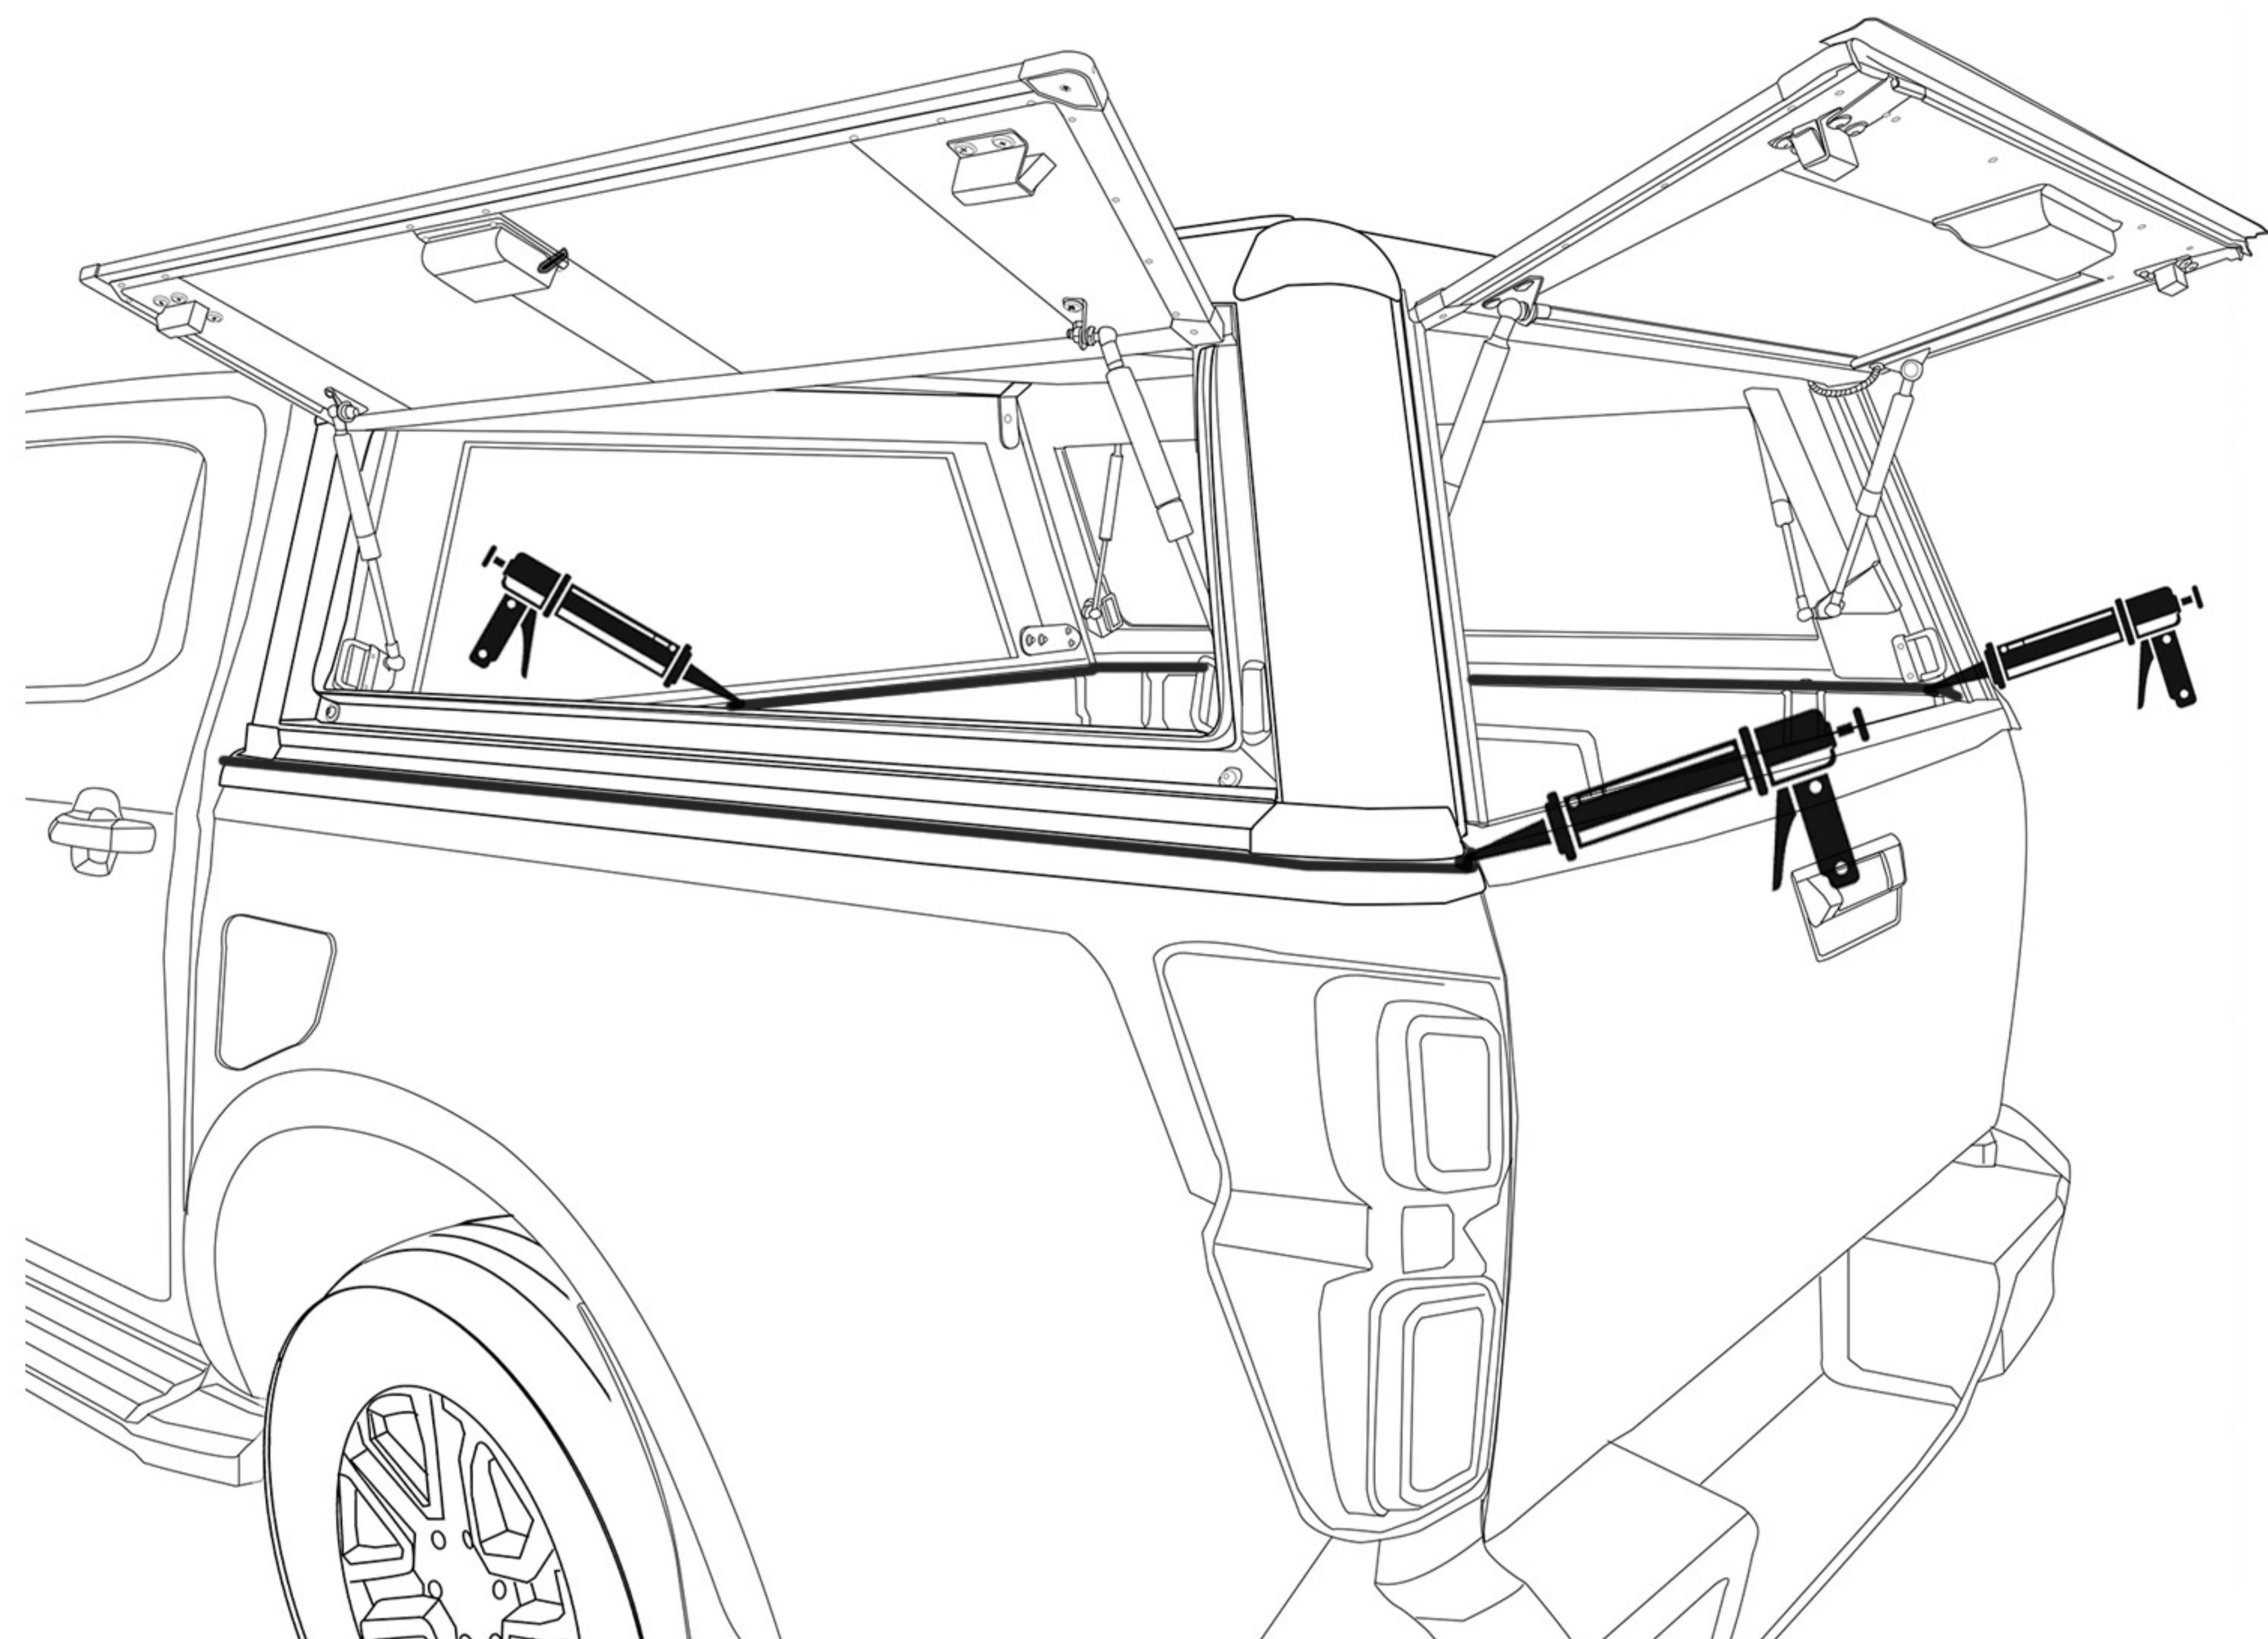

10.3 tighten the nut.

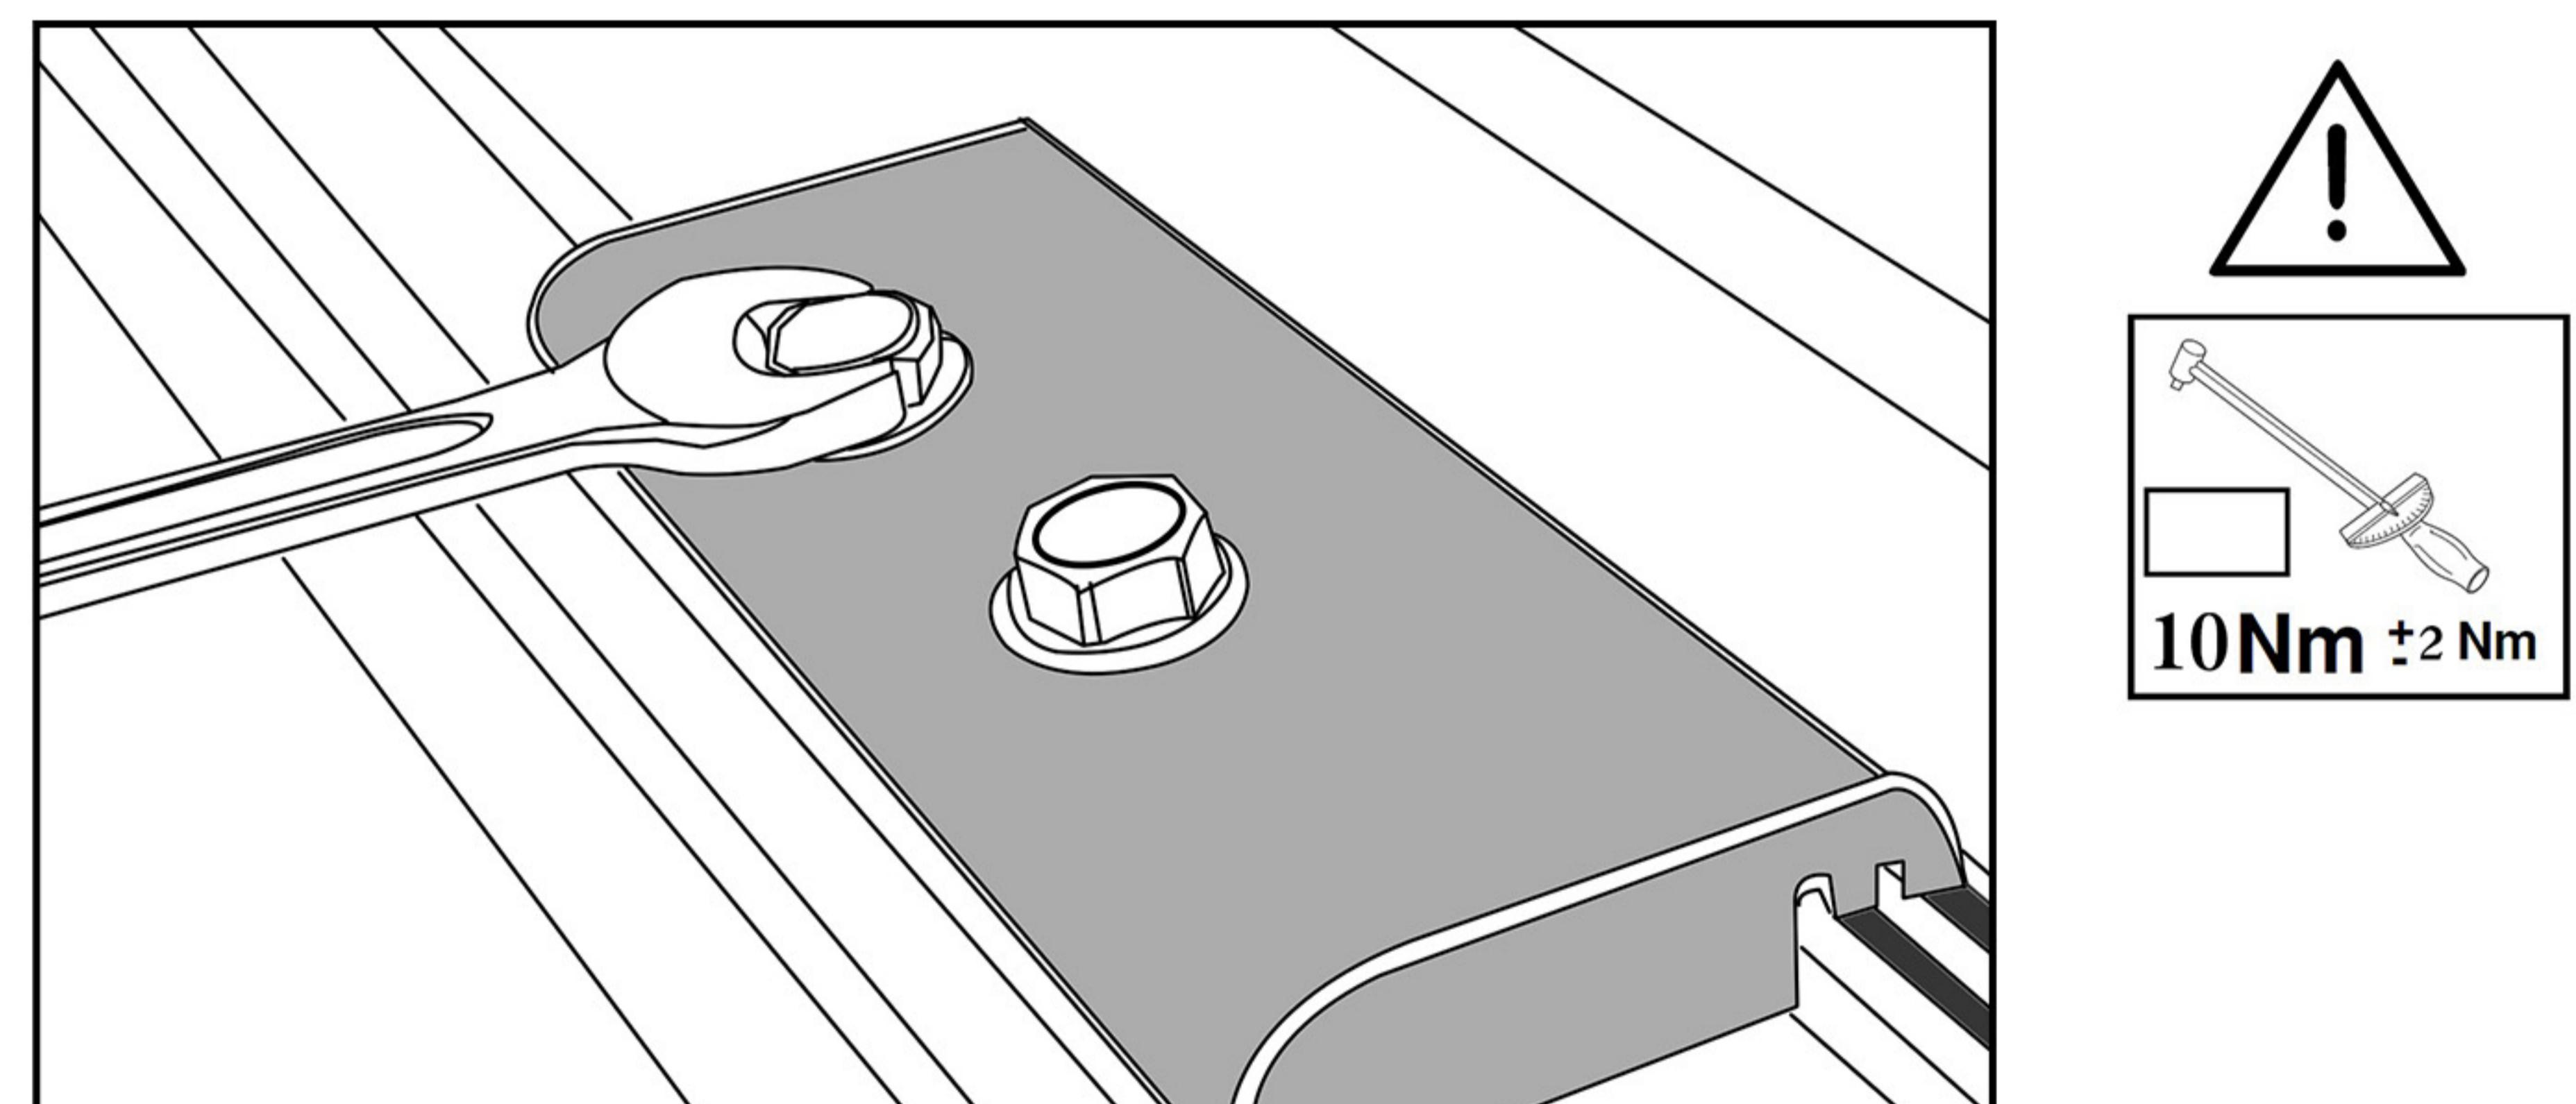


11. Attache gas stud




WARNING

- USE ONLY THE TOOLS RECOMMENDED IN THIS GUIDE
- USE ONLY THE HARDWARE THAT HAS BEEN PROVIDED
- HANDLE ALL COMPONENTS WITH CARE
- IT IS RECOMMENDED THAT FOUR PEOPLE LIFT/LOWER THE CANOPY
- NEVER USE ACETONE ON THE PAINTWORK
- AVOID PINCHING/SQUASHING HANDS

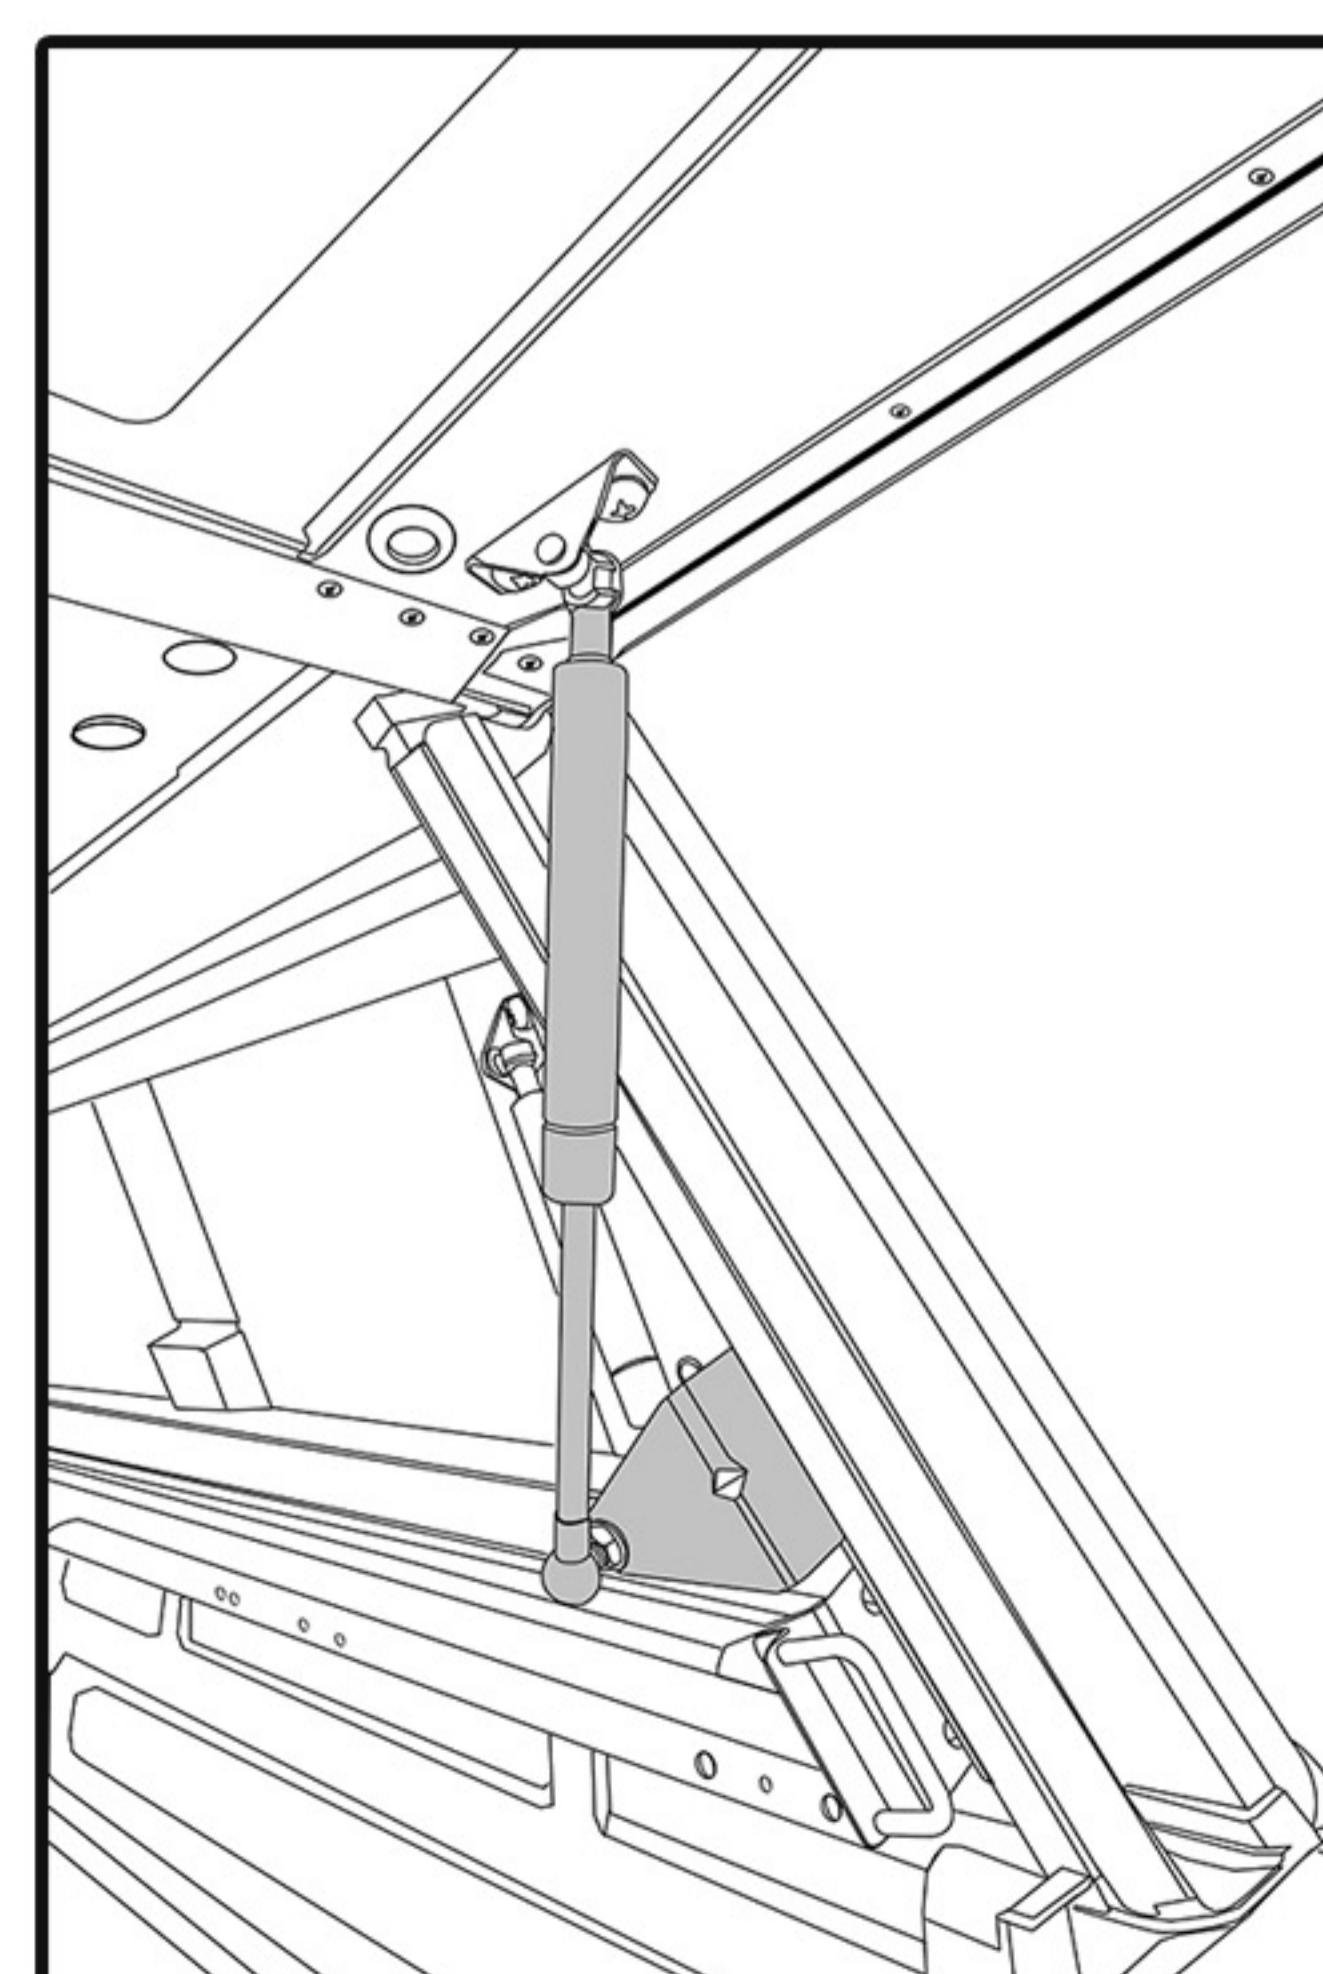

Connecting central lock harness

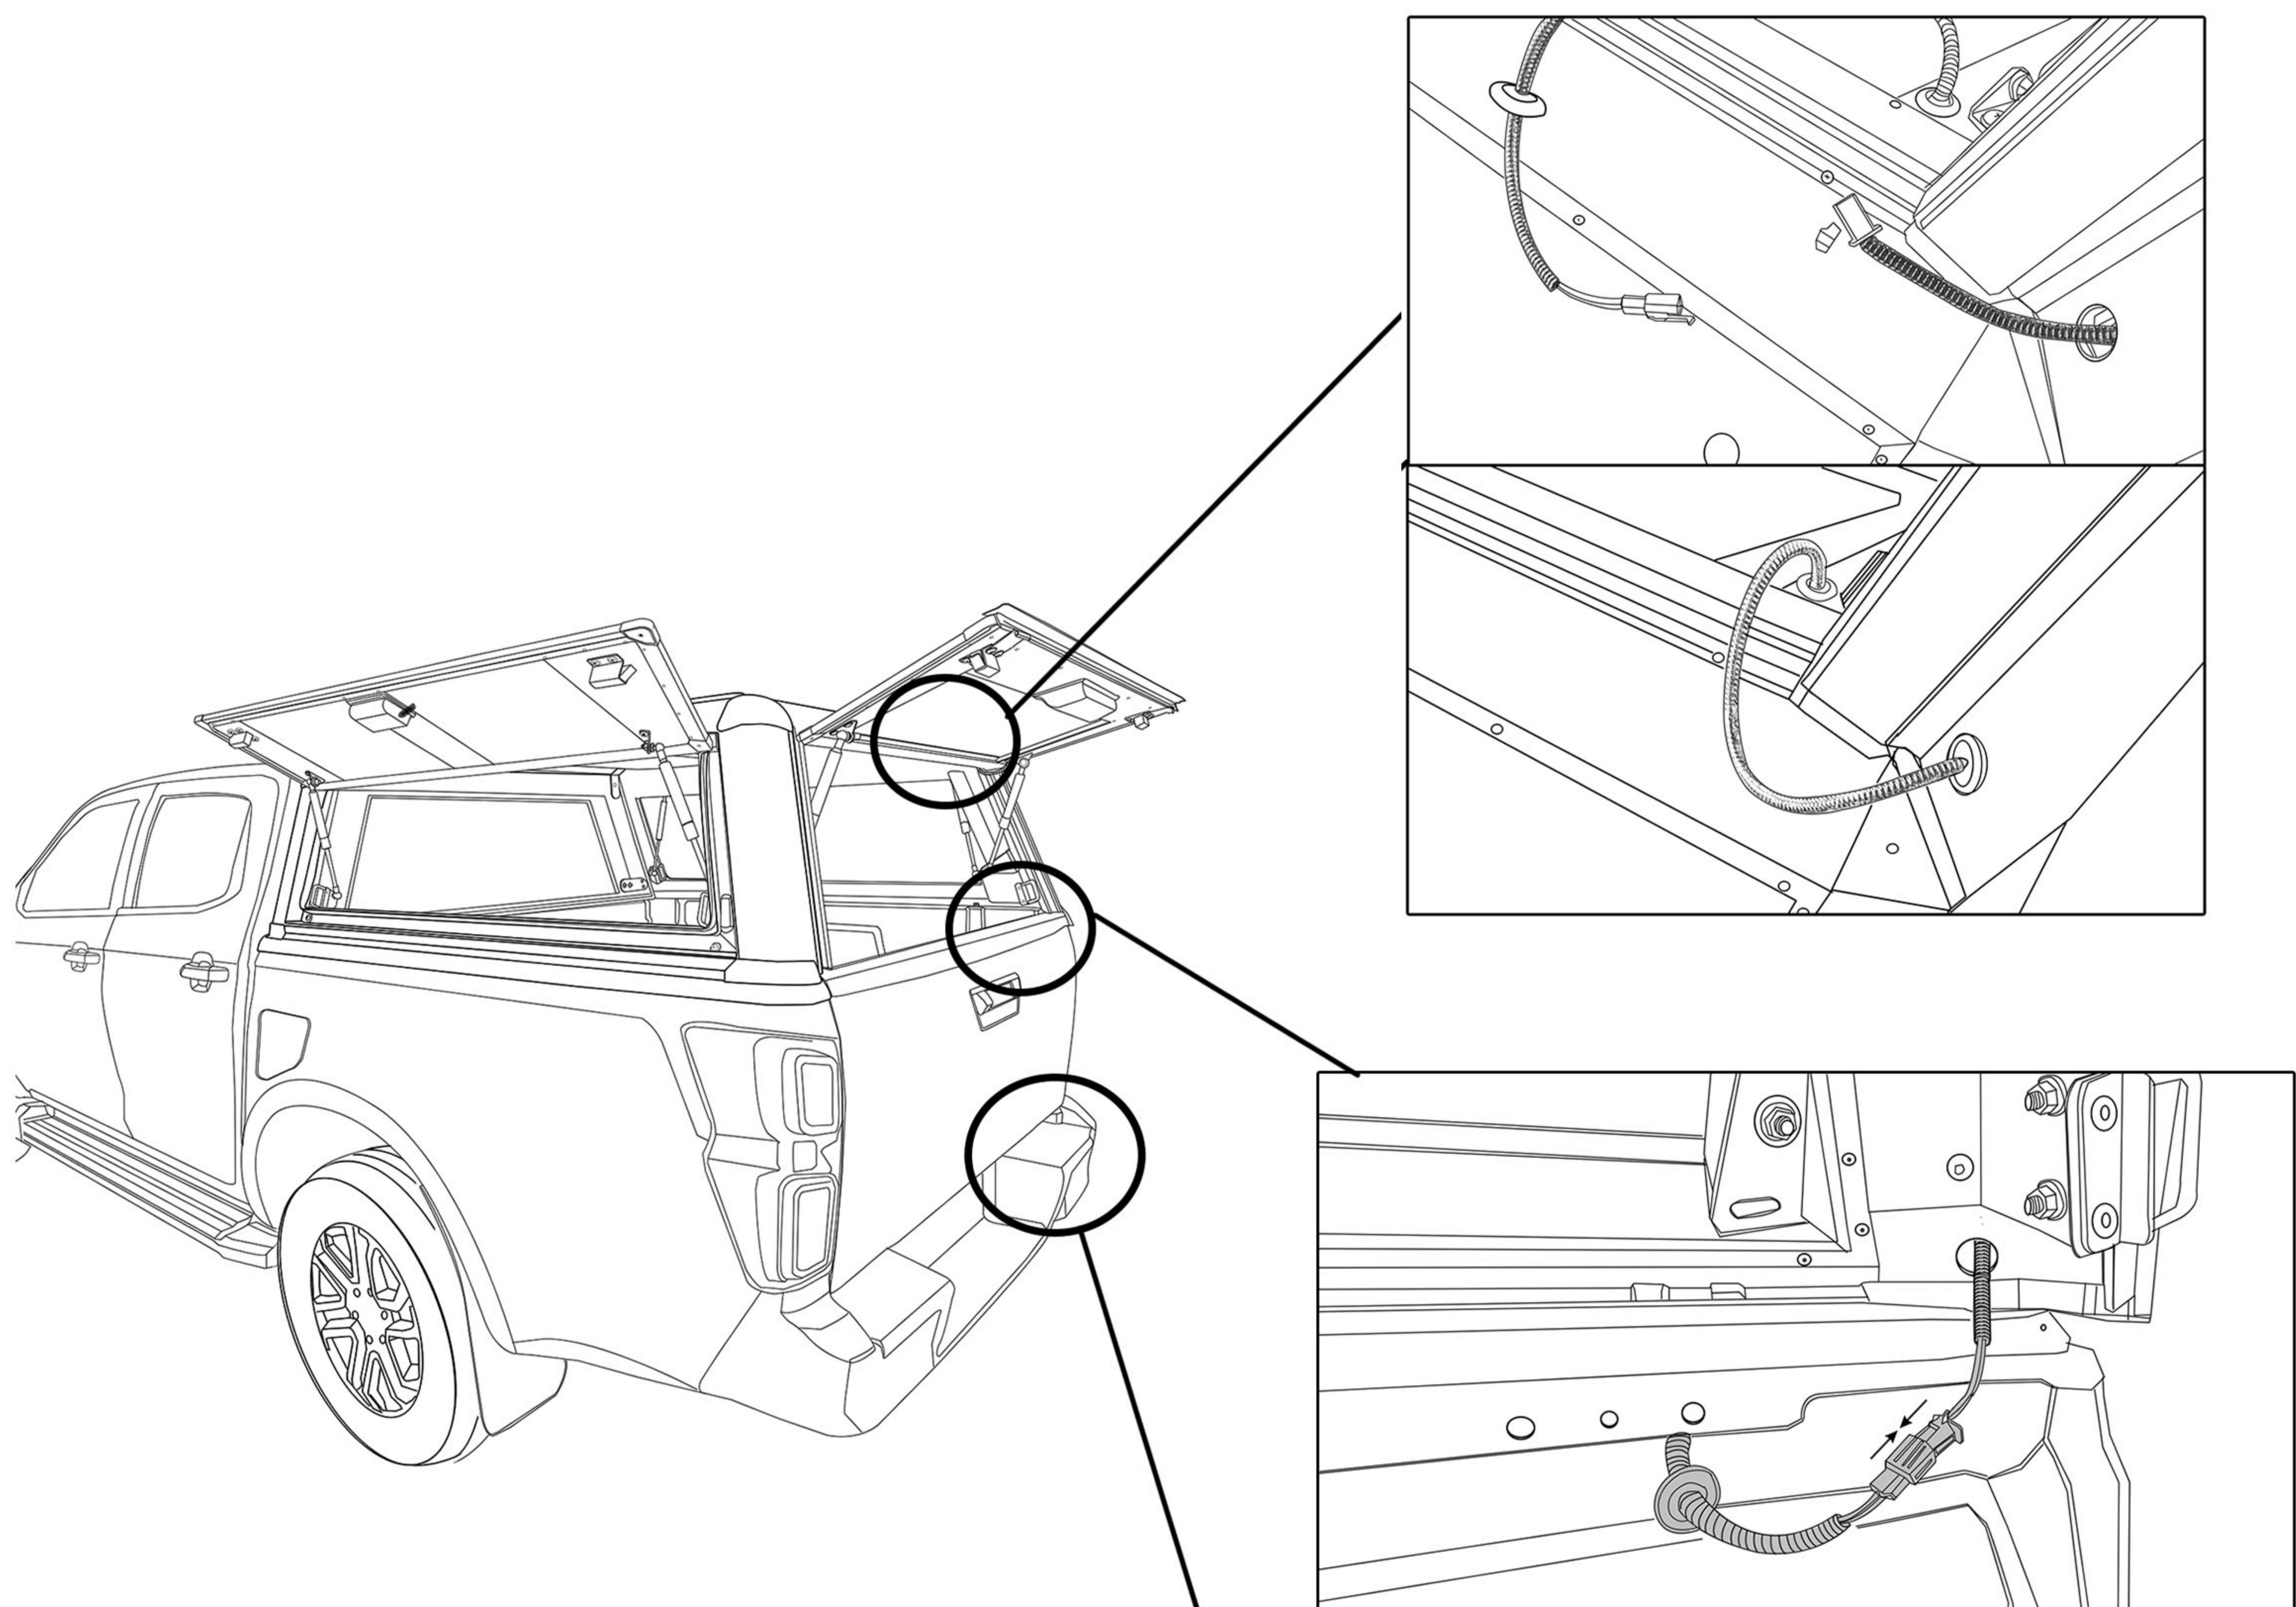

Plug&Play

