


**FITTING INSTRUCTIONS FIT415**


PLEASE READ INSTRUCTIONS COMPLETELY BEFORE INSTALLATION

**TOYOTA PRADO****P/N BG408**

1. Clean and open bonnet.
2. Unscrew the nuts on the underside of the grill that attach it to the bonnet, then remove the grill.
3. The clips go between the grill and the bonnet, on the top side of the grill as shown.
4. Fit grill back to bonnet.

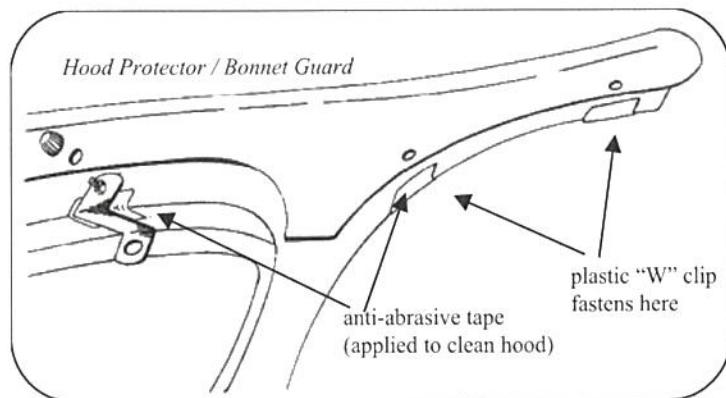

5. Fit the plastic "W" clips to the 4 holes at the outer edge of the Bonnet guard. Apply the supplied rectangular pieces of anti-abrasive tape on edge of bonnet where plastic fastening "W" clips secure the Bonnet Guard. Use the supplied alcohol prep-pads to cleanse the area first.

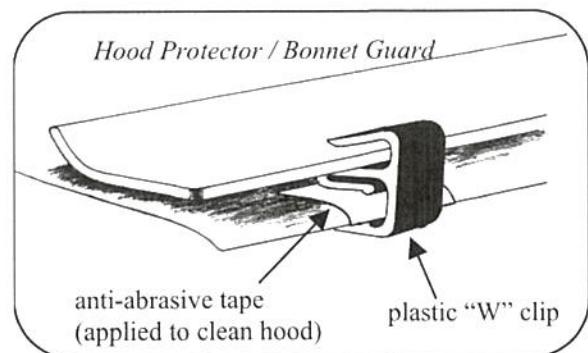

6. Snap plastic clip onto the bonnet as shown, over the anti-abrasive tape.
7. Once Bonnet Guard is centralized attach outer clips supplied as shown.

Wash acrylic with a mild soap and luke warm water solution, using a clean soft cloth or sponge.